



# Instruction Manual Book

Item code: BH04

# PIPER J-3 CUB

Glow and EP

95% PRE BUILT  
**ARF**  
ALMOST READY TO FLY



**95% ALMOST READY TO FLY**

## **SPECIFICATION:**

- Wingspan: 1,950 mm (76.77in).
- Length: 1,297 mm (51.06 in).
- Weight: 3.2 - 3.5 kg (7.04 - 7.7 lbs).
- Wing area: 53.8 dm<sup>2</sup>.
- Wing loading: 59.5 g/dm<sup>2</sup>.
- Wing type: USA - 35B.
- Servo mount: 42mm x 21mm.
- Gear type: Aluminium Hi-grade for main gear and spring wire for tail gear (included).

### **Parts listing required (not included):**

- Radio : 04 channels.
- Servo : 05 - 06 servos.
- Engine: NGH GT-9, 9cc gas motor
- Motor: Brushless outrunner 1000-1800W, 400-800KV.
- Propeller: Suit with your engine.

### **Recommended Motor and Battery set up (not included):**

- Motor: Admiral GP10 5030-400kV
- Lipo cell: 6 cells 4,000-5,000mAh.
- Receiver battery: 4.8- 6V/ 800 - 1200mAh NiMH.
- ESC: 65A

**MOTIONRC**

Made in Vietnam.

## TABLE OF CONTENTS

► Introduction.....	2	► Installing the stopper.....	20
► Warranty.....	3	► Installing the fuel tank.....	21
► Disclaimer.....	3	► Installing the throttle.....	23
► Safety precaution.....	3	► Installing the cowling.....	24
► Important bulding notes.....	3	► Installing the main gear.....	26
► Suggestion.....	3	► Installing the receiver and battery.....	27
► Flight warnings.....	3	► Installing the switch.....	27
► Covering tools.....	4	► Installing the electric motor ( ep version ).....	28
► Adhesives and required tools.....	4	► Installing the cockpit fuselage.....	30
► Academy of Model Aeronautics National Model Aircraft Safety Code.....	4	► Installing balsa plywood wing struts.....	32
► Parts listing (not included).....	6	► Installing the wing to the fuselage.....	35
► Tool & supplies needed.....	6	► Installing the propeller.....	36
► Symbols used throughout this instruction manual, comprise.....	6	► Balancing.....	37
► Preparations.....	8	► Control throws.....	37
► Installing the ailerons.....	8	► Pre-flight check.....	37
► Installing the ailerons servos.....	8	► For your radio installation basic connection for airplane and adjustment of servos.....	38
► Installing the control horns and linkages.....	10	► Main gear dimensional detail.....	38
► Installing the fuselage servos.....	12	► Tail gear dimensional detail.....	38
► Installing horizontal stabilizer.....	13	► Decoration.....	39
► Installing the control horns and linkages.....	14	► Exploded view.....	40
► Installing the vertical stabilizer.....	16	► I/C Flying warning.....	41
► Installing the control horns and linkages.....	16	► I/C Flying guide.....	42
► Installing the tail gear.....	17		
► Installing the engine .....	19		

## INTRODUCTION

Thank you for purchasing Black Horse Model products. With over 18 years experience in production and fly testing, Black Horse Model is committed to bring the best quality products and good service to customers. Along with a team of creative engineers and skilled workers, we will always accompany with customers by our great experiences, fully enthusiasm... which will burn our passion!! Joining with us to explore and conquer challenges in the sky ...

Your satisfaction is our success. Please read through this manual before starting construction.

**Academy of Model Aeronautics:** If you are not already a member of the AMA, please join! The AMA is the governing body of model aviation and membership provides liability insurance coverage, protects modelers' rights and interests and is required to fly at most R/C sites.

**Academy of ModelAeronautics**  
5151 East Memorial Drive Muncie IN 47302-9252

Tele. (800) 435-9262  
Fax. (765) 741-0057

Or via the Internet at: <http://www.modelaircraft.org>



## WARRANTY

Black Horse Model guarantees the component parts in this kit to be free from defects in both material and workmanship at the date of purchase by the purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product.

This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Black Horse Model.

Further, Black Horse Model reserves the right to change or modify this warranty without notice.

## DISCLAIMER

Read this disclaimer carefully before using this product. Please strictly follow the instruction manual to assemble and use this.

In that Black Horse Model has no control over the final assembly or material used for final assembly, Black Horse Model is not responsible for loss of use, or other incidental or consequential damages.

Furthermore, Black Horse Model cannot be held liable for personal injury or property damage caused by the use or misuse of Black Horse Model products. By the act of using the user-assembled products, the user accepts all resulting liability.

## SAFETY PRECAUTION

This is not a toy and pilots must be over the age of 14. Be sure that no other flyers are using your radio frequency.

Do not smoke near fuel

Store fuel in a cool, dry place, away from children and pets.

Wear safety glasses.

The glow plug clip must be securely attached to the glow plug.

Do not flip the propeller with your fingers.

Keep loose clothing and wires away from the propeller.

Do not start the engine if people are near. Do not stand in line with the side of the propeller.

Make engine adjustments from behind the propeller only.

Do not reach around the spinning propeller.

Moisture causes damage to electronics.

Avoid water exposure to all equipment not specifically designed and protected for this purpose.

## IMPORTANT BUILDING NOTES

Please trial fit all the parts. Make sure you have the correct parts and that they fit and are aligned properly before gluing! This will assure proper assembly. This kit is hand made from natural materials, every plane is unique and minor adjustments may have to be made. However, you should find the fit superior and assembly simple.

The painted and plastic parts used in this kit are fuel proof. However, they are not tolerant of many harsh chemicals including the following: paint thinner, C/A glue accelerator, C/A glue debonder and acetone. Do not let these chemicals come in contact with the colors on the covering and the plastic parts.

Some parts included in this kit such as the cowl or wheel pants are made of fiberglass, the fibers of which may cause eye, skin and respiratory tract irritation. Never blow into a part to remove fiberglass dust, as the dust will blow back into your eyes. Always wear safety goggles, a particle mask and rubber gloves when grinding, drilling and sanding fiberglass parts. Vacuum the parts and the work area thoroughly after working with fiberglass parts.

## SUGGESTION

To avoid scratching your new airplane, do not unwrap the pieces until they are needed for assembly. Cover your workbench with an old towel or brown paper, both to protect the aircraft and to protect the table. Keep a couple of jars or bowls handy to hold the small parts after you open the bag.

## FLIGHT WARNINGS

ALWAYS operate in open areas, away from factories, hospitals, schools, buildings and houses etc.

NEVER fly your aircraft close to people or built up areas.

NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.

NEVER fly in wet conditions or on windy or stormy days.

ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.

THE PROPELLER IS DANGEROUS Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at ALL times.

NEVER use damaged or deformed propellers or spinners.

KEEP all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.

DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

## FLIGHT WARNINGS

When ready to fly, first extend the transmitter aerial.  
 Switch on the transmitter.  
 Switch on the receiver.  
 Check that the wings are correctly fitted to the fuselage.  
 Operate the control sticks on the transmitter and check that the control surfaces move freely and in the CORRECT directions.  
 Check that the transmitter batteries have adequate power.  
 ALWAYS take off into the wind.  
 If the model does not respond correctly to the controls, land it as soon as possible and correct the fault.  
 ALWAYS land the model INTO the wind, this ensures that the model lands at the slowest possible speed.  
 Switch off the receiver.  
 Switch off the transmitter.  
 Empty the fuel tank after flying, fuel left in the tank can cause corrosion and lead to engine problems.

## COVERING TOOLS

Top Flite® MonoKote® Sealing Iron  
 Top Flite Hot Sock Iron Cover  
 Top Flite MonoKote Trim Seal Iron  
 Top Flite MonoKote Heat Gun

## ADHESIVES AND REQUIRED TOOLS

Thin CA  
 30-minute epoxy  
 6-minute epoxy  
 Threadlocker thread locking cement  
 Mixing sticks  
 Mixing cups (GPMR8056)  
 Epoxy brushes  
 Denatured alcohol  
 Canopy Glue  
 Felt-tipped pen or pencil  
 Flat screwdriver  
 Adjustable wrench  
 Drill  
 Hobby knife  
 Masking tape  
 Phillips screwdriver (large)  
 Phillips screwdriver (small)  
 Ruler  
 Sandpaper  
 Soldering iron  
 Solder  
 Hex wrench  
 Drill bit: 1/16-inch (1.5mm), 5/64-inch (2mm), 1/8-inch (3.2mm), 3/16-inch (4.8mm), 11/64-inch (4.5mm), 13/64-inch (5.2mm), 1/4-inch (6.4mm)

## Academy of Model Aeronautics National Model Aircraft Safety Code

*Effective January 1, 2014*

A. GENERAL: A model aircraft is a non-human-carrying aircraft capable of sustained flight in the atmosphere. It may not exceed limitations of this code and is intended exclusively for sport, recreation, education and/or competition. All model flights must be conducted in accordance with this safety code and any additional rules specific to the flying site.

1. Model aircraft will not be flown:

- (a) In a careless or reckless manner.
- (b) At a location where model aircraft activities are prohibited.


2. Model aircraft pilots will:

- (a) Yield the right of way to all human-carrying aircraft.
- (b) See and avoid all aircraft and a spotter must be used when appropriate. (AMA Document #540-D.)
- (c) Not fly higher than approximately 400 feet above ground level within three (3) miles of an airport without notifying the airport operator.
- (d) Not interfere with operations and traffic patterns at any airport, heliport or seaplane base except where there is a mixed use agreement.
- (e) Not exceed a takeoff weight, including fuel, of 55 pounds unless in compliance with the AMA Large Model Airplane program. (AMA Document 520-A.)
- (f) Ensure the aircraft is identified with the RYAN and address or AMA number of the owner on the inside or affixed to the outside of the model aircraft. (This does not apply to model aircraft flown indoors.)
- (g) Not operate aircraft with metal-blade propellers or with gaseous boosts except for helicopters operated under the provisions of AMA Document #555.
- (h) Not operate model aircraft while under the influence of alcohol or while using any drug that could adversely affect the pilot's ability to safely control the model.
- (i) Not operate model aircraft carrying pyrotechnic devices that explode or burn, or any device which propels a projectile or drops any object that creates a hazard to persons or property.


Exceptions:

- Free Flight fuses or devices that burn producing smoke and are securely attached to the model aircraft during flight.
- Rocket motors (using solid propellant) up to a G-series size may be used provided they remain attached to the model during flight. Model rockets may be flown in accordance with the National Model Rocketry Safety Code but may not be launched from model aircraft.

- Officially designated AMA Air Show Teams (AST) are authorized to use devices and practices as defined within the Team AMA Program Document. (AMA Document #718.)
- (j) Not operate a turbine-powered aircraft, unless in compliance with the AMA turbine regulations. (AMA Document #510-A.)
- 3. Model aircraft will not be flown in AMA sanctioned events, air shows or model demonstrations unless:
  - (a) The aircraft, control system and pilot skills have successfully demonstrated all maneuvers intended or anticipated prior to the specific event.
  - (b) An inexperienced pilot is assisted by an experienced pilot.
- 4. When and where required by rule, helmets must be properly worn and fastened. They must be OSHA, DOT, ANSI, SNELL or NOCSAE approved or comply with comparable standards.
- B. RADIO CONTROL (RC)**
  - 1. All pilots shall avoid flying directly over unprotected people, vessels, vehicles or structures and shall avoid endangerment of life and property of others.
  - 2. A successful radio equipment ground-range check in accordance with manufacturer's recommendations will be completed before the first flight of a new or repaired model aircraft.
  - 3. At all flying sites a safety line(s) must be established in front of which all flying takes place. (AMA Document #706.)
    - (a) Only personnel associated with flying the model aircraft are allowed at or in front of the safety line.
    - (b) At air shows or demonstrations, a straight safety line must be established.
    - (c) An area away from the safety line must be maintained for spectators.
    - (d) Intentional flying behind the safety line is prohibited.
  - 4. RC model aircraft must use the radio-control frequencies currently allowed by the Federal Communications Commission (FCC). Only individuals properly licensed by the FCC are authorized to operate equipment on Amateur Band frequencies.
  - 5. RC model aircraft will not knowingly operate within three (3) miles of any pre-existing flying site without a frequency-management agreement. (AMA Documents #922 and #923.)
  - 6. With the exception of events flown under official AMA Competition Regulations, excluding takeoff and landing, no powered model may be flown outdoors closer than 25 feet to any individual, except for the pilot and the pilot's helper(s) located at the flightline.
  - 7. Under no circumstances may a pilot or other person touch an outdoor model aircraft in flight while it is still under power, except to divert it from striking an individual.
  - 8. RC night flying requires a lighting system providing the pilot with a clear view of the model's attitude and orientation at all times. Hand-held illumination systems are inadequate for night flying operations.
  - 9. The pilot of an RC model aircraft shall:
    - (a) Maintain control during the entire flight, maintaining visual contact without enhancement other than by corrective lenses prescribed for the pilot.
    - (b) Fly using the assistance of a camera or First-Person View (FPV) only in accordance with the procedures outlined in AMA Document #550.
    - (c) Fly using the assistance of autopilot or stabilization system only in accordance with the procedures outlined in AMA Document #560.
- C. FREE FLIGHT**
  - 1. Must be at least 100 feet downwind of spectators and automobile parking when the model aircraft is launched.
  - 2. Launch area must be clear of all individuals except mechanics, officials, and other fliers.
  - 3. An effective device will be used to extinguish any fuse on the model aircraft after the fuse has completed its function.
- D. CONTROL LINE**
  - 1. The complete control system (including the safety thong where applicable) must have an inspection and pull test prior to flying.
  - 2. The pull test will be in accordance with the current Competition Regulations for the applicable model aircraft category.
  - 3. Model aircraft not fitting a specific category shall use those pull-test requirements as indicated for Control Line Precision Aerobatics.
  - 4. The flying area must be clear of all utility wires or poles and a model aircraft will not be flown closer than 50 feet to any above-ground electric utility lines.
  - 5. The flying area must be clear of all nonessential participants and spectators before the engine is started.

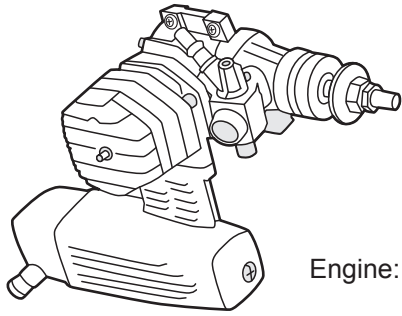**PARTS LISTING (NOT INCLUDED)**


Engine: 9cc.....1 pcs.

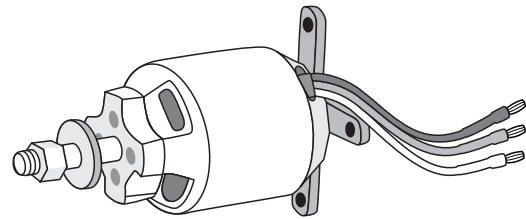

Motor: Admiral GP10 ..... 1 pcs.



ESC: 65A ..... 1 pcs.

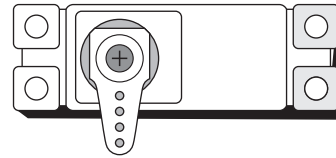Servos size: (39.9 x 20.1 x 38.1)mm.  
Torque servos: 3.17kg/cm - 4.10kg/cm ..... 5 pcs

Servo extension leads.



.... 2 pcs.



190mm ..... 4 pcs.


Suit with your engine.




LiPo. 6 cells 4,000-5,000mAh. .... 1 Packs.

**TOOLS AND SUPPLIES NEEDED**


Medium C/A glue

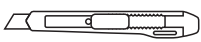Threadlocker  
(screw cement).

Modeling knife.

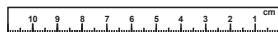

Straight edge ruler.

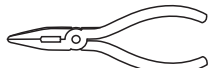

2 bender plier



Wire cutters.

30 minute epoxy.  
5 minute epoxy.

Screw driver



Hex Wrench.

Hand or  
electric drill.**Some more tools.**

Assorted drill bits.  
Masking tape.  
Paper towels.  
Rubbing alcohol  
90° square or builder's triangle.

**Symbols used throughout this instruction manual, comprise:**

Cut off excess.

Cut off shaded portion  
carefully.

Pay close attention here.



Take particular care here.


**Warning!**Set all screws securely . If they come off during  
flight you will lose control of your aircraft!Apply threadlocker  
(screw cement).Apply instant glue  
(C.A glue, super glue).

Apply epoxy glue.



Assemble left and right  
sides the same wayMust be purchased  
separately!Ensure smooth, non-binding  
movement when assembling.Drill holes using the stated  
(in this case 1.5mm ø).The number of times  
the same way Assembly  
(in this case twice).

Use a pencil to mark

- ① : Fuselage.
- ② : Wing panel ( 2a, 2b ).
- ③ : Horizontal stabilizer.
- ④ : Vertical stabilizer.
- ⑤ : Aluminium wing dihedral brace.
- ⑥ : Decal sheet.
- ⑦ : Cockpit fuselage ( 7a: Canopy, 7b: Pilot ).
- ⑧ : Fuel tank ( 8a: Clunk, 8b: Stopper (three line)).
- ⑨ : Plastic parts for cowling ( 9a, 9b ).
- ⑩ : Cowling.

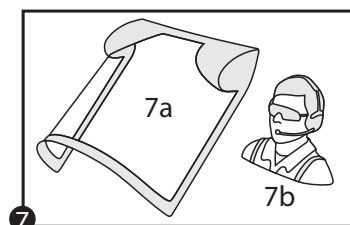

- ⑪ : Wheels.
- ⑫ : Main gear ( 12a, 12b ).
- ⑬ : Tail gear set.
- ⑭ : Wood - motor mount.
- ⑮ : Plastic - engine mount.
- ⑯ : Wing struts set.

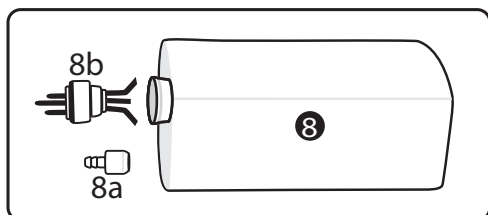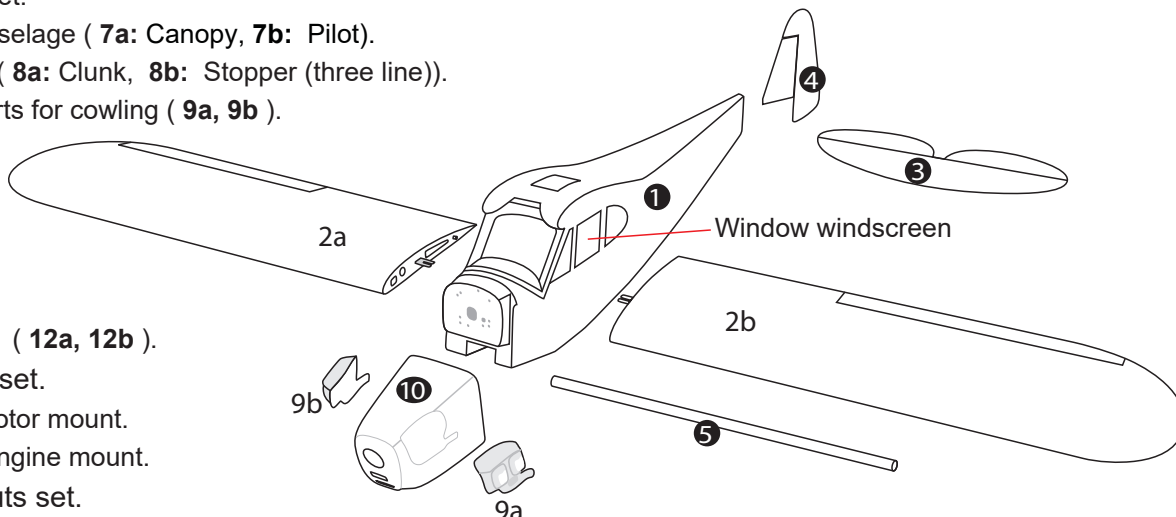

Nylon Clevis	---	5
1.7x8mm Cap Screw	---	5
100mm Push rod	---	3
900mm Push rod	---	3
Flaslink	---	5
2x10mm Tp Screw	---	8
3x12mm Tp Screw	---	4
Horn	---	5
Duo rod connection lock	---	1

	---	2
3mm Collar	---	2
3x12mm Tp Screw	---	2

3mm Hex Nut	---	4
3x25mm Cap Screw	---	4
4mm Flat Washer	---	4
4mm Spring Washer	---	4
500mm Pushrod wire	---	1
4x25mm Cap Screw	---	4
Connector	---	1



3x12mm Cap Screw	---	8
3mm Spring Washer	---	4
Steel Strut Attachment Pin	---	2
Hair Pin	---	2
Ball link	---	4
3x15mm Tp Screw	---	4
Aluminium Fuselage Strut Attachment	---	2
Machined Strut Attachment	---	4
3mm Hex Nut	---	8
3x6mm Button Head Cap Screw	---	14
Aluminium Strut Attachment	---	2
	---	2
	---	2
	---	4
Aluminium wing strut set.	---	4

4x60mm Socket Head Cap Screw	---	4
3x15mm Cap Screw	---	4
4mm Flat Washer	---	4
4mm Spring Washer	---	4
4mm Flat Washer	---	4
4mm Spring Washer	---	4
3mm Spring Washer	---	4
M3 Blind Nut	---	4
10x40mm Plastic	---	4
	---	1


4x15mm Cap Screw	---	6
4mm Flat Washer	---	6
4mm Spring Washer	---	6
5x45mm Socket Head Cap Screw	---	2
5mm Flat Washer	---	4
5mm Collar	---	2
5mm Hex Nut	---	4

**PREPARATIONS:**


Use a covering iron with a covering sock on high heat to tighten the covering if necessary. Apply pressure over sheeted areas to thoroughly bond the covering to the wood

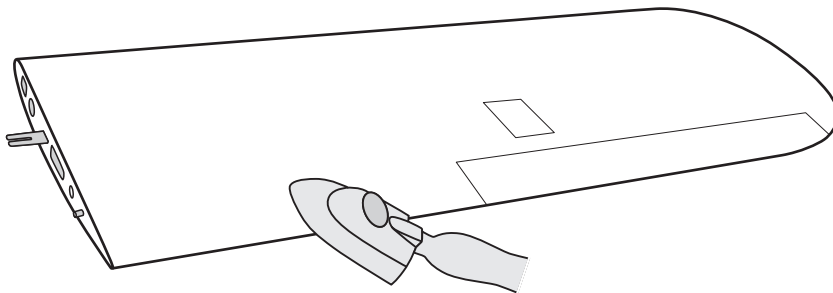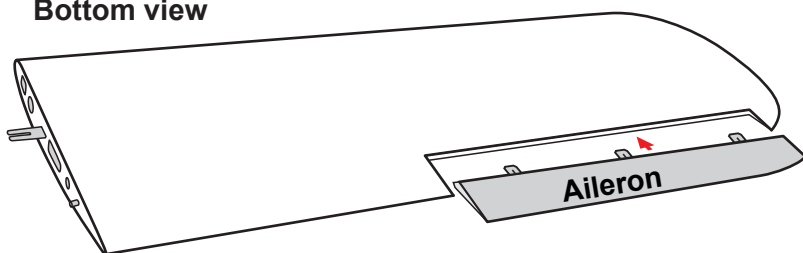**INSTALLING THE AILERONS****Bottom view**

1) Test fit the ailerons to the wing with the hinges. If the hinges don't remain centered, stick a pin through the middle of the hinge to hold it in position.

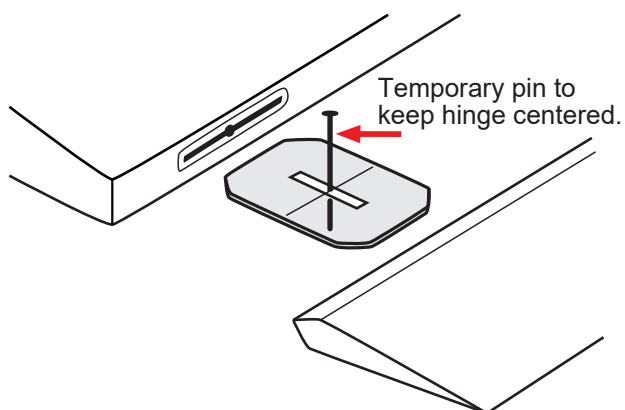


2) Apply drops of thin CA to the top and bottom of each hinge. Do not use CA accelerator. After the CA has fully hardened, test the hinges by pulling on the aileron

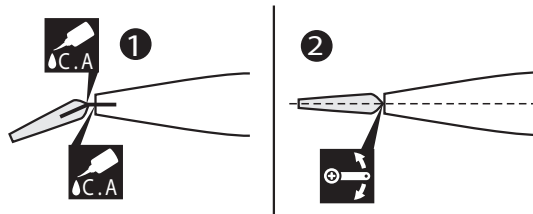**Warning!**

► Make certain the hinges are adequately secured with glue. if they come loose in flight accidents may result.

- 1) Secure nylon hinges with instant glue, being careful not to glue the wing and aileron together.
- 2) Align the center line of main wing with aileron.

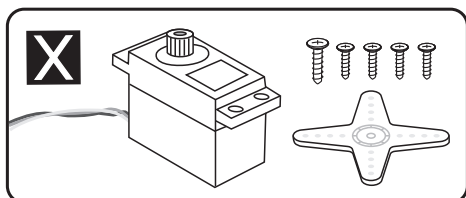**INSTALLING THE AILERONS SERVOS**

1. Install the rubber grommets and brass eyelets onto the aileron servos.

2. Using a modeling knife, remove the covering from over the pre-cut servo arm exit hole on the aileron servo tray / hatch. This hole will allow the



servo arm to pass through when installing the aileron pushrods.

3. Place the servo into the servo tray. Center the servo within the tray and drill 1.5mm pilot holes through the block of wood for each of the four mounting screws provided with the servo.


4. Using the thread as a guide and using masking tape, tape the servo lead to the end of the thread: carefully pull the thread out. When you have pulled the servo lead out, remove the masking tape and the servo lead from the thread.

5. Place the servo into the servo tray/ hatch into the servo box on the bottom of the wing and drill 1.5mm pilot holes through the tray and servo box for each of the four mounting screws. Secure the servo tray in place using the mounting screws provided


6. Repeat step # 2 - # 5 to install the second aileron servo in the opposite wing half.

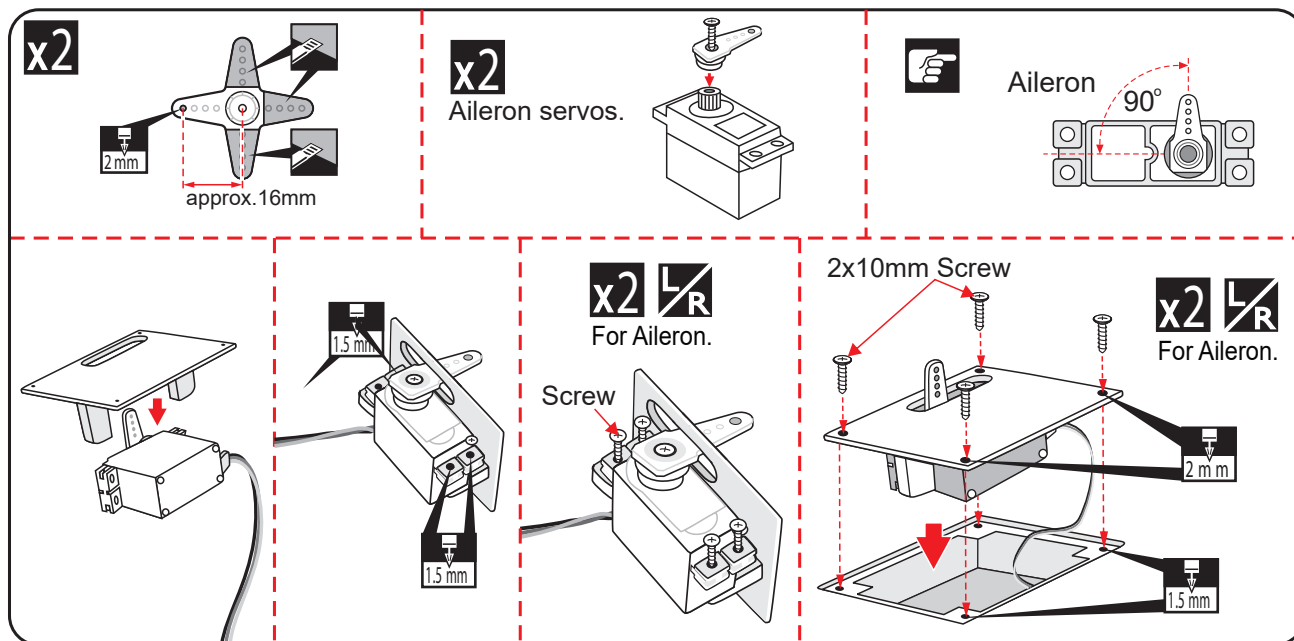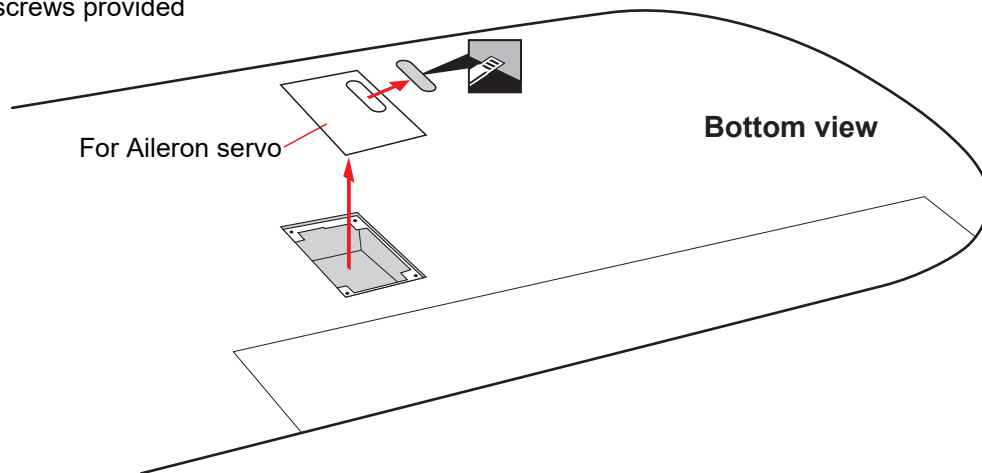

2x10mm Tp Screw

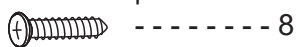

Warning!

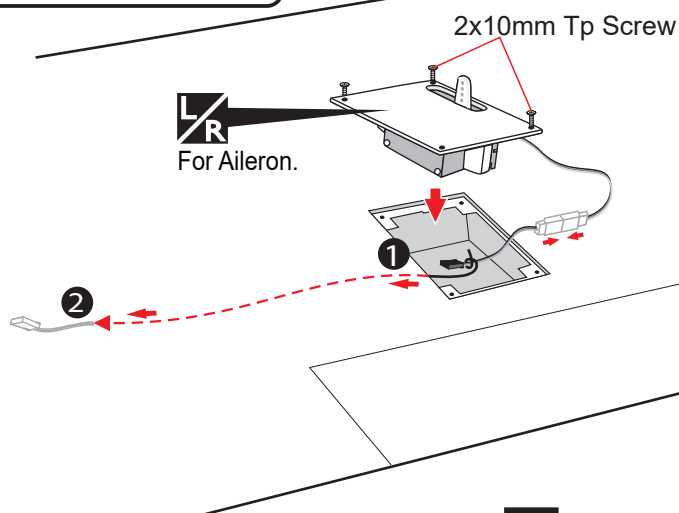

1 Tie the string.

2 Pull out servo cord with string.



Pay close attention here.



Drill holes using the stated. (in this case 1.5mm Ø).



Drill holes using the stated. (in this case 2mm Ø).




Assemble left and right sides the same way.





The number of times the same way Assembly (in this case twice).

Bottom view

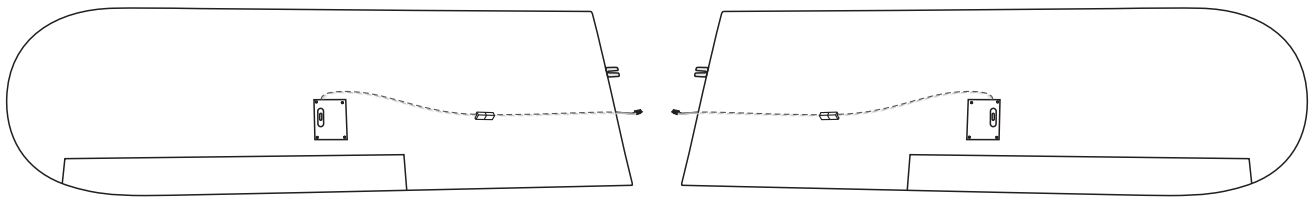

## INSTALLING THE CONTROL HORNS AND LINKAGES

1.7x8mm Cap Screw	---	2
Nylon Clevis	---	2
100mm Push rod	--	2
Flaslink	-----	2
Horn	-----	2

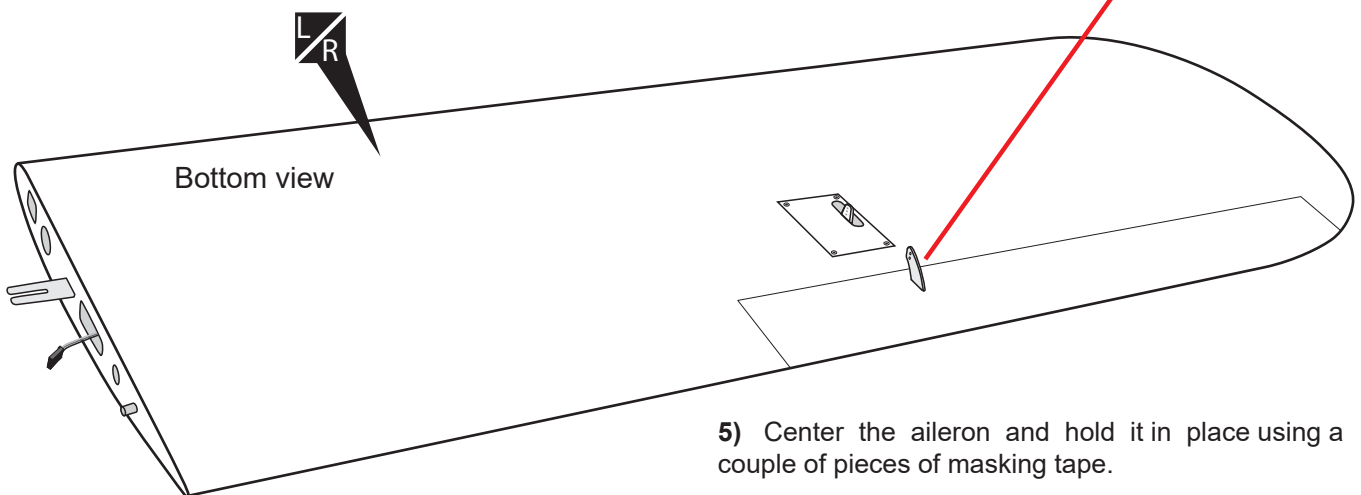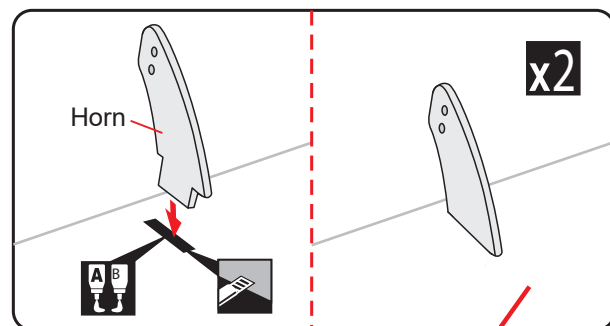

- 1) Working with the aileron linkage for now, thread one nylon clevis at least 14 turns onto one of the 2mm x 180mm threaded wires.
- 2) Attach the clevis to the outer hole in the control horn. Install a silicone tube on the clevis.
- 3) Locate one nylon servo arm, and using wire cutters, remove all but one of the arms. Using a 2mm drill bit, enlarge the third hole out from the center of the arm to accommodate the aileron pushrod wire.
- 4) Plug the aileron servo into the receiver and center the servo. Install the servo arm onto the servo. The servo arm should be perpendicular to the servo and point toward the middle of the wing.

5) Center the aileron and hold it in place using a couple of pieces of masking tape.

6) With the aileron and aileron servo centered, carefully place a mark on the aileron pushrod wire where it crosses the hole in the servo arm.

7) Using pliers, carefully make a 90 degree bend down at the mark made. Cut off the excess wire, leaving about 6mm beyond the bend

8) Insert the 90 degree bend down through the hole in the servo arm. Install one nylon snap keeper over the wire to secure it to the arm. Install the servo arm retaining screw and remove the masking tape from the aileron

9) Repeat step # 4 - # 8 to install the second aileron linkage. After both linkages are completed, connect both of the aileron servo leads using a Y-harness you have purchased separately.



Cut off shaded portion carefully.





Apply epoxy glue.





Assemble left and right sides the same way.




The number of times the same way Assembly (in this case twice).

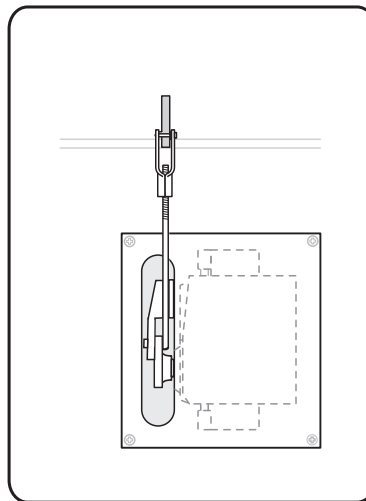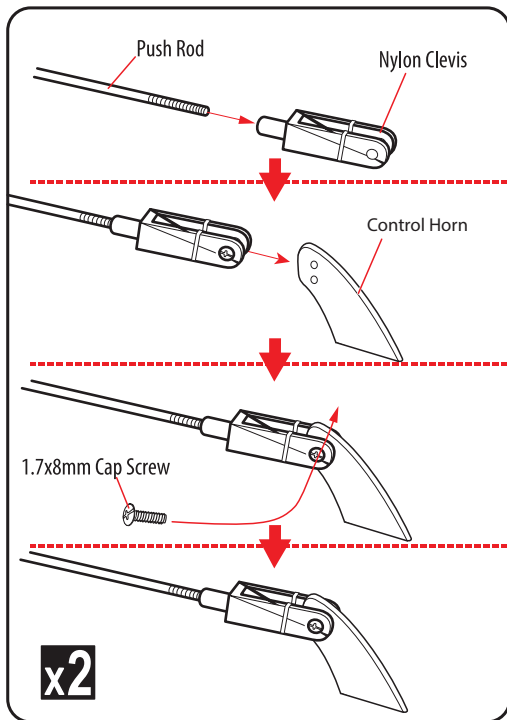



- 1 Mark the spot to attach
- 2 Bend 90°

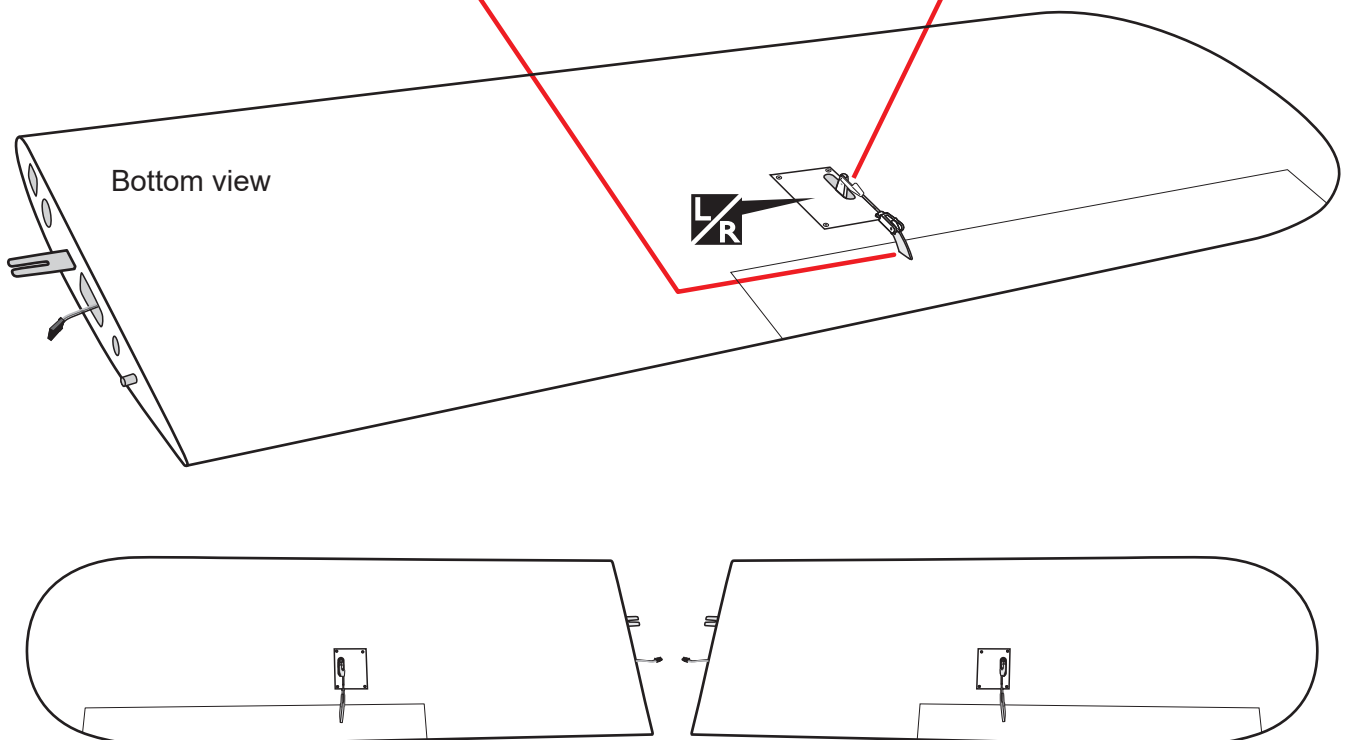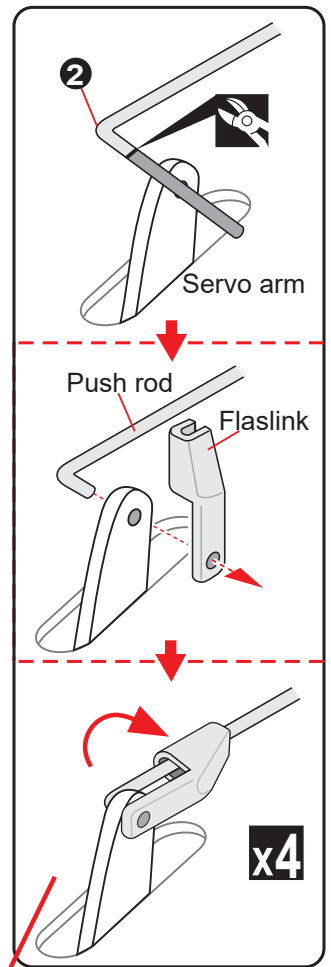

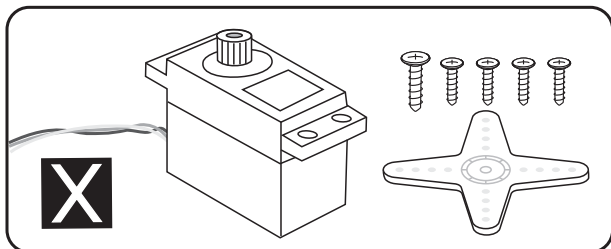
**INSTALLING THE FUSELAGE SERVOS**

1) Install the rubber grommets and brass collets into the elevator, rudder and throttle servos. Test fit the servos into the servo tray. Trim the tray if necessary to fit your servos.



2) Mount the servo to the tray using the mounting screws provided with your radio system.

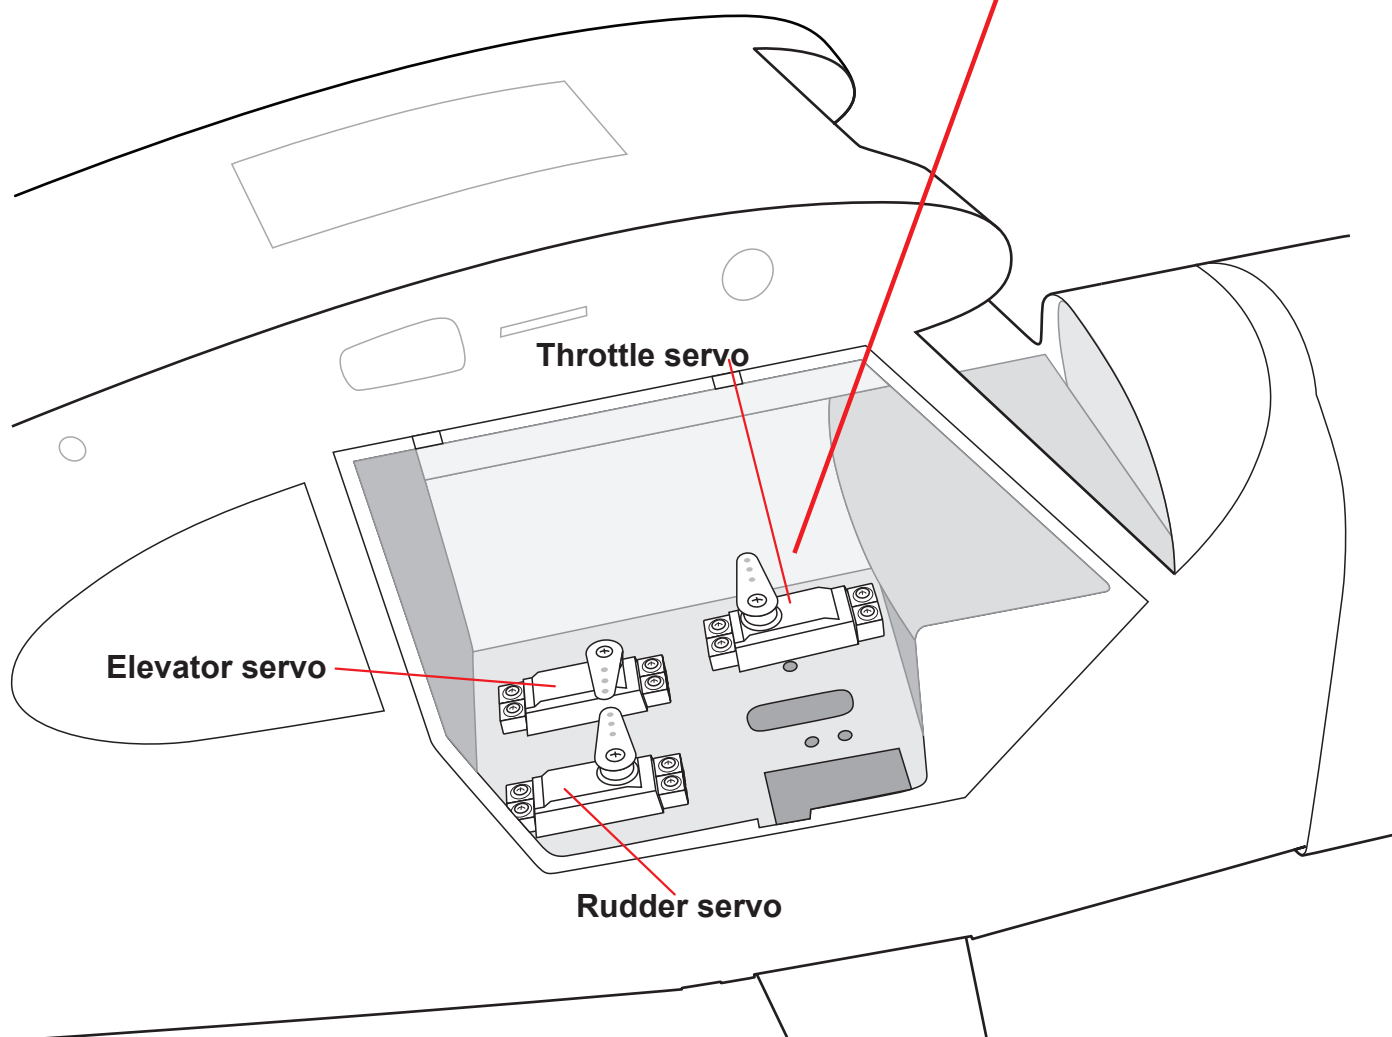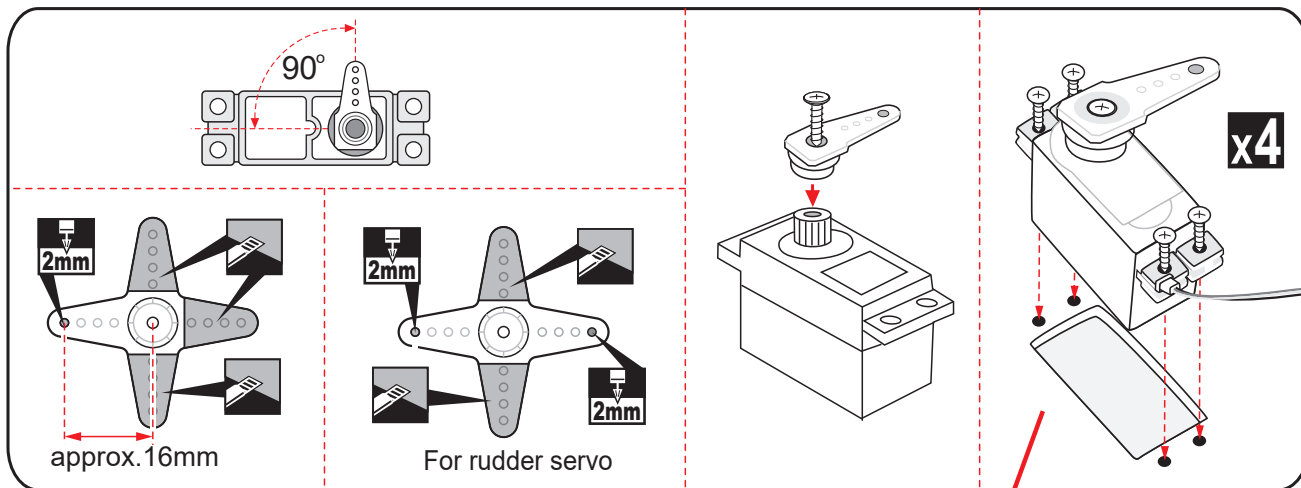


# INSTALLING HORIZONTAL STABILIZER

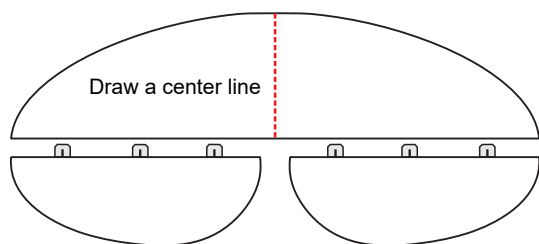


1) Using a modeling knife, carefully remove the film covering from the tail slots at the rear of the fuselage. Make sure that you do not remove any wood from the slots as this will affect the alignment of the tail.

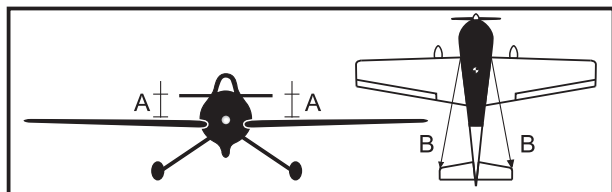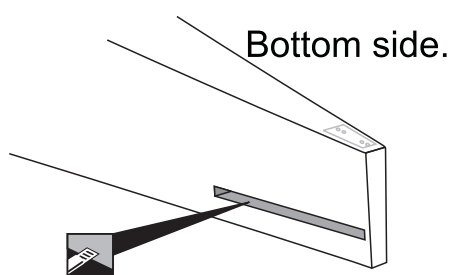

Check to make sure the wing and stabilizer are parallel. If they are not, lightly sand the opening in the fuselage for the stabilizer until the stabilizer is parallel to the wing, but don't glue anything yet.

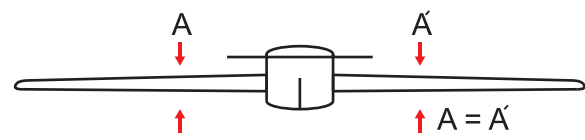

4) With the horizontal stabilizer correctly aligned. Apply a thin CA layer to the top and bottom of the stabilizer in the fuselage

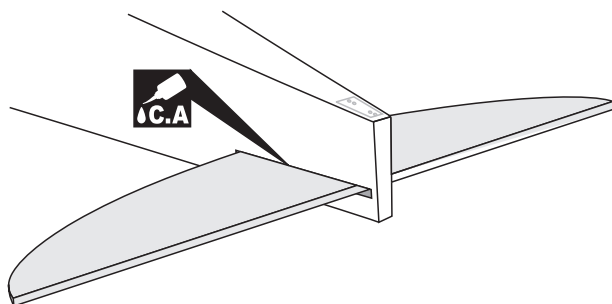


Cut off shaded portion carefully.





Apply instant glue (C.A glue, super glue).

2) Then put the horizontal into the fuselage. Check the fit of the horizontal stabilizer in its slot.

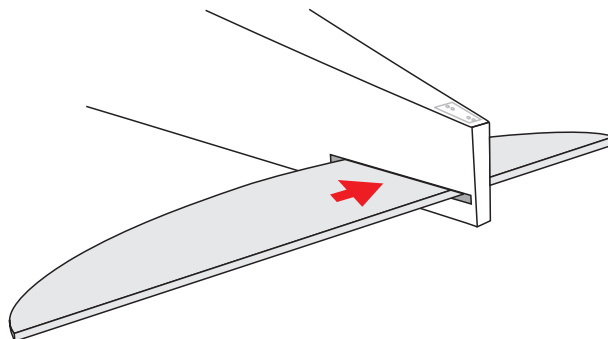





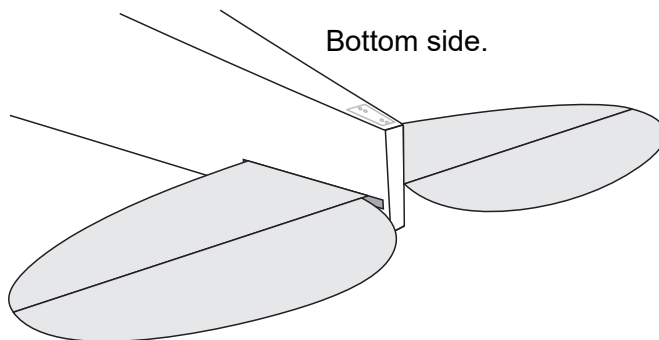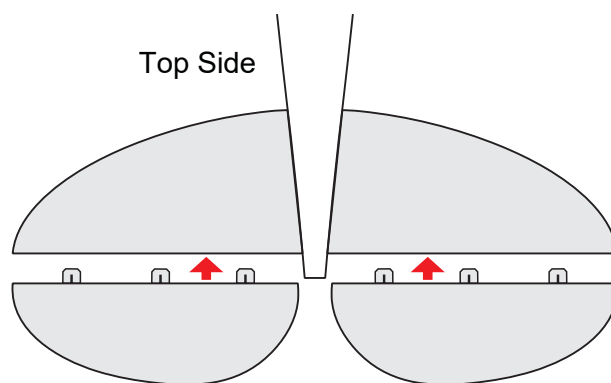


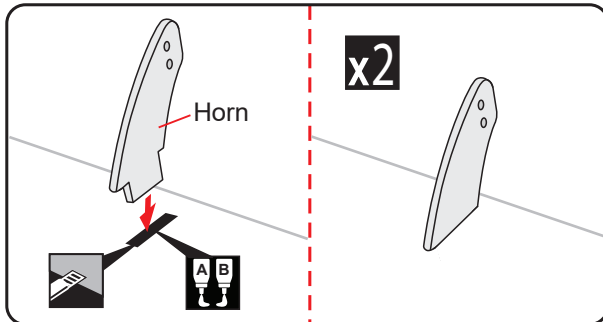
3) Check the fit of the horizontal stabilizer in its slot. Make sure the horizontal stabilizer is square and centered to the fuselage by taking measurements, but don't glue anything yet.

5) Hinges for Elevator are glued the same way as the aileron before (see page 8).





## INSTALLING THE CONTROL HORNS AND LINKAGES

Nylon Clevis 	---	2	900mm Push rod 	--	2	Flaslink 	-----	1	Horn 	-----	2
1.7x8mm Cap Screw 	---	2	100mm Push rod 	--	1	Duo rod connection lock 	-----	1			



Control horn and linkages for elevator are installed the same way as the ailerons before (**see page 10**).

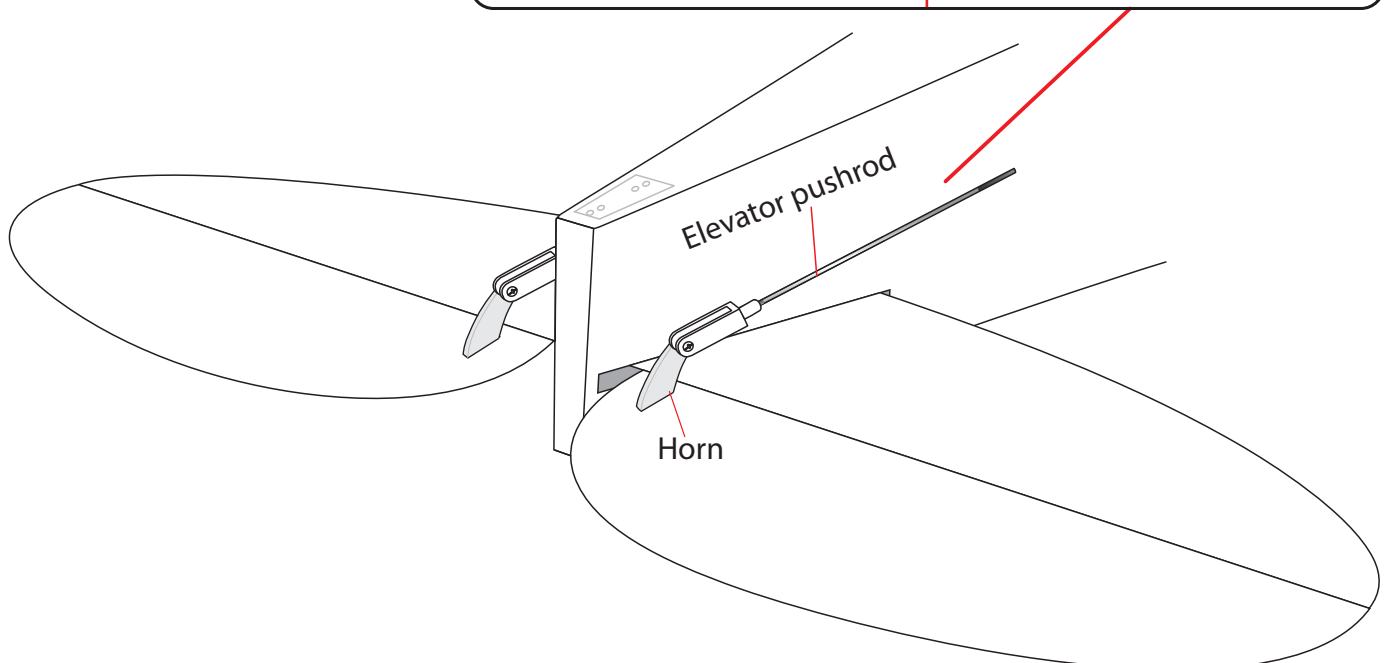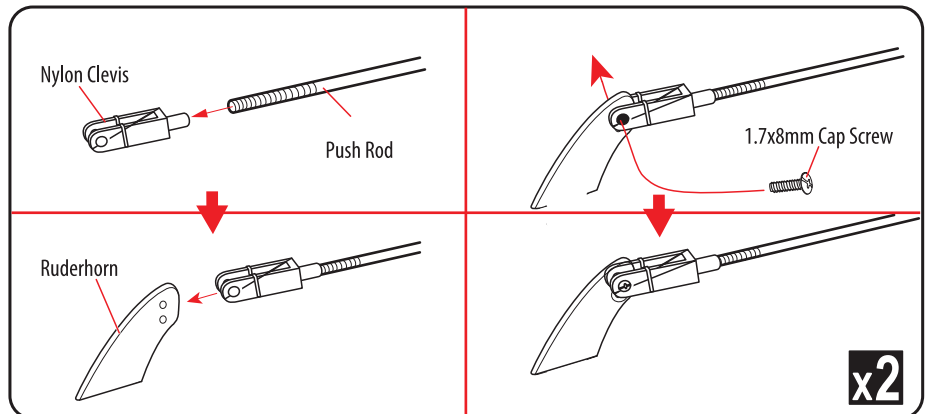



Cut off shaded portion carefully.



Apply epoxy glue.

x2




The number of times  
the same way Assembly  
(in this case twice).

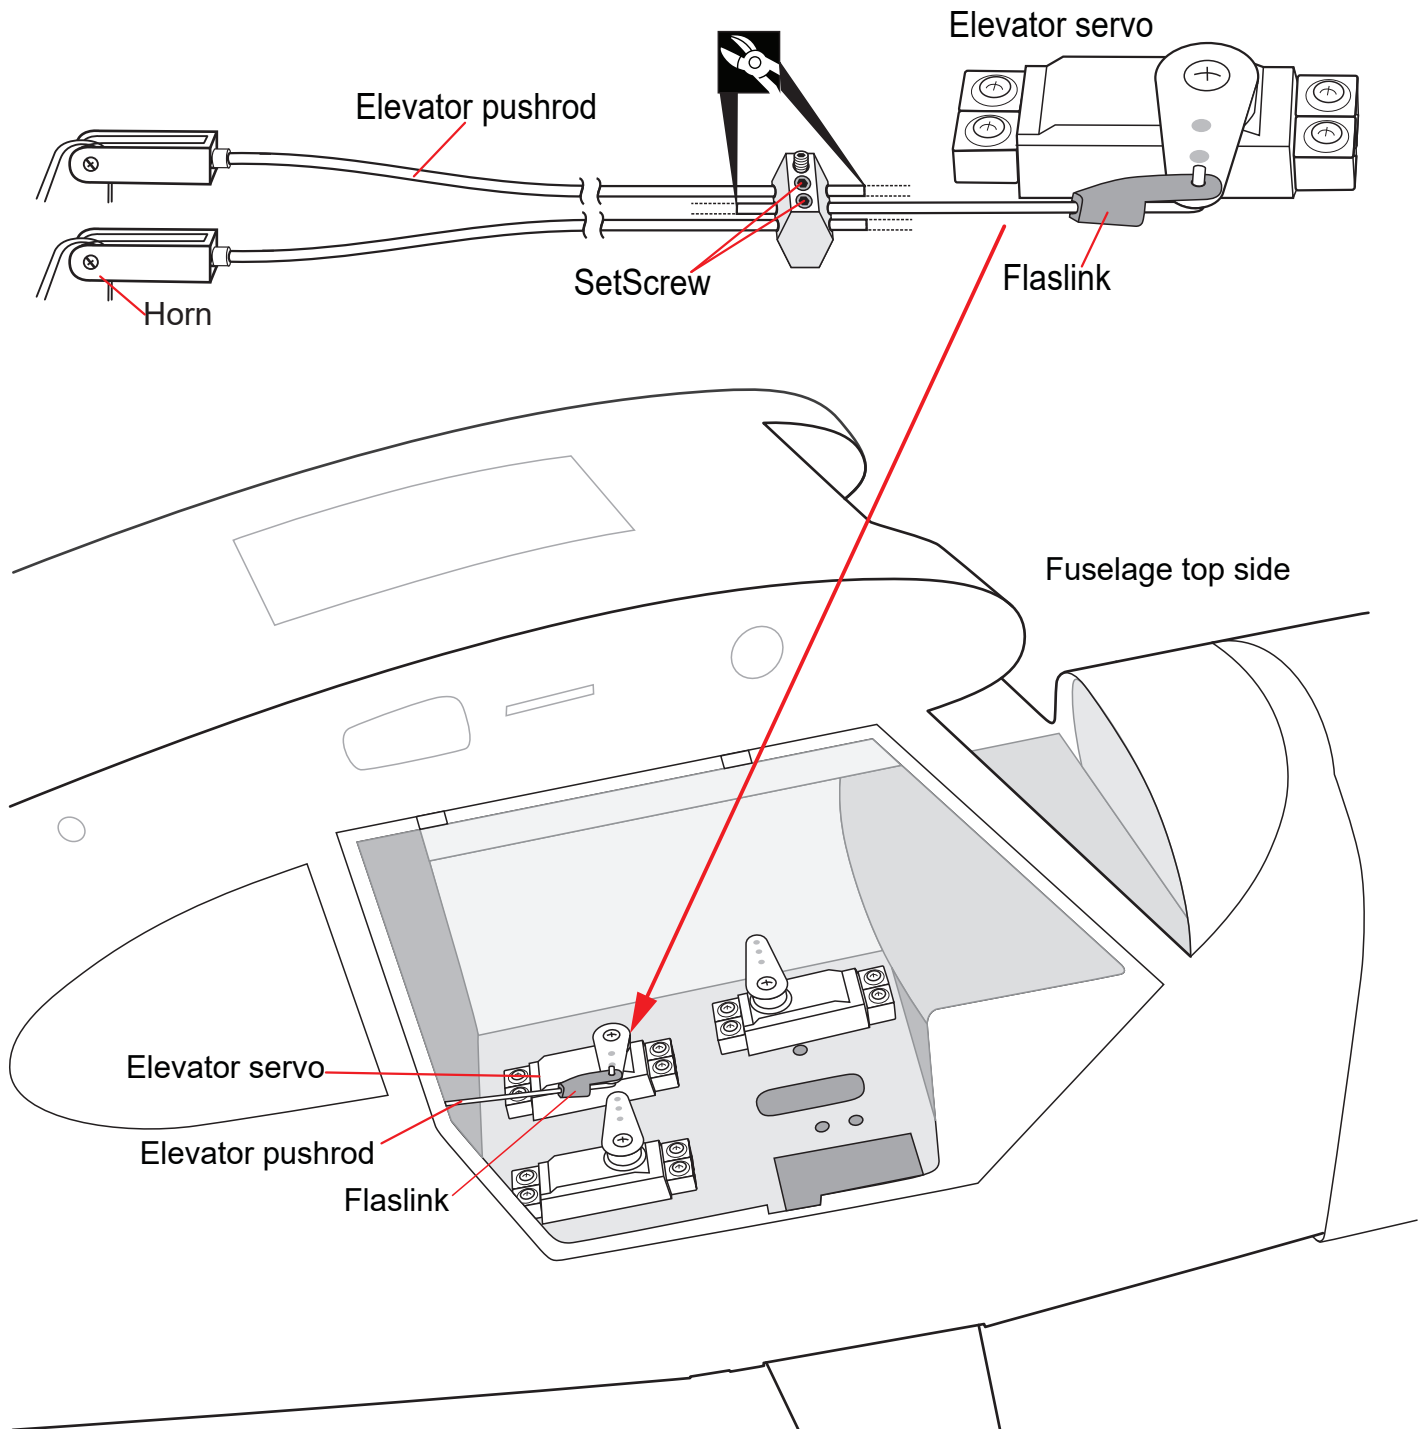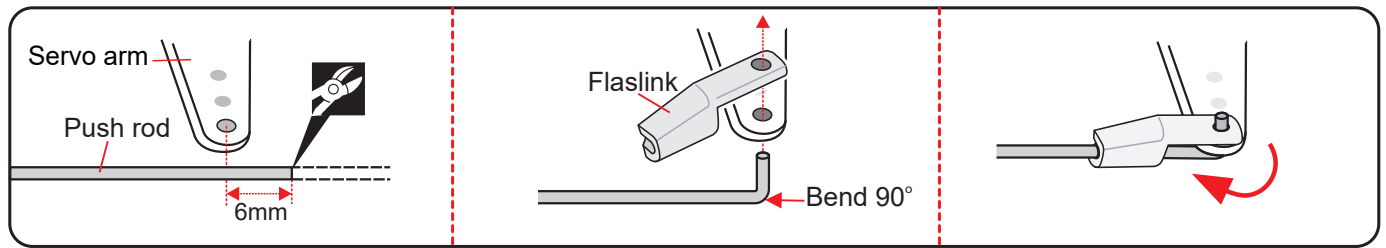

Cut off excess.

## INSTALLATION THE VERTICAL STABILIZER

Hinges for Rudder are glued the same way as the aileron before (see page 8)

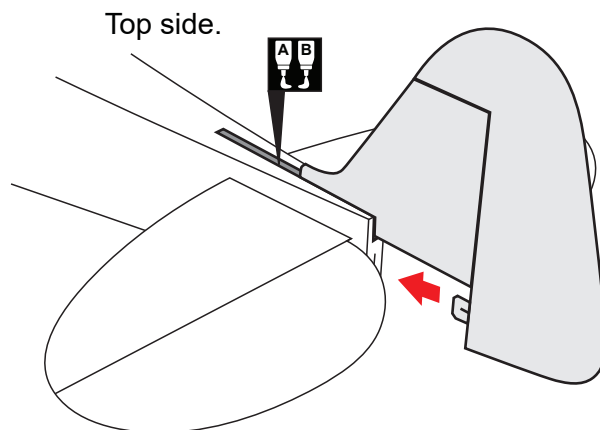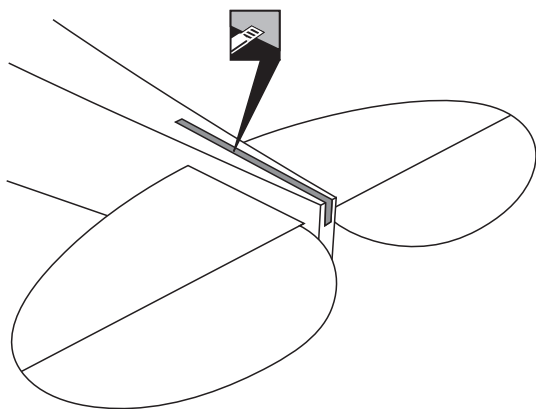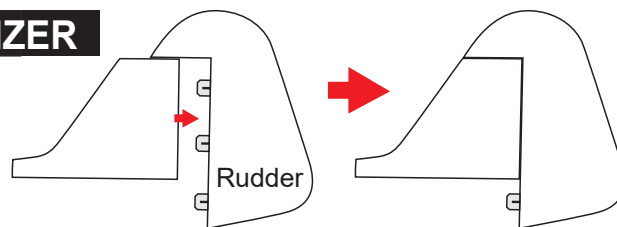

## INSTALLING THE CONTROL HORNS AND LINKAGES

Control horn and linkages for Rudder are installed the same way as the elevator before (see page 13, 14).

Nylon Clevis



---

1.7x8mm Cap Screw



---

900mm Push rod



---

Flaslink







---

Horn



---

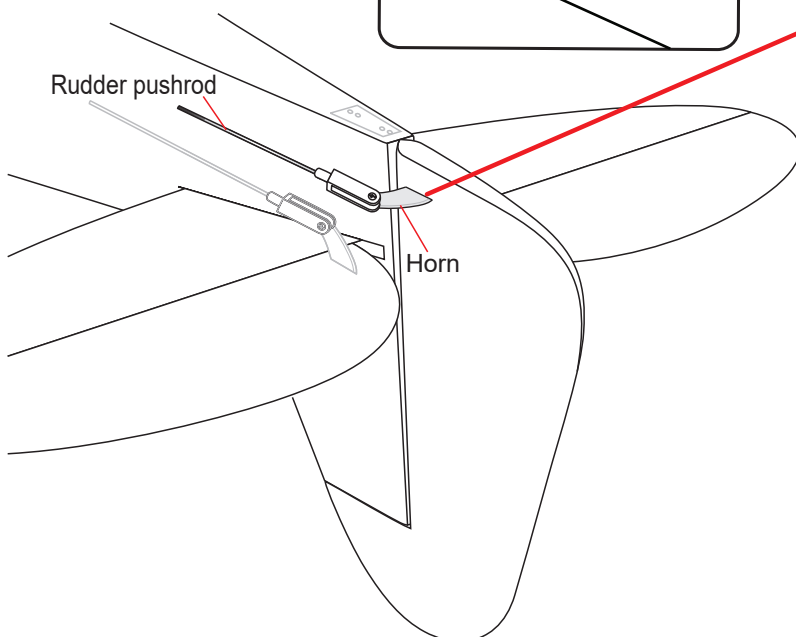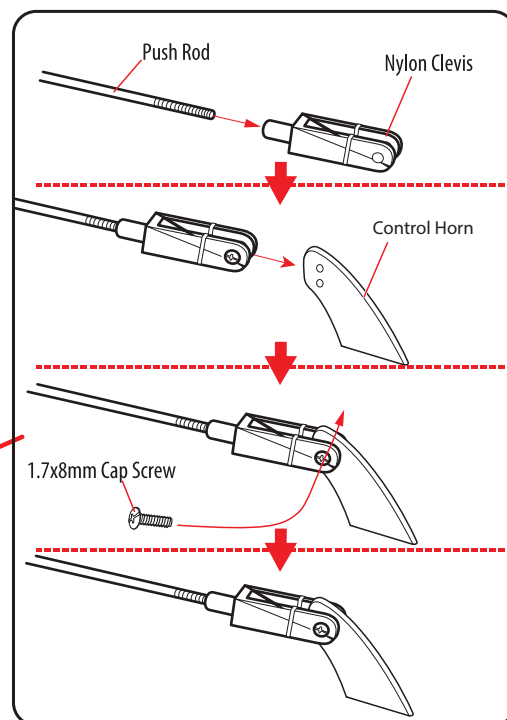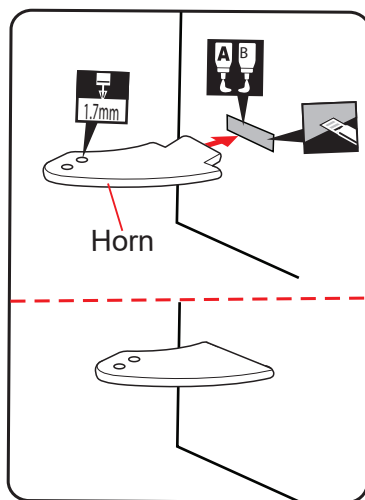


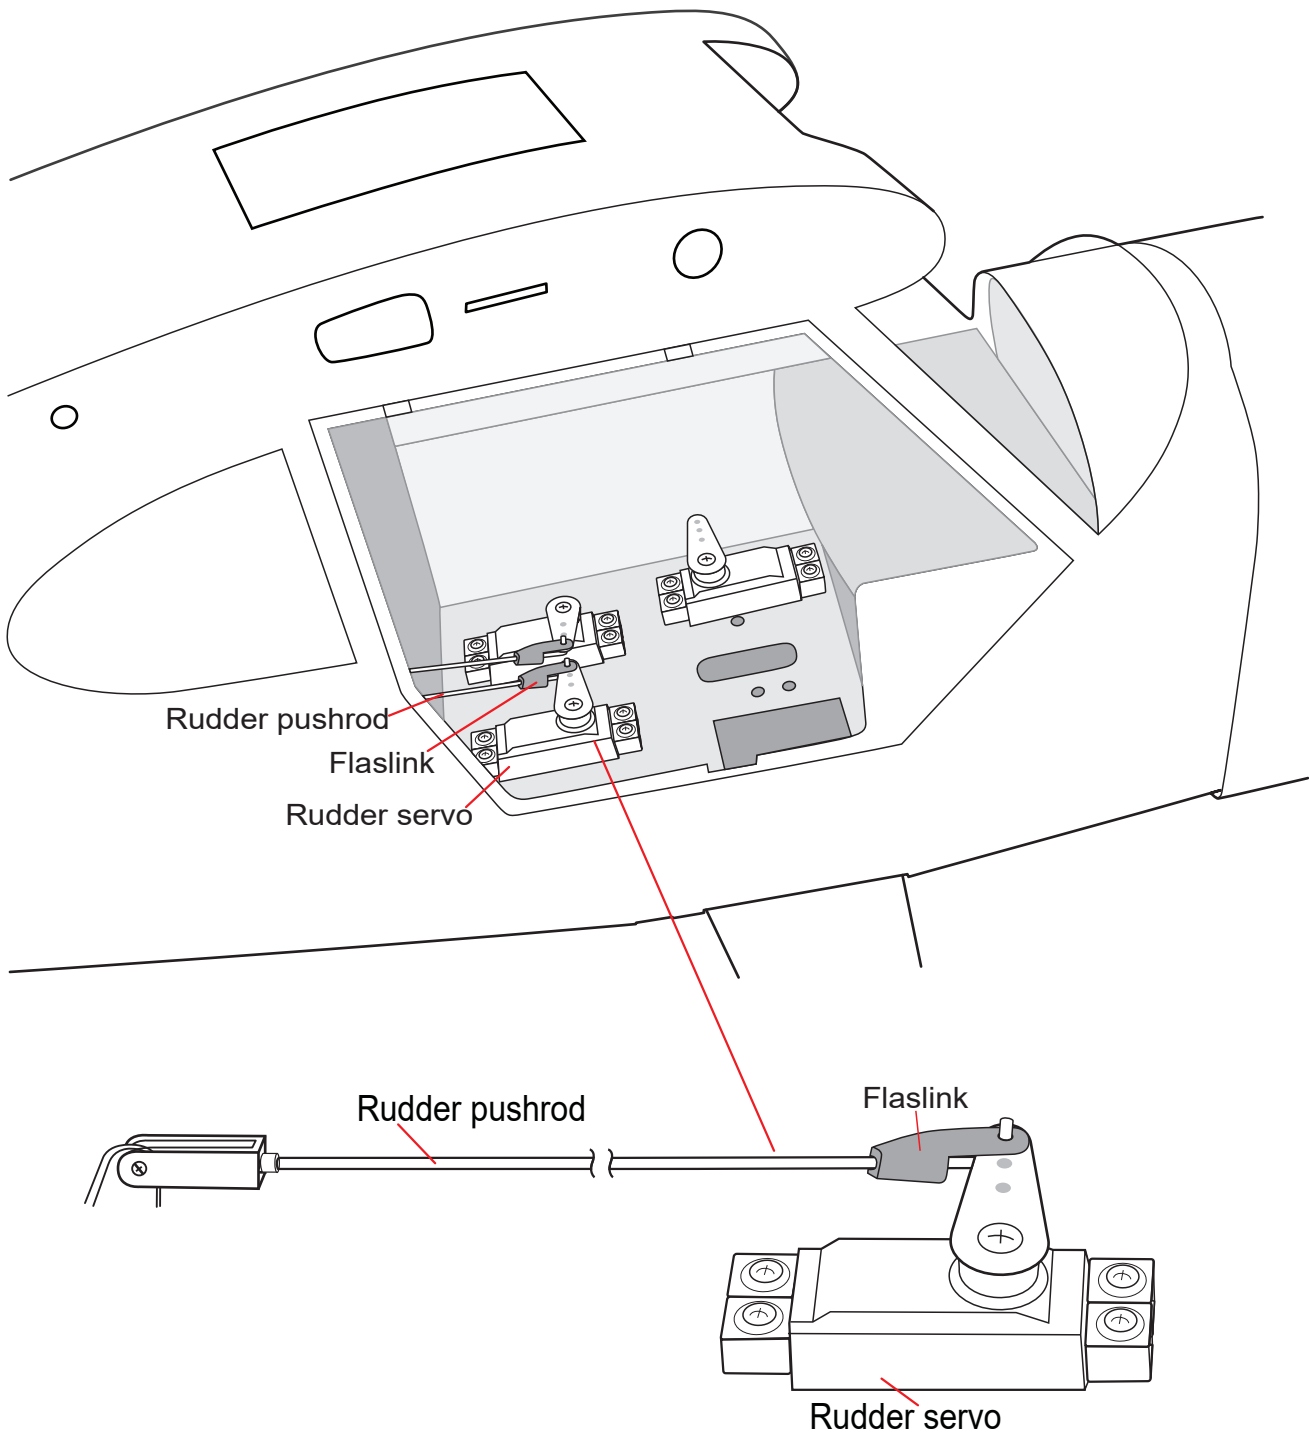


## INSTALLING THE TAIL GEAR

3x12mm Tp Screw	----- 2
3mm Collar	----- 2
	----- 2


Set the tail wheel assembly in place on the plywood plate. The pivot point of the tail wheel wire should be even with the rudder hinge line and the tail wheel bracket should be centered on the plywood plate.

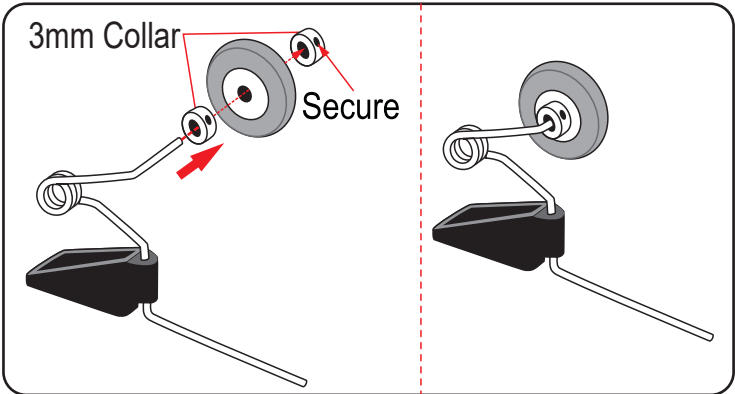


1. Using the knife cut away the wood from the bottom of the rudder and slide the two nylon clasps into the slot. A+B Epoxy glue the nylon clasps as shown.

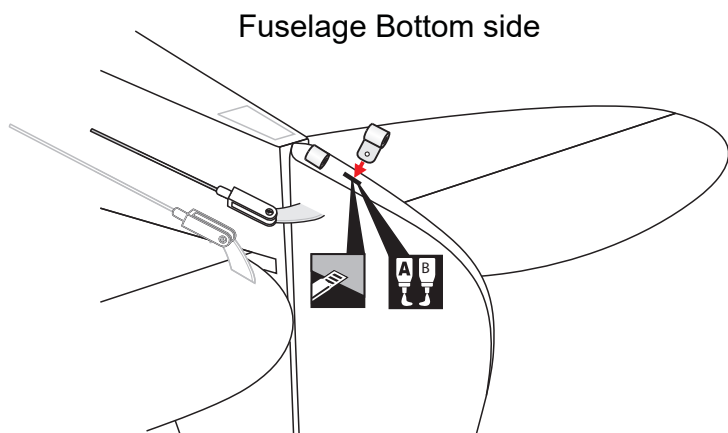

2. Mark the locations of the two mounting screws. Remove the tail wheel bracket and drill 2.5mm pilot holes at the locations marked.

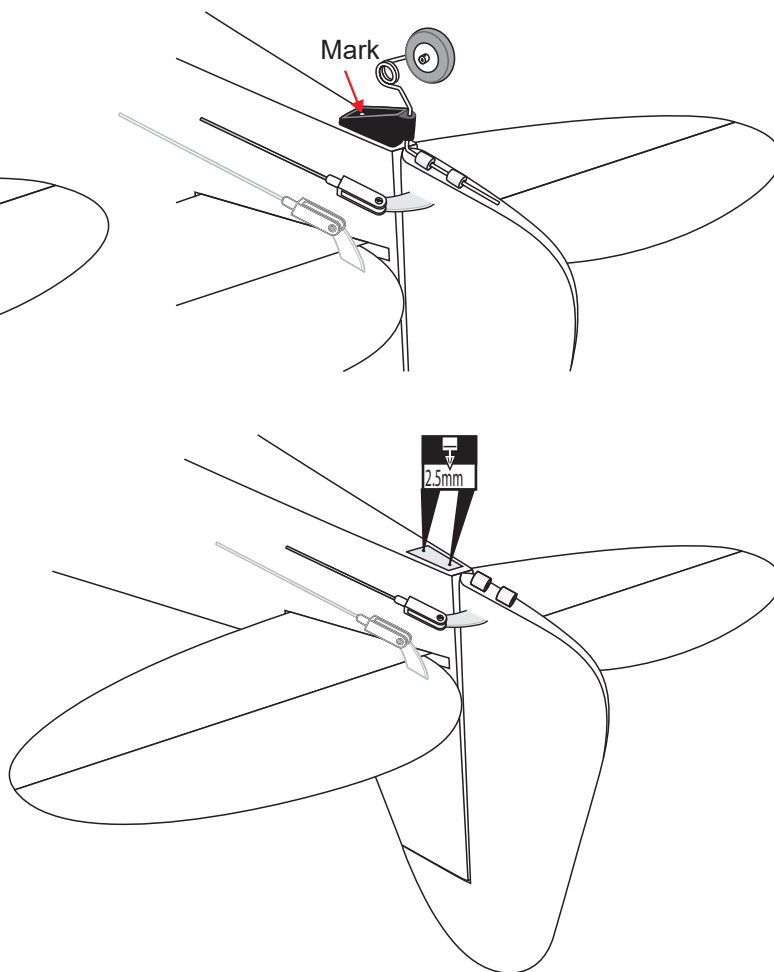

3. Secure the tail wheel bracket in place using two 3mm x 15mm screw.
4. Align the tail wheel wire so that the wire is parallel with the bottom of the rudder.

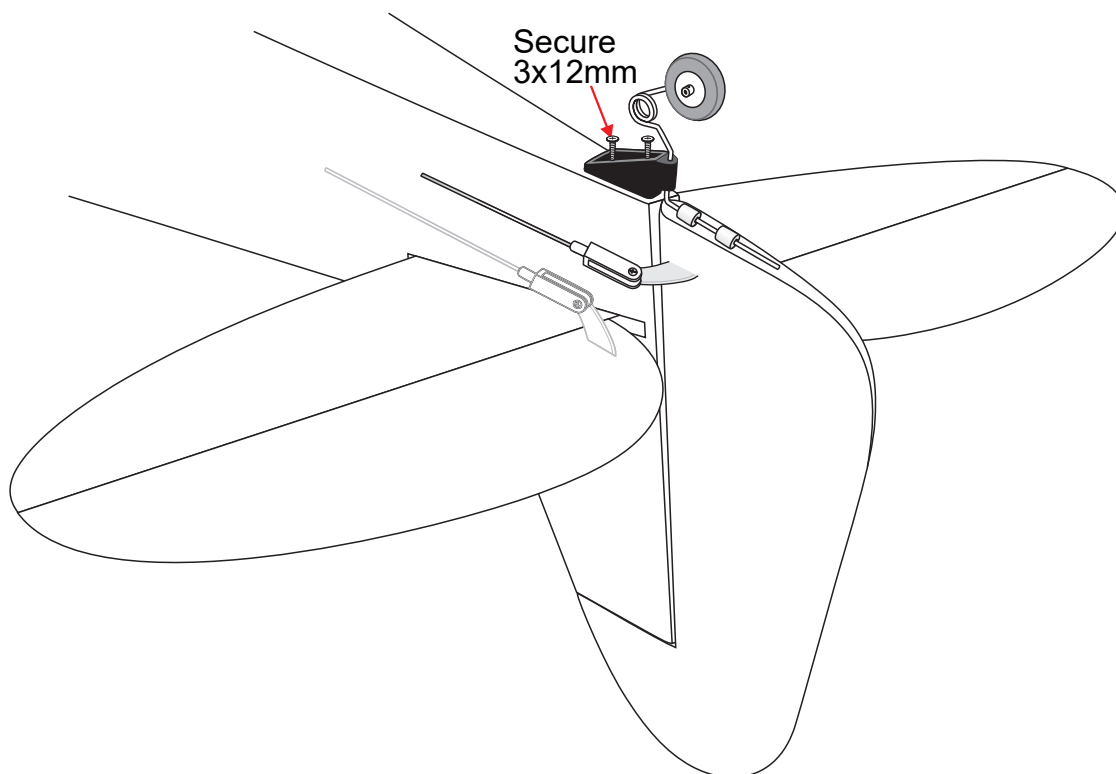

**INSTALLING THE ENGINE**

3mm Hex Nut

----- 4

3x25mm Cap Screw

----- 4

3mm Flat washer

----- 4

500mm Pushrod wire

----- 1

4x25mm Cap Screw

----- 4

4mm Flat washer



----- 4


4mm Spring Washer

----- 4


Size: 46


\* Locate the long piece of wire used for the throttle pushrod. One end of the wire has been pre-bend in to a "Z" bend at the factory. This "Z" bend should be inserted into the throttle arm of the engine when the engine is fitted onto the engine mount. Fit the engine to the engine mount using the screws provided.

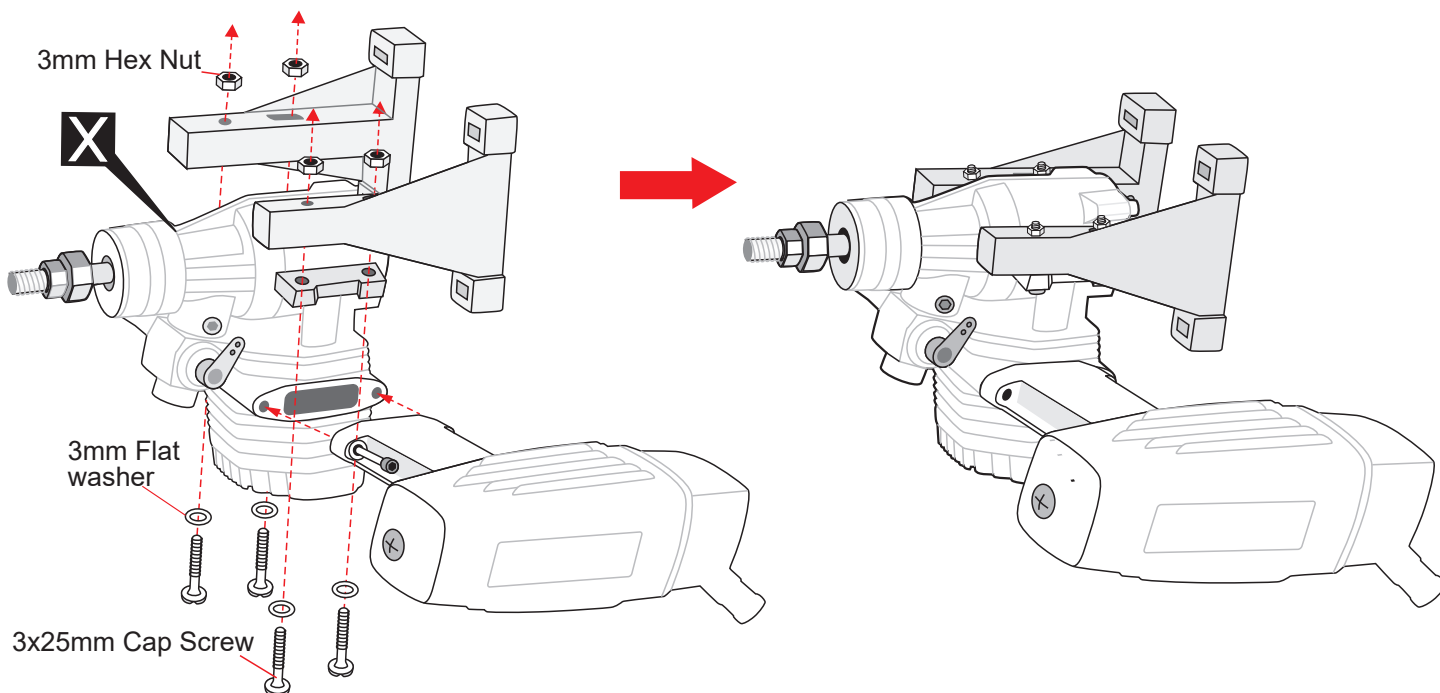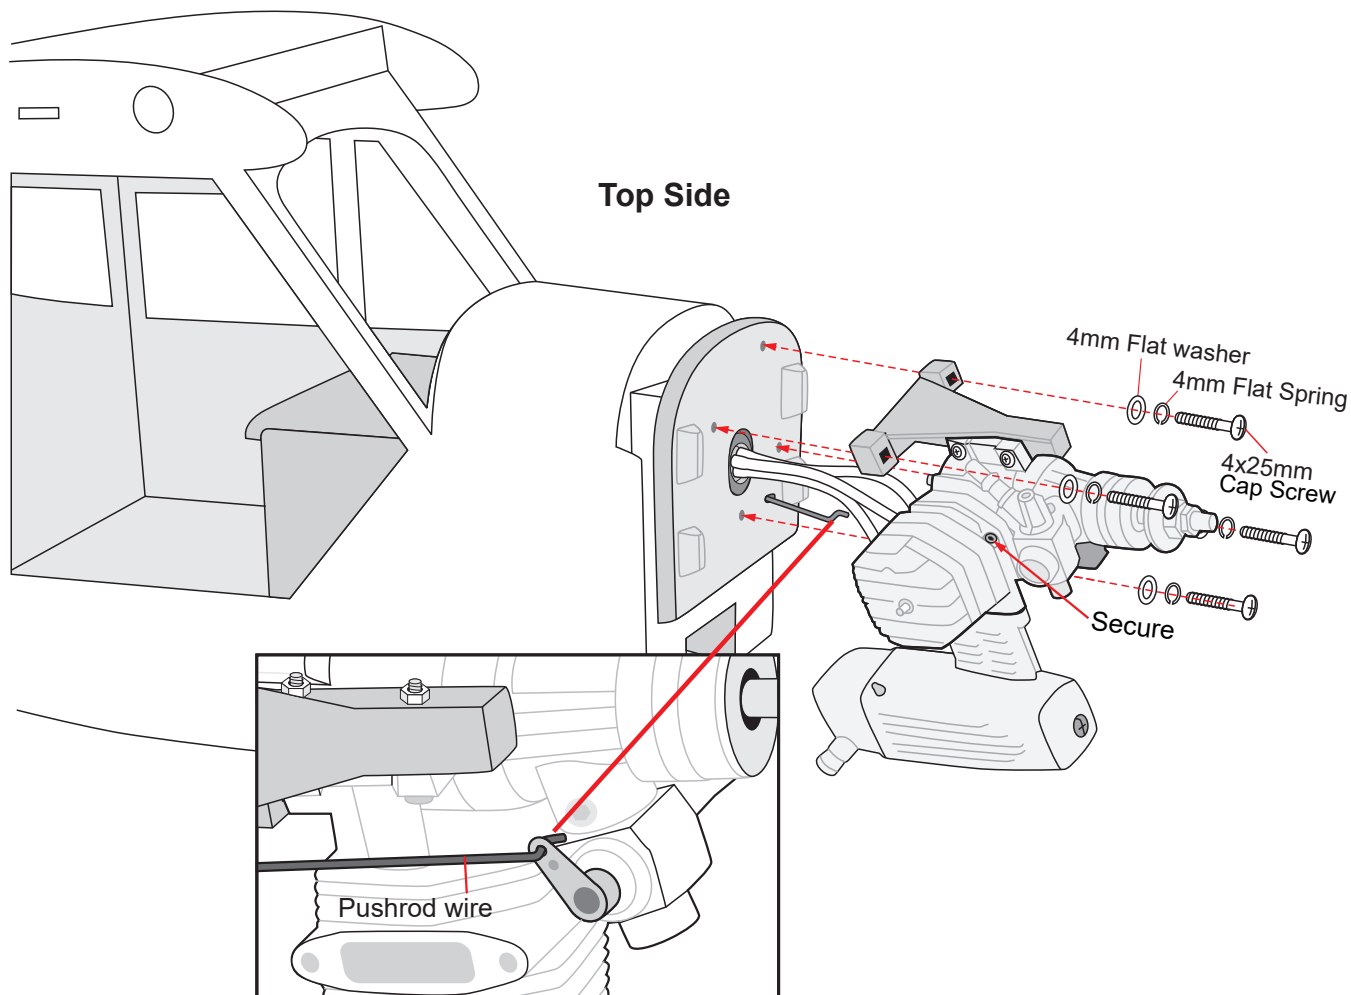**Top Side**


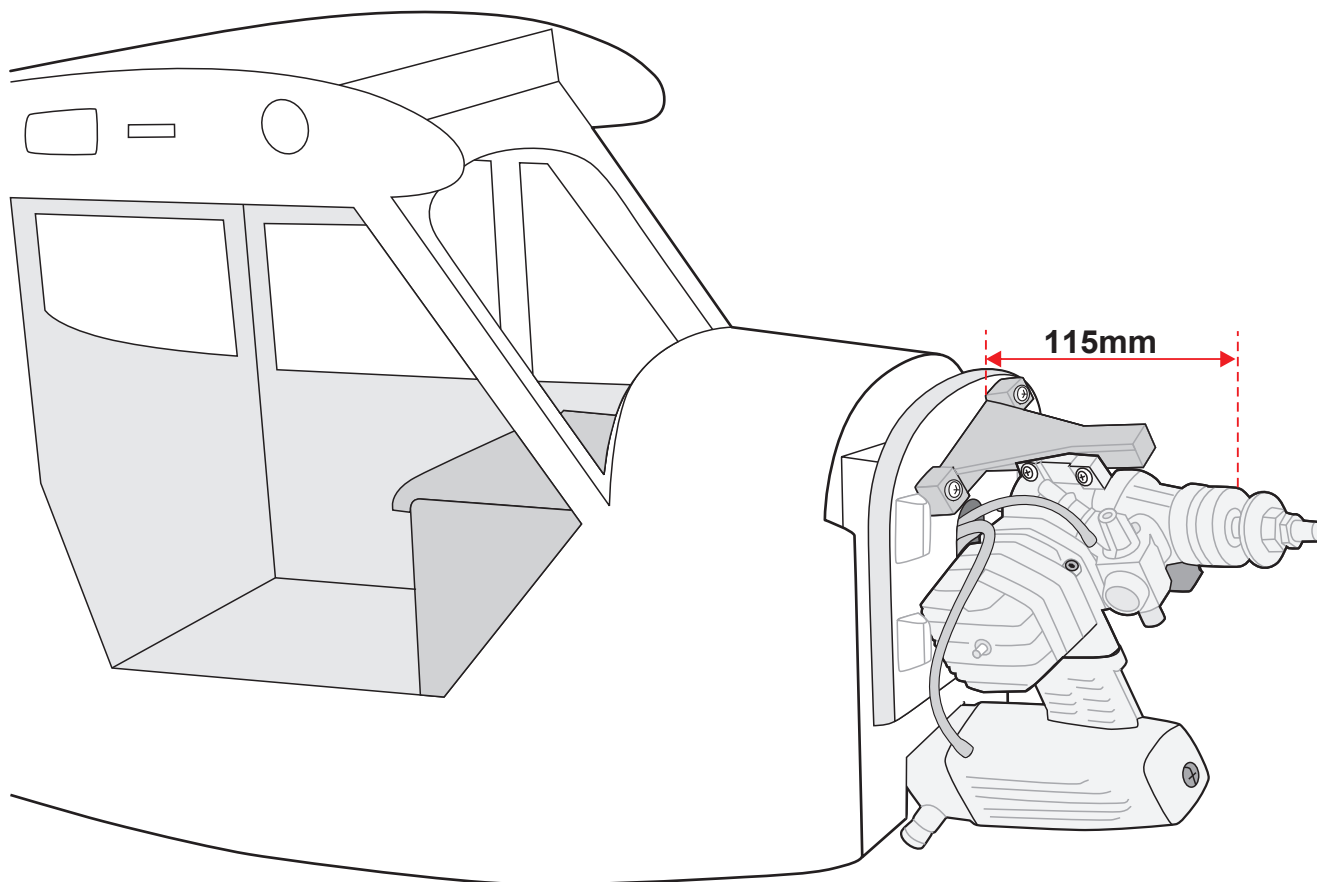


## INSTALLING THE STOPPER

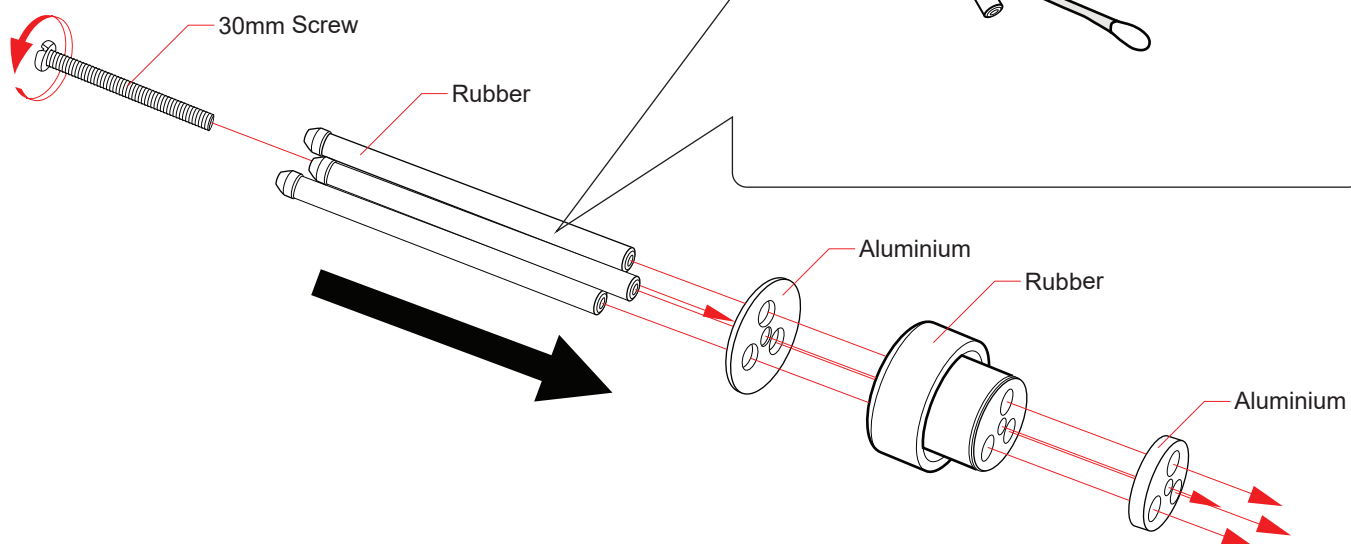


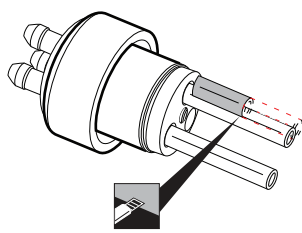**WARNING**


*Do not overheat,  
it may break.*

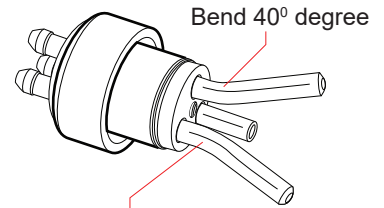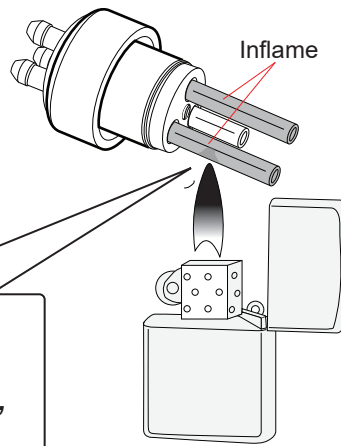

Bend 40° degree

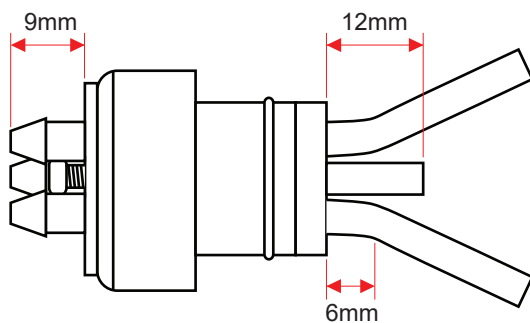

Cut off shaded portion

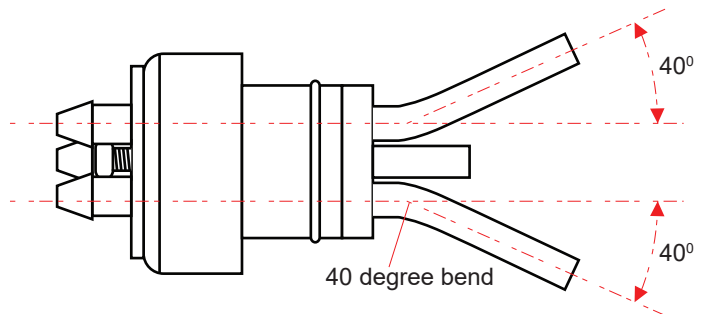**INSTALLING THE FUEL TANK**

1. Using a modeling knife, cut one length of silicon fuel line (the length of silicon fuel line is calculated by how the weighted clunk should rest about 5mm away from the rear of the tank and move freely inside the tank). Connect one end of the line to the weighted clunk and the other end to the nylon pick up tube in the stopper.
2. Carefully bend the second nylon tube up at a 45 degree angle (using a cigarette lighter). This tube will be the vent tube to the muffler.
3. Carefully bend the third nylon tube down at a 45 degree angle (using a cigarette lighter). This tube will be vent tube to the fueling valve.



*When the stopper assembly is installed in the tank, the top of the vent tube should rest just below the top surface of the tank. It should not touch the top of the tank.*

4. Test fit the stopper assembly into the tank. It may be necessary to remove some of the flashing around the tank opening using a modeling knife. If flashing is present, make sure none of it falls into the tank.

5. When satisfied with the alignment of the stopper assembly tighten the 3mm x 20mm machine screw until the rubber stopper expands and seals the tank opening. Do not over tighten the assembly as this could cause the tank to split.

6. Using a modeling knife, cut 3 lengths of fuel line . Connect 2 lines to the 2 vent tubes and 1 line to the fuel pickup tube in the stopper.






7. Feed three lines through the fuel tank compartment and through the pre-drilled hole in the firewall. Pull the lines out from behind the engine, while guiding the fuel tank into place. Push the fuel tank as far forward as possible, the front of the tank should just about touch the back of the firewall.

Blow through one of the lines to ensure the fuel lines have not become kinked inside the fuel tank compartment. Air should flow through easily.



*Do not secure the tank into place permanently until after balancing the airplane. You may need to remove the tank to mount the battery in the fuel tank compartment.*

8. Secure the fuel tank.

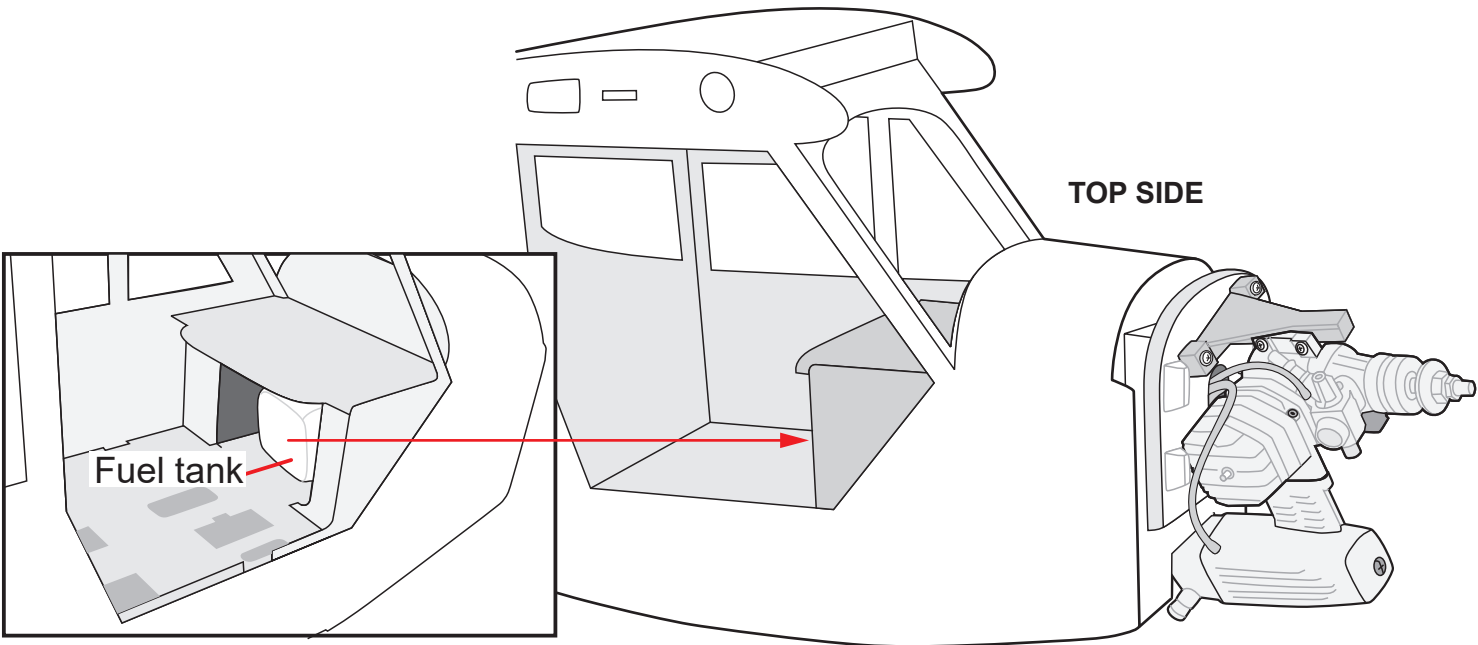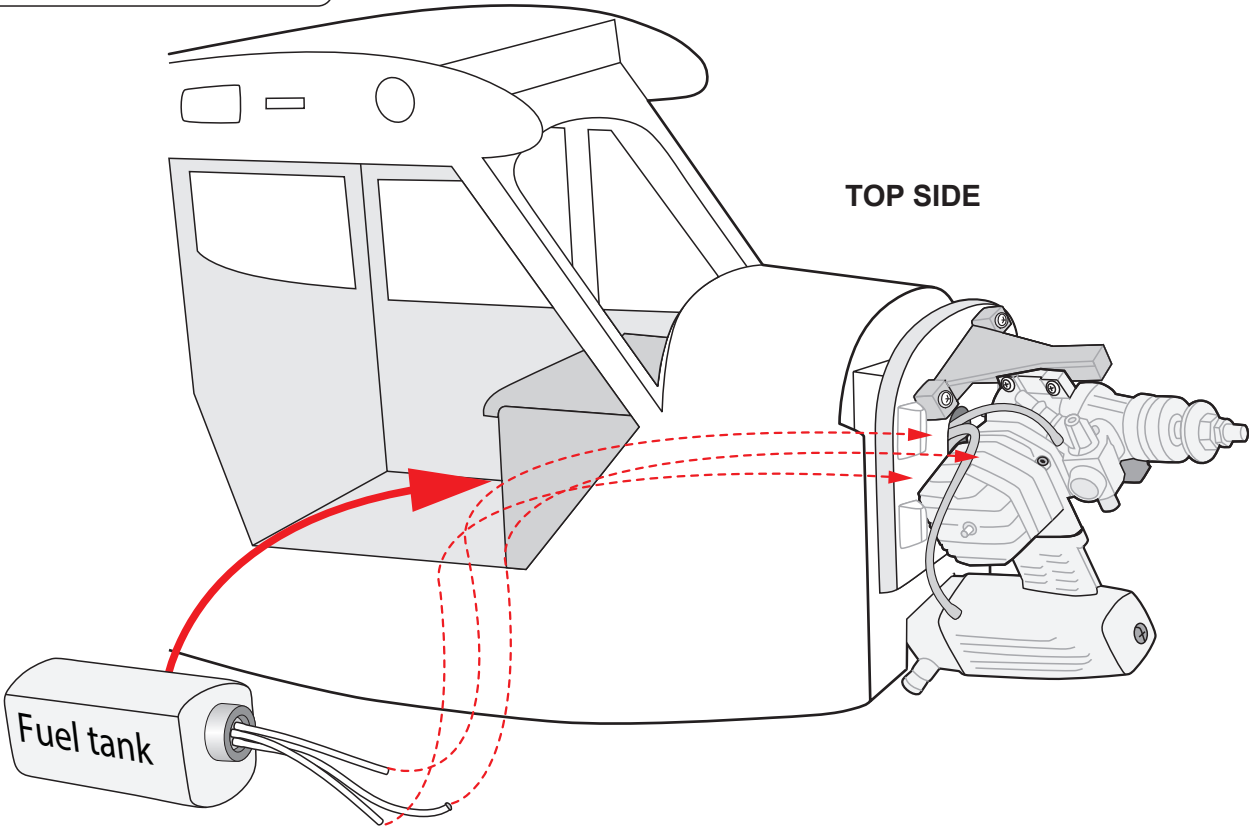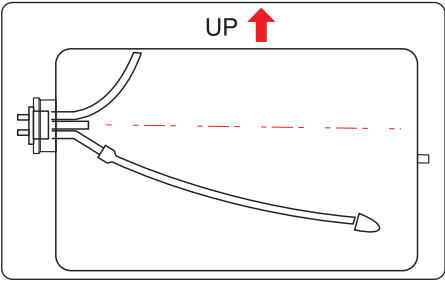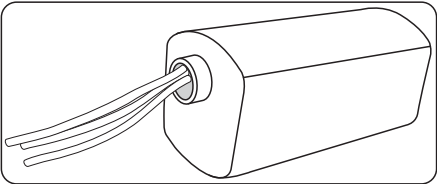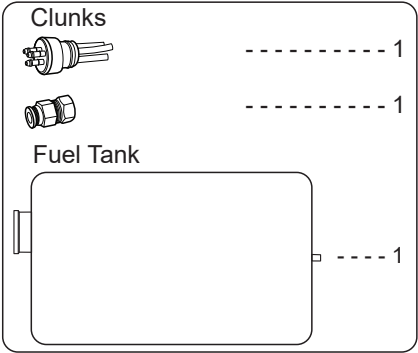

## INSTALLING THE THROTTLE



Connector

----- 1

1) Install one adjustable metal connector through the third hole out from the center of one servo arm, enlarge the hole in the servo arm using a 2mm drill bit to accommodate the servo connector. Remove the excess material from the arm.

⚠ After installing the adjustable metal connector apply a small drop of thin C/A to the bottom nut. This will prevent the connector from loosening during flight.




2) Plug the throttle servo into the receiver and turn on the radio system. Check to ensure that the throttle servo output shaft is moving in the correct

direction. When the throttle stick is moved forward from idle to full throttle, the throttle barrel should also open and close using this motion. If not, reverse the direction of the servo, using the transmitter.

3) Slide the adjustable metal connector / servo arm assembly over the plain end of the pushrod wire. Position the throttle stick and the throttle trim at their lowest positions.

4) Manually push the carburetor barrel fully closed. Angle the arm back about 45 degree from center and attach the servo arm onto the servo. With the carburetor barrel fully closed, tighten the set screw in the adjustable metal connector.


5) Remove the excess throttle pushrod wire using wire cutters and install the servo arm retaining screw

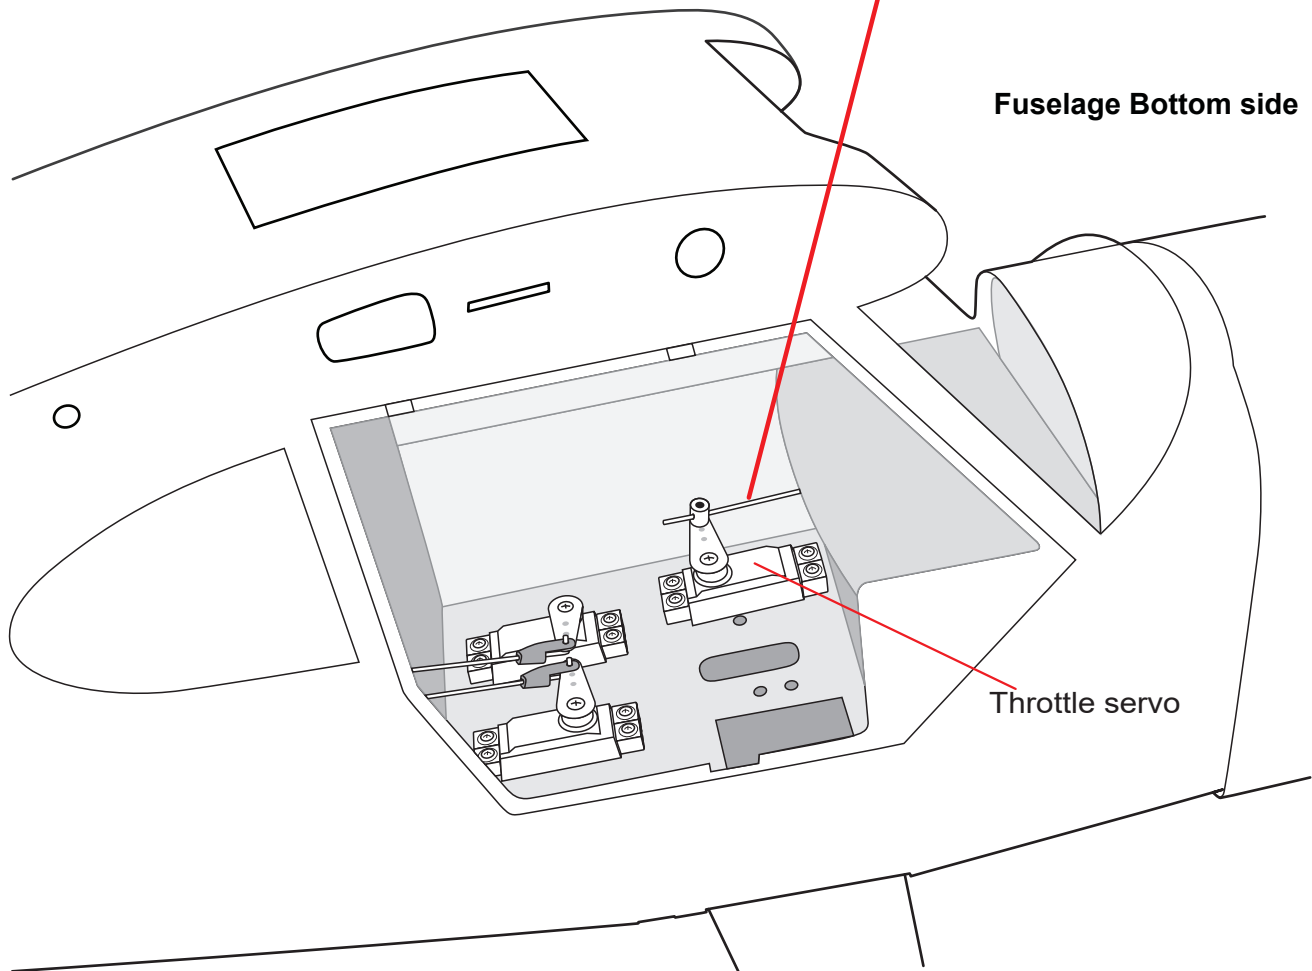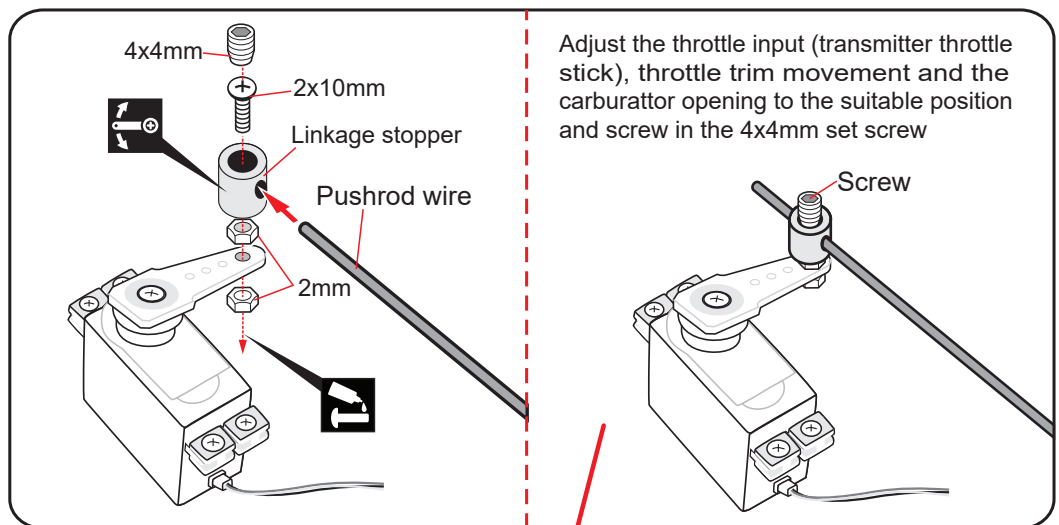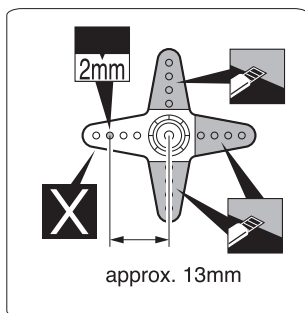


## MOUNTING THE COWL



- 1) Remove the muffler and needle valve assembly from the engine. Slide the fiberglass cowl over the engine.
- 2) Measure and mark the locations to be cut out for engine head clearance, needle valve, muffler. Remove the cowl and make these cutouts using a rotary tool with a cutting disc and a rotary sanding drum attachment.
- 3) Slide the cowl back into place. Align the front of the cowl with the crankshaft of the engine. The front of the cowl should be positioned so the crankshaft is in the middle of the precut opening. Hold the cowl firmly in place using several pieces of masking tape.

- 4) While holding the cowl firmly in position, drill four 1,6mm pilot holes through both the cowl and the side edges of the firewall.
  - 5) Using a 3mm drill bit, enlarge the four holes in the cowling.
- ⚠ Enlarging the holes through the cowl will prevent the fiberglass from splitting when the mounting screws are installed.
- 6) Slide the cowl back over the engine and secure it in place using four screws.
  - 7) Install the muffler. Connect the fuel and pressure lines to the carburetor, muffler and fuel filler valve. Tighten the screws completely.

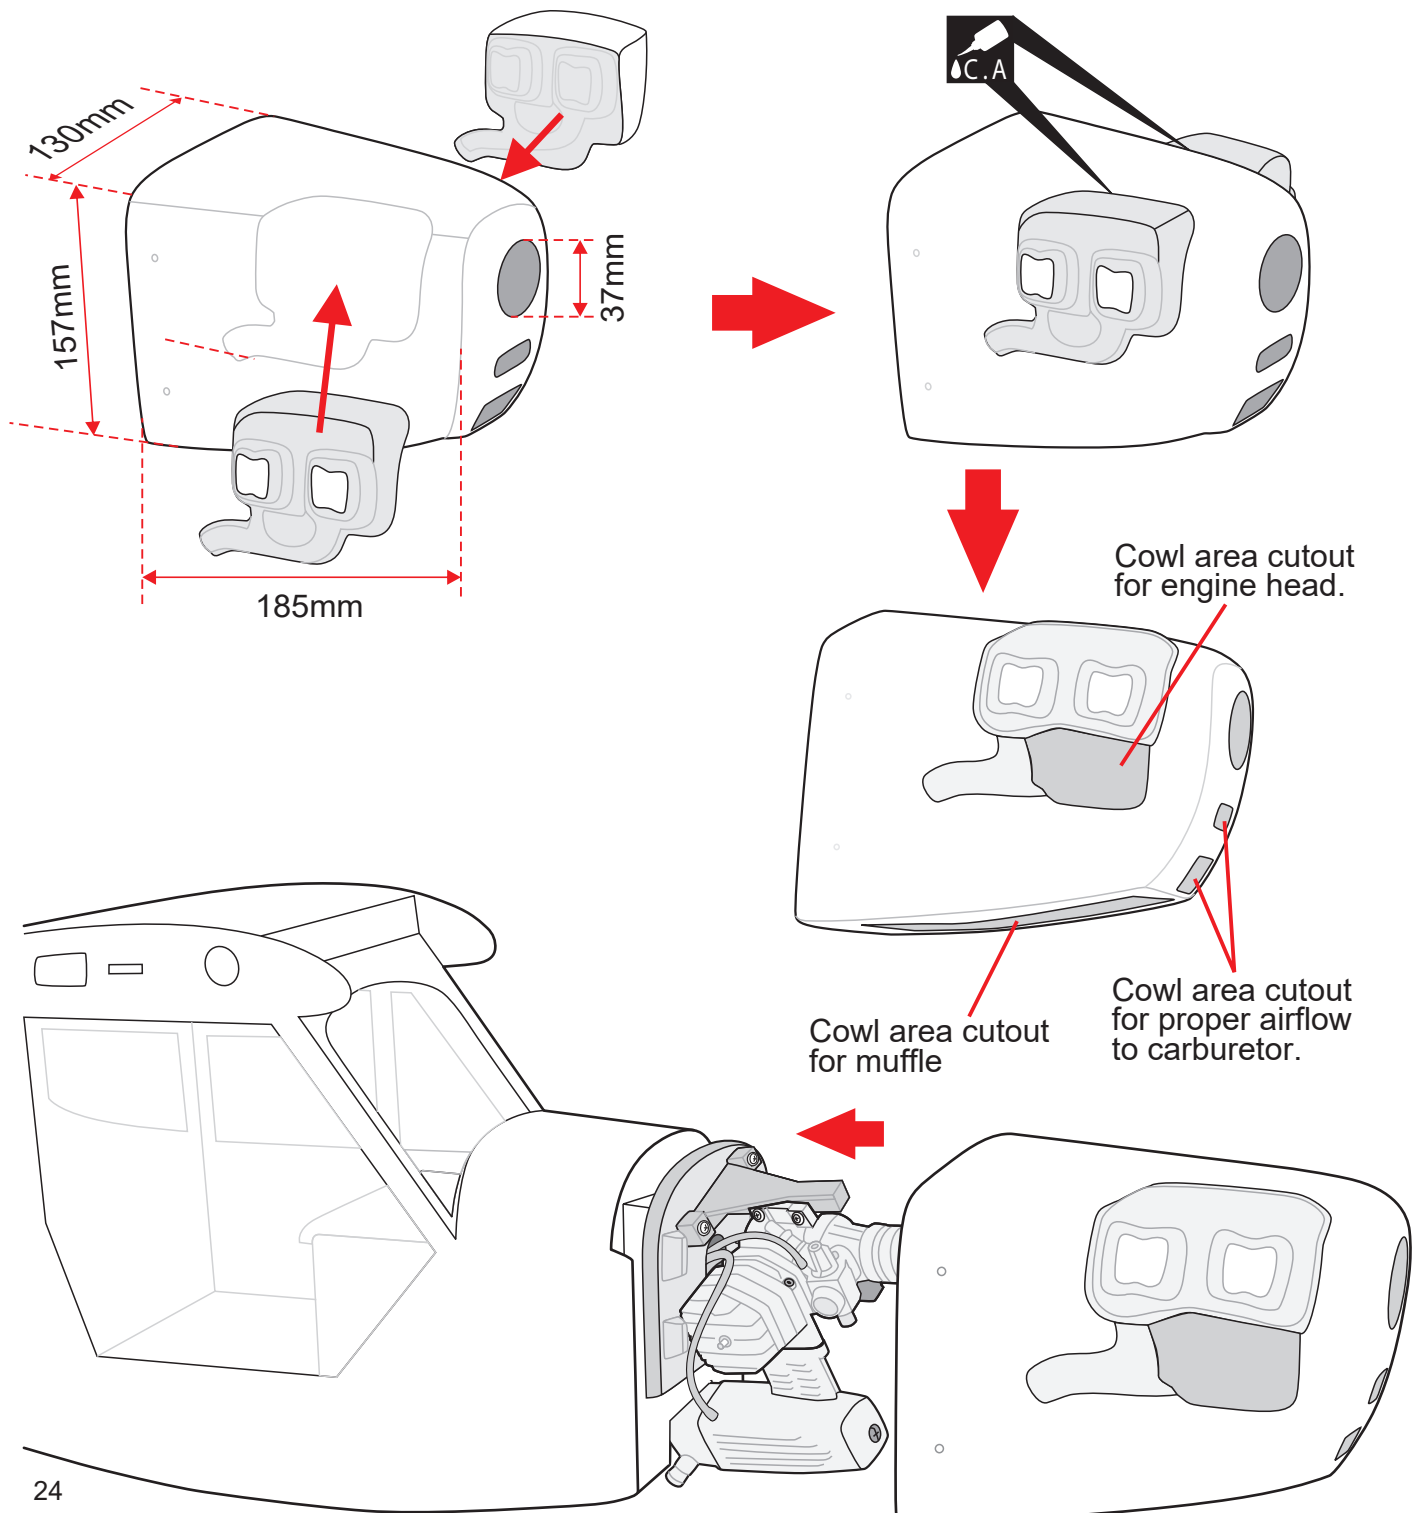


3x12mm Tp Screw



 --- 4

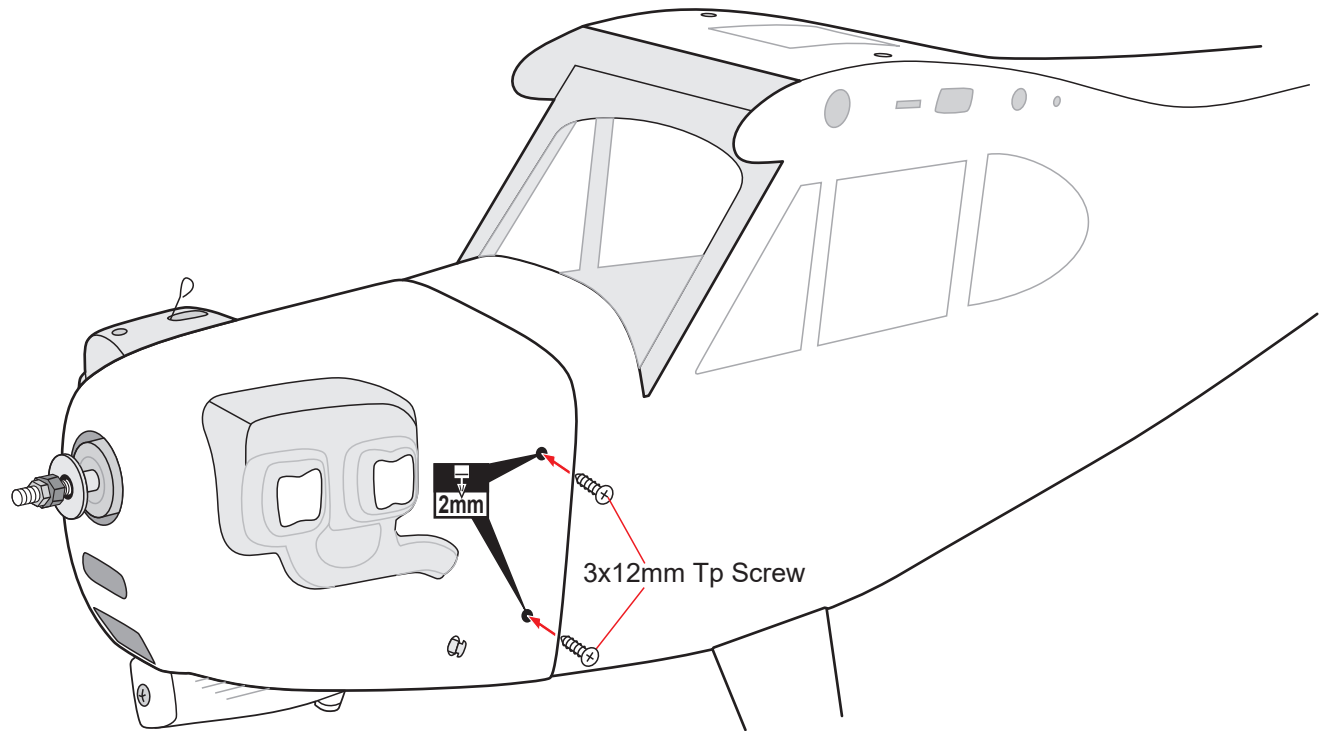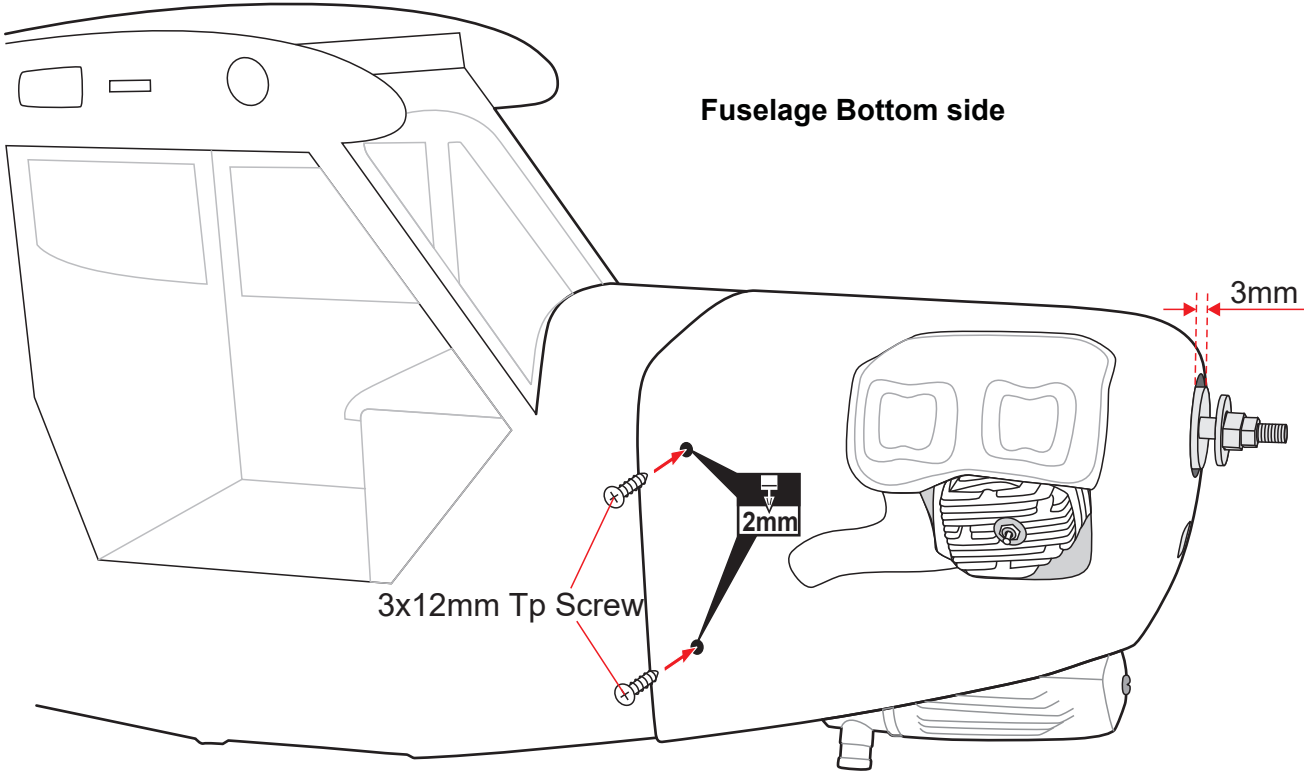


## INSTALLING MAIN GEAR

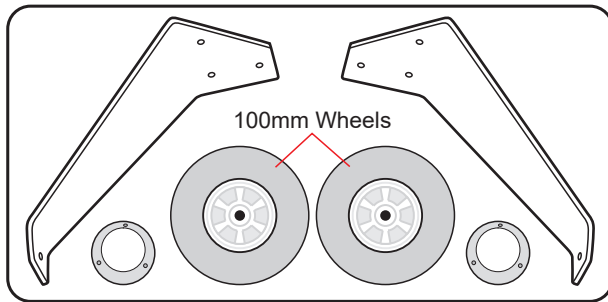

4x15mm Cap Screw	----- 6
4mm Flat Washer	----- 6
4mm Spring Washer	----- 6
5x45mm Socket Head Cap Screw	----- 2
5mm Collar	----- 2
5mm Flat washer	----- 4
5mm Hex Nut	----- 4

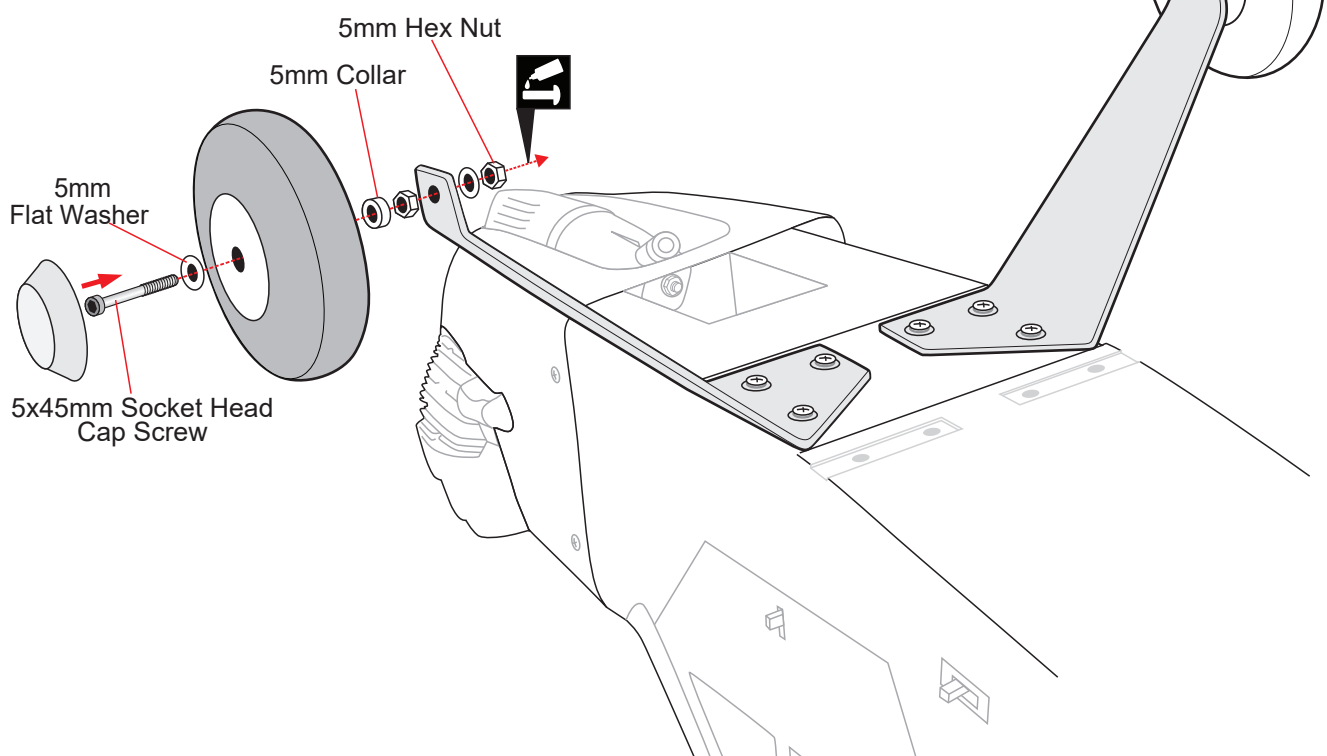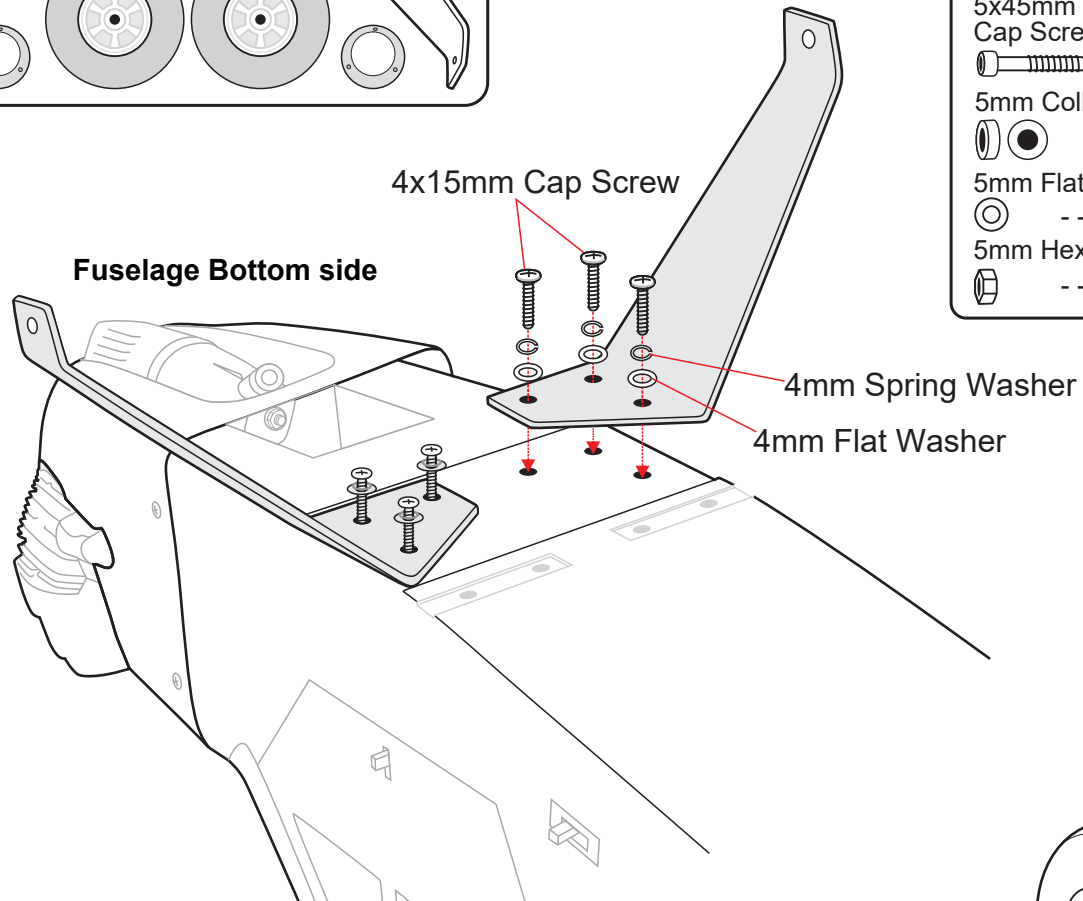

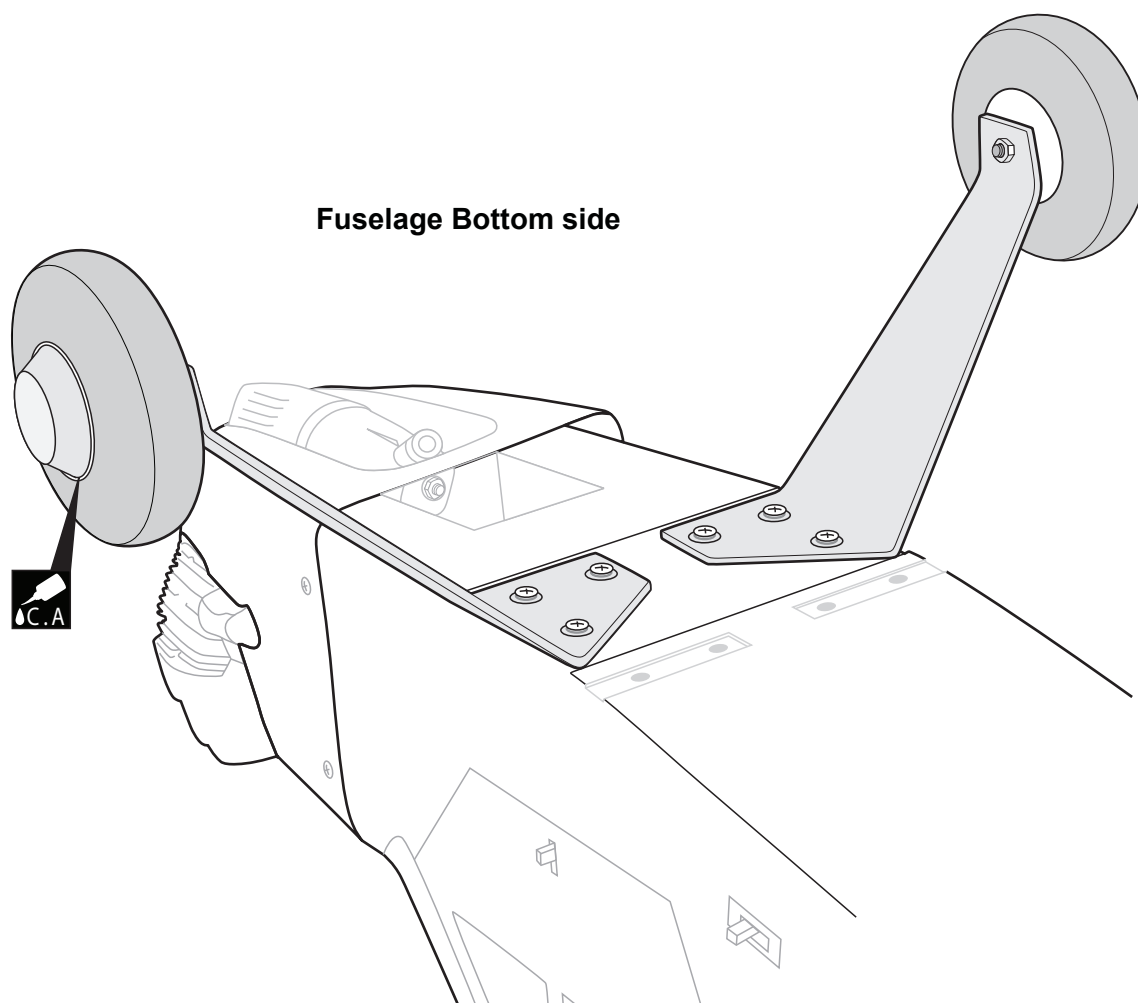


Apply instant glue  
(C.A glue, super glue).

## INSTALLING THE SWITCH, RECEIVER AND BATTERY

1) Plug the servo leads and the switch lead into the receiver. You may want to plug an aileron extension into the receiver to make plugging in the aileron servo lead easier when you are installing the wing. Plug the battery pack lead into the switch.

2) Wrap the receiver and battery pack in the protective foam to protect them from vibration. Use a rubber band or masking tape to hold the foam in place.


 **Do not permanently secure the receiver and battery until after balancing the model.**

### INSTALLING THE SWITCH

1) The switch should be mounted on the fuselage side, opposite the muffler, close enough to the receiver so the lead will reach. Use the face plate of the switch cut out and locate the mounting holes.







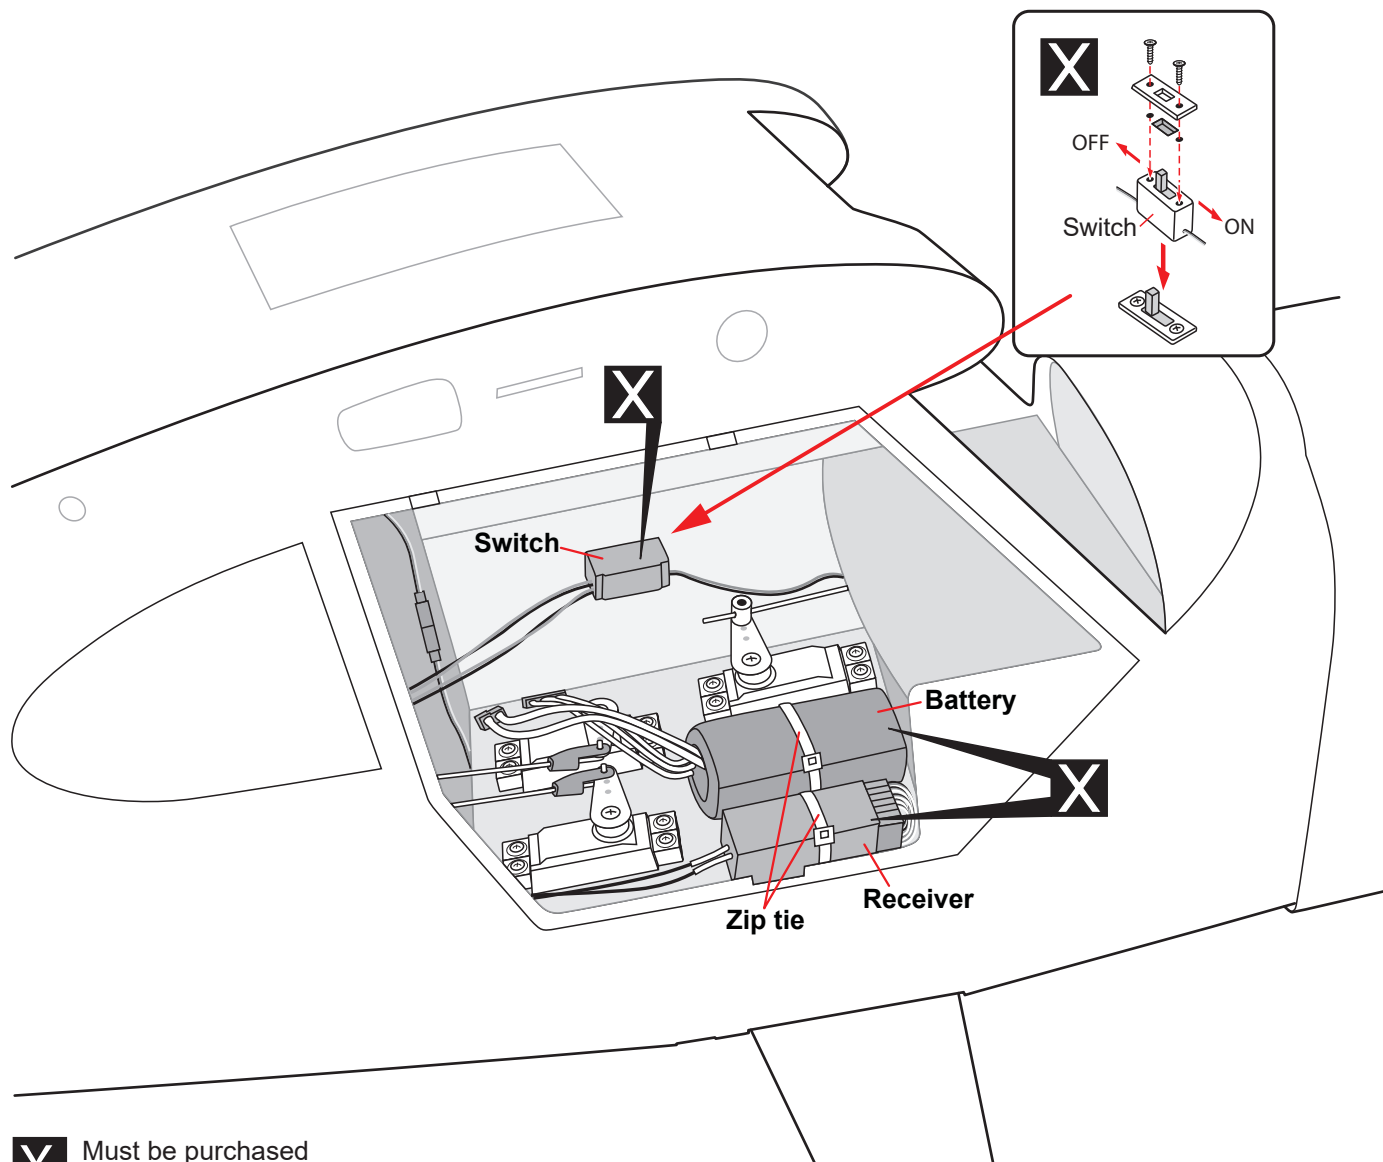

2) Cut out the switch hole using a modeling knife. Use a 2mm drill bit and drill out the two mounting holes through the fuselage side.


3) Secure the switch in place using the two machine screws provided with the radio system.


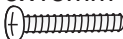
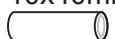



**X** Must be purchased separately!

## INSTALLING THE ELECTRIC MOTOR (EP VERSION)


4x60mm Socket Head Cap Screw	M3 Blind Nut
 - - 4	 - - - - 4
3x15mm Cap Screw	10x40mm Plastic
 - - - - 4	 - - - - 4
4mm Flat Washer	
 - - - - - 4	
4mm Flat Washer	
 - - - - - 4	
4mm Spring Washer	
 - - - - - 4	
3mm Spring Washer	
 - - - - - 4	
	Battery tray

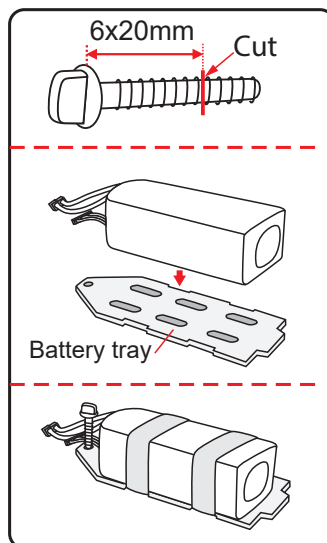

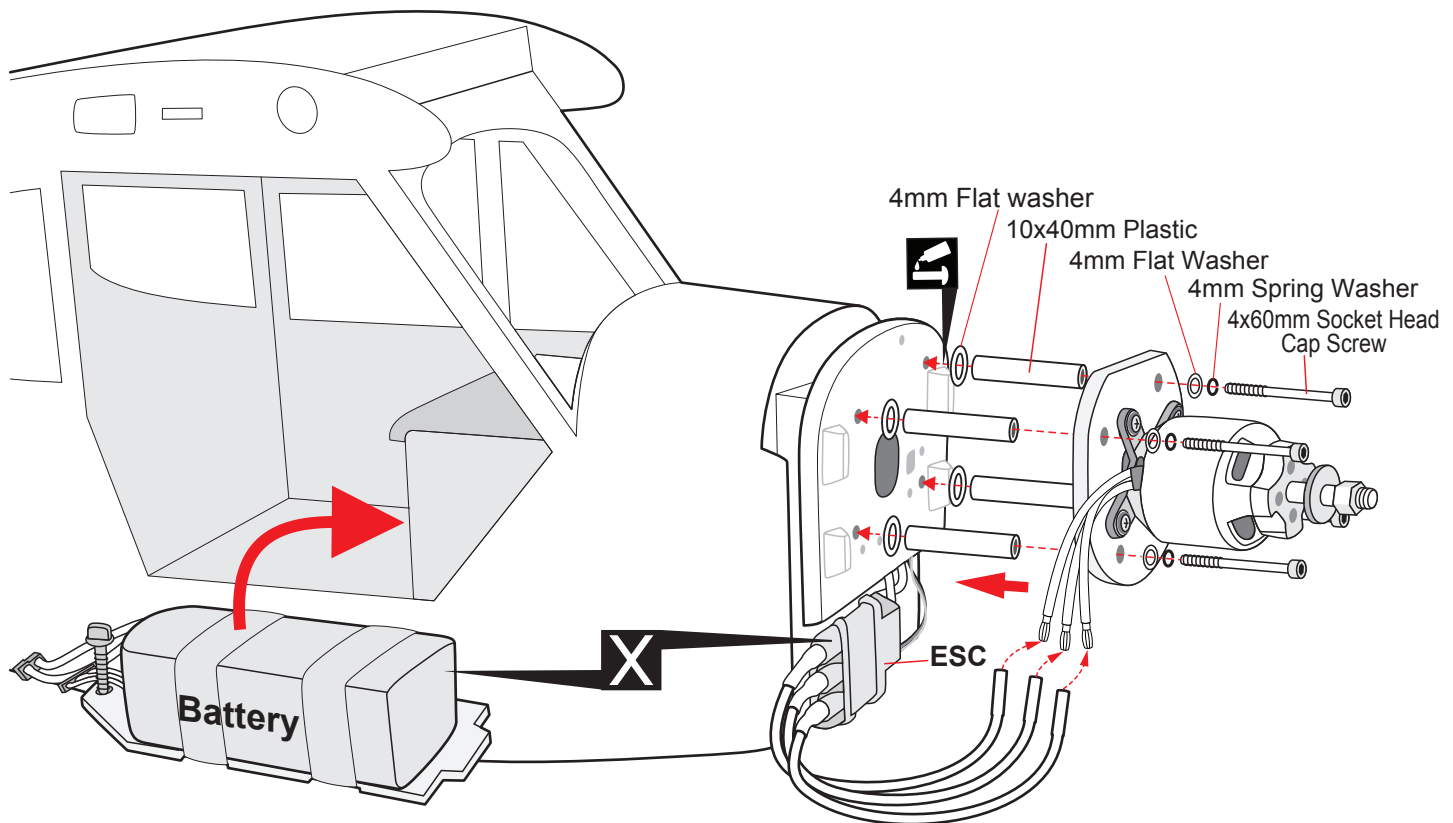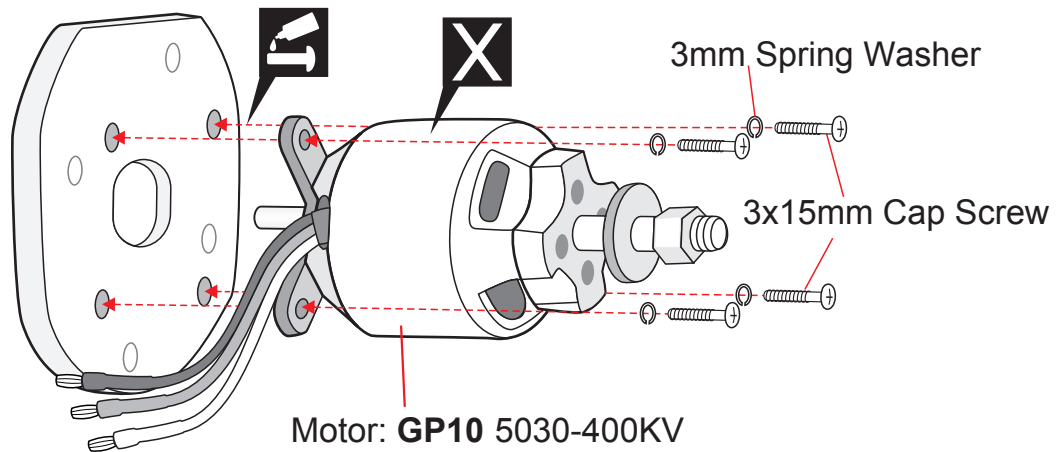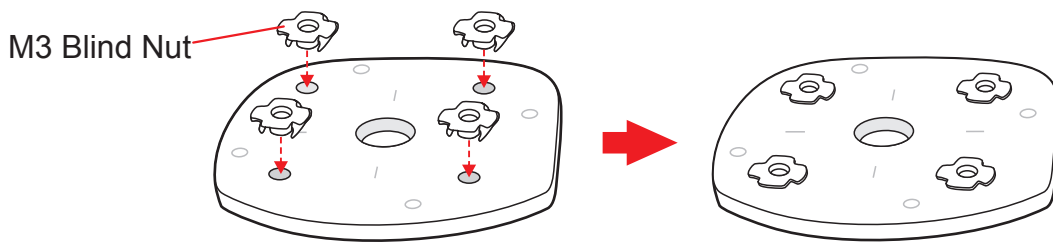



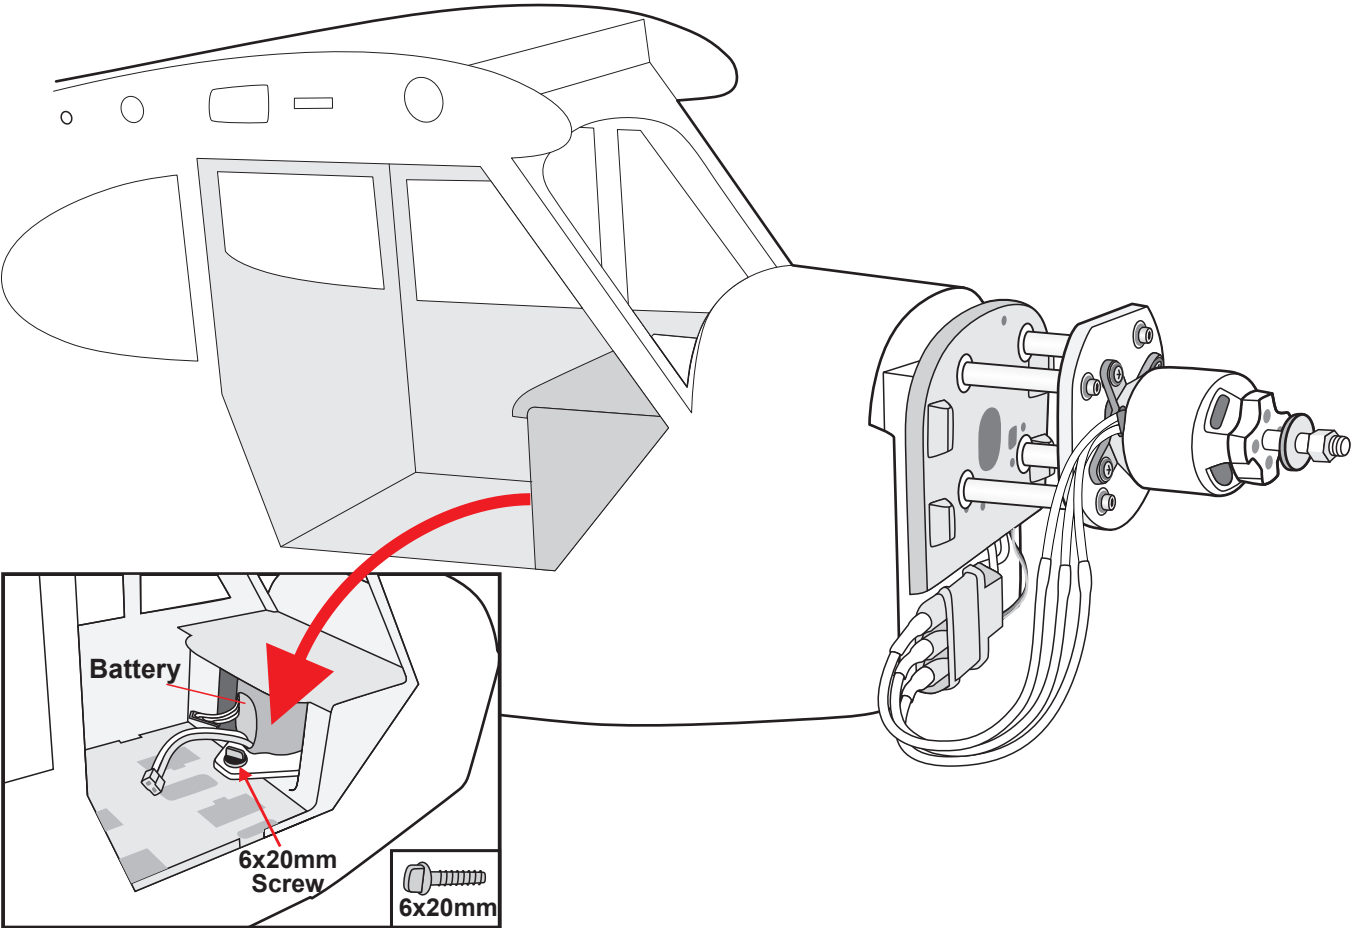



**INSTALLING COCKPIT FUSELAGE**

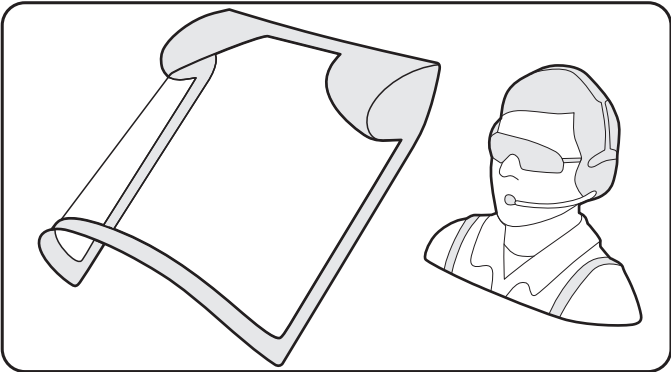



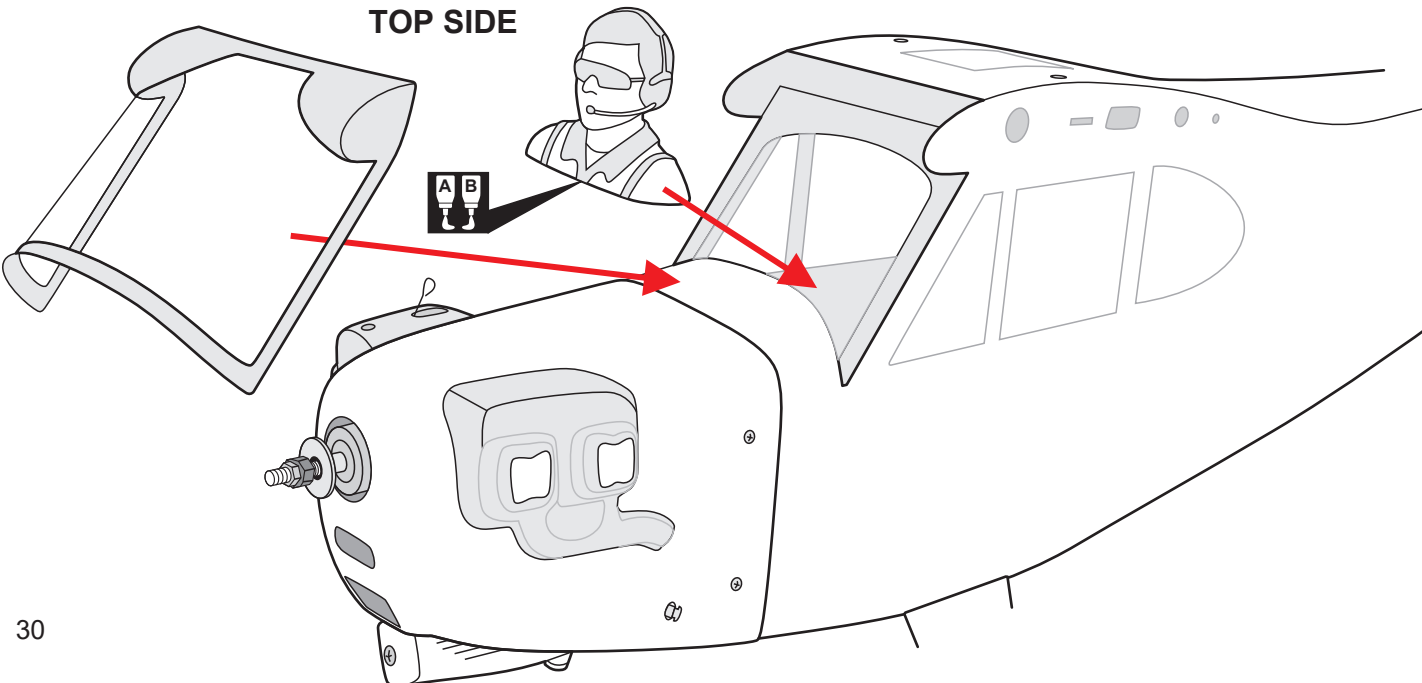

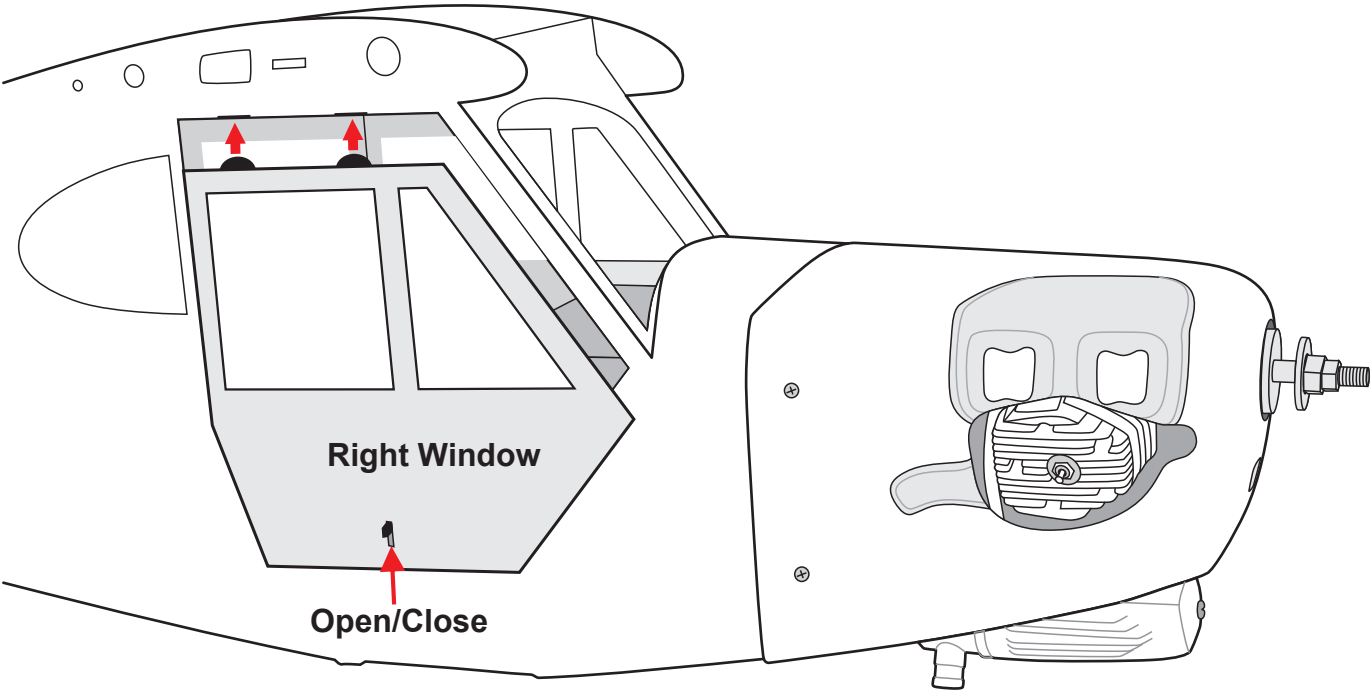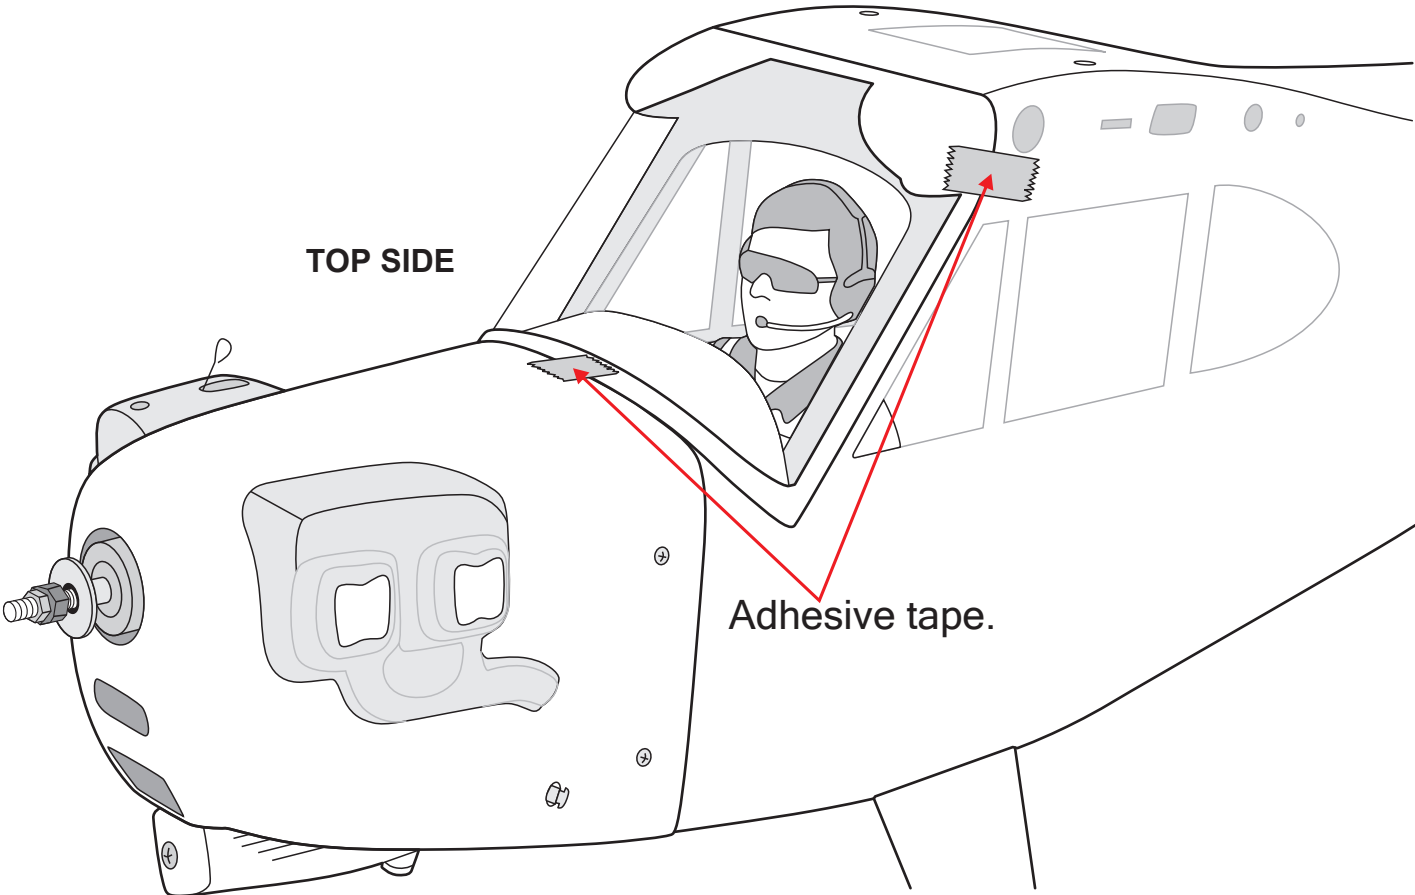

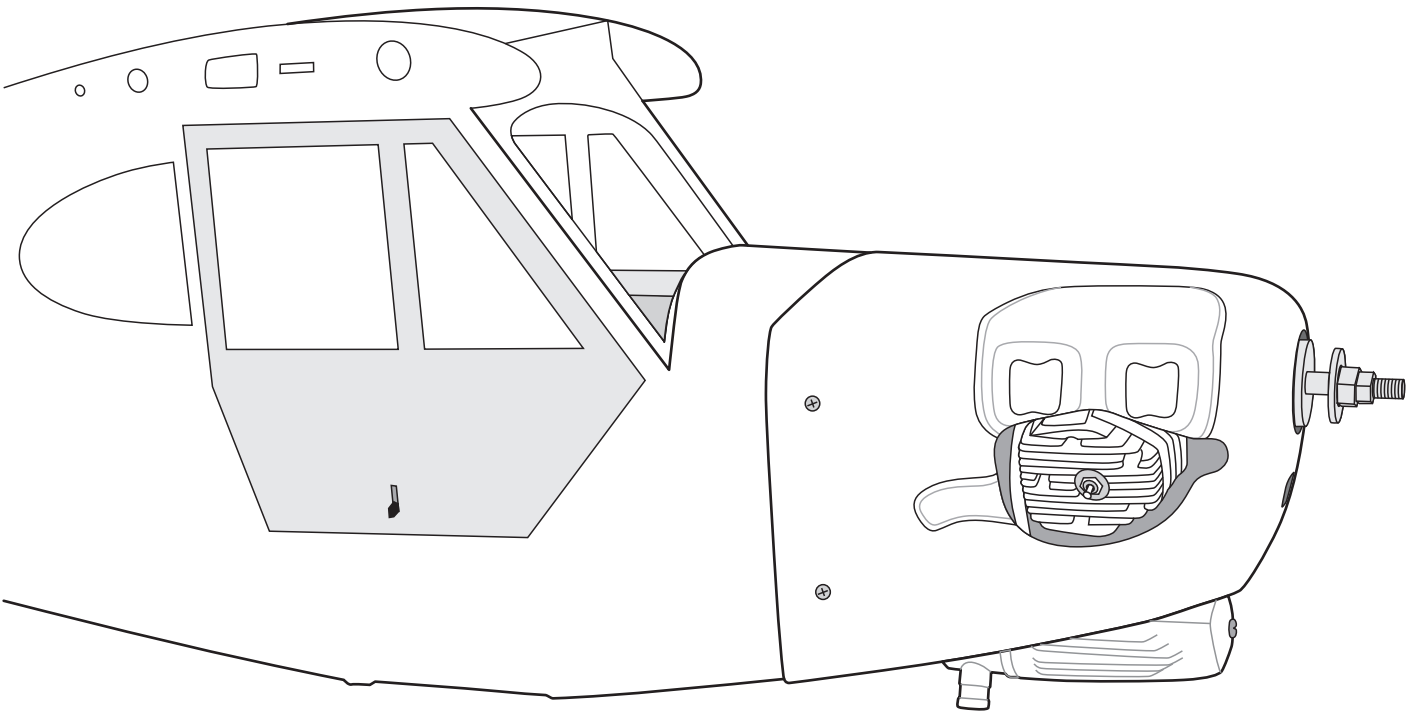


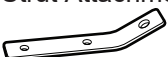
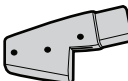




**TOP SIDE**









INSTALLING BALSA PLYWOOD WING STRUTS

<div>3x12mm Cap Screw</div> <div></div> <div>----- 8</div>	<div> Ball link ----- 4</div>	<div>Machined Strut Attachment</div> <div></div> <div>----- 4</div>	<div>3x6mm Button Head Cap Screw</div> <div></div> <div>--- 14</div>
<div>3mm Spring Washer</div> <div></div> <div>----- 4</div>	<div>3x15mm Tp Screw</div> <div></div> <div>----- 4</div>	<div>3mm Hex Nut</div> <div></div> <div>----- 8</div>	<div>Aluminium Strut Attachment</div> <div></div> <div>----- 2</div>
<div>Steel Strut Attachment Pin</div> <div></div> <div>----- 2</div>	<div>Aluminium Fuselage Strut Attachment</div> <div></div> <div>--- 2</div>	<div></div> <div>----- 2</div>	<div></div> <div>----- 2</div>
<div>Hair Pin</div> <div></div> <div>----- 2</div>		<div></div> <div>----- 4</div>	
<div>Aluminium wing strut set.</div> <div></div> <div>----- 4</div> <div>495mm</div>			

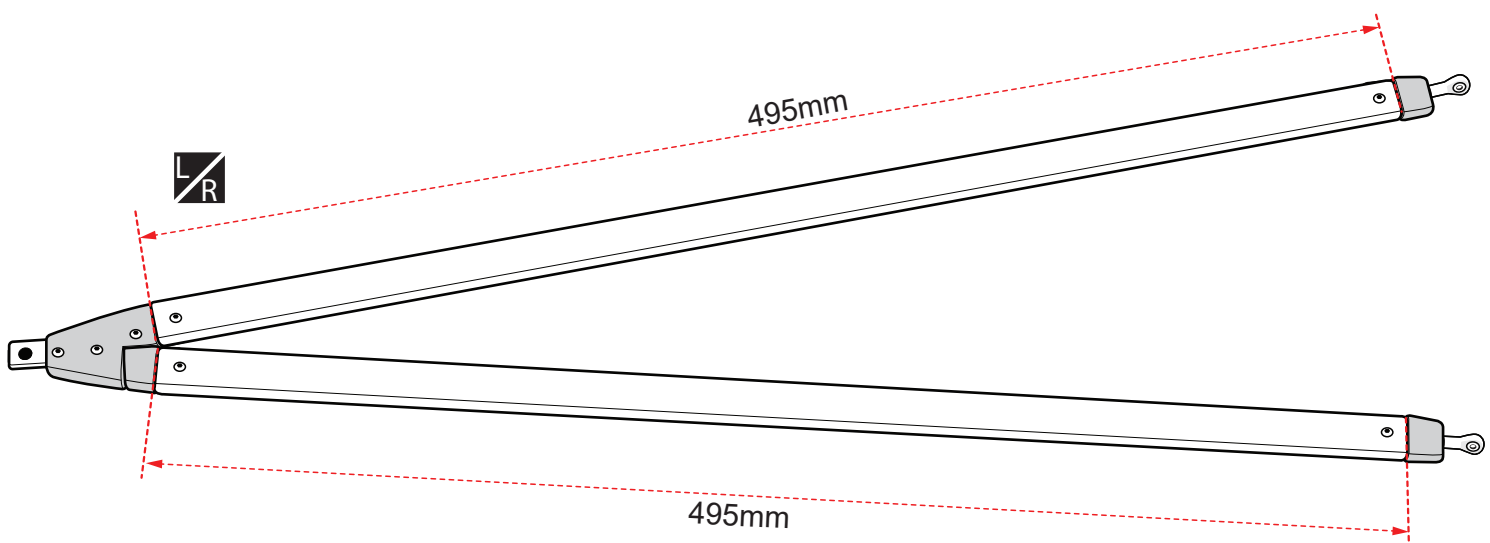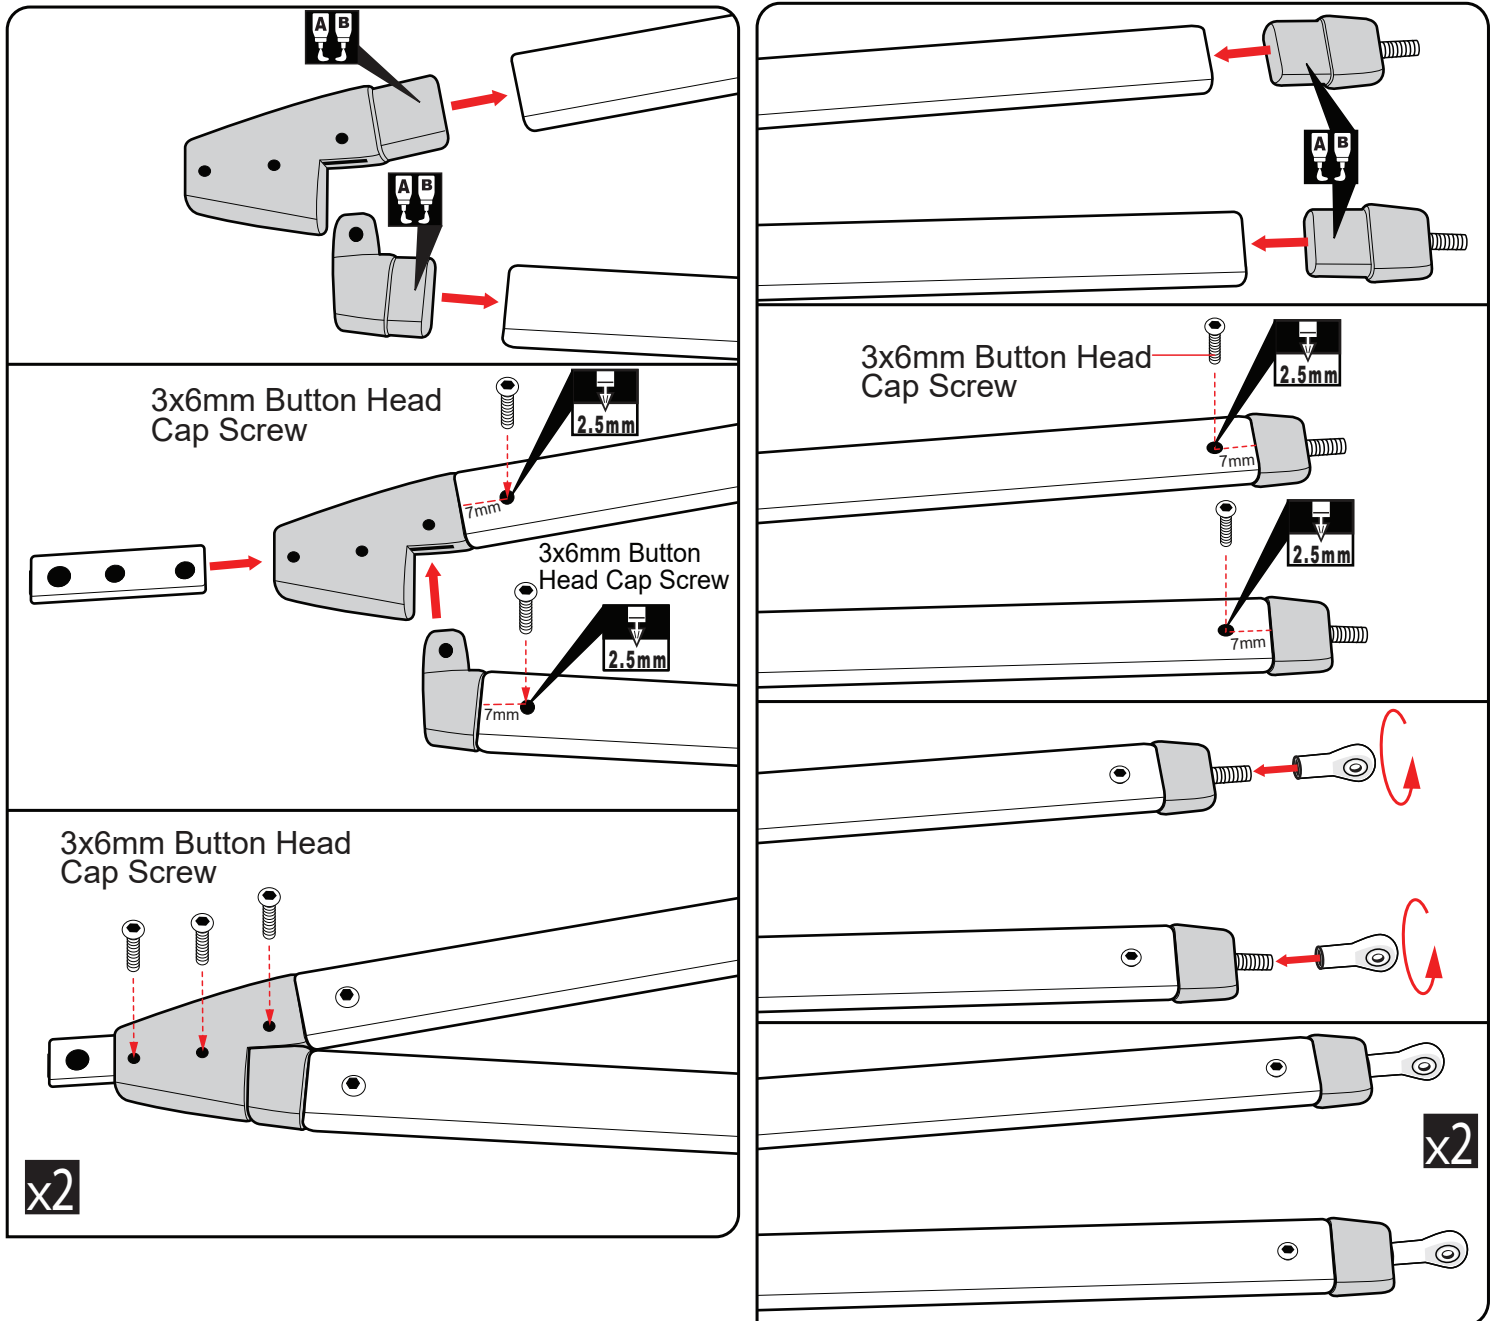

Apply epoxy glue.





Drill holes using the stated.  
(in this case 2.5mm Ø).




Assemble left and right  
sides the same way.



The number of times  
the same way Assembly  
(in this case twice).

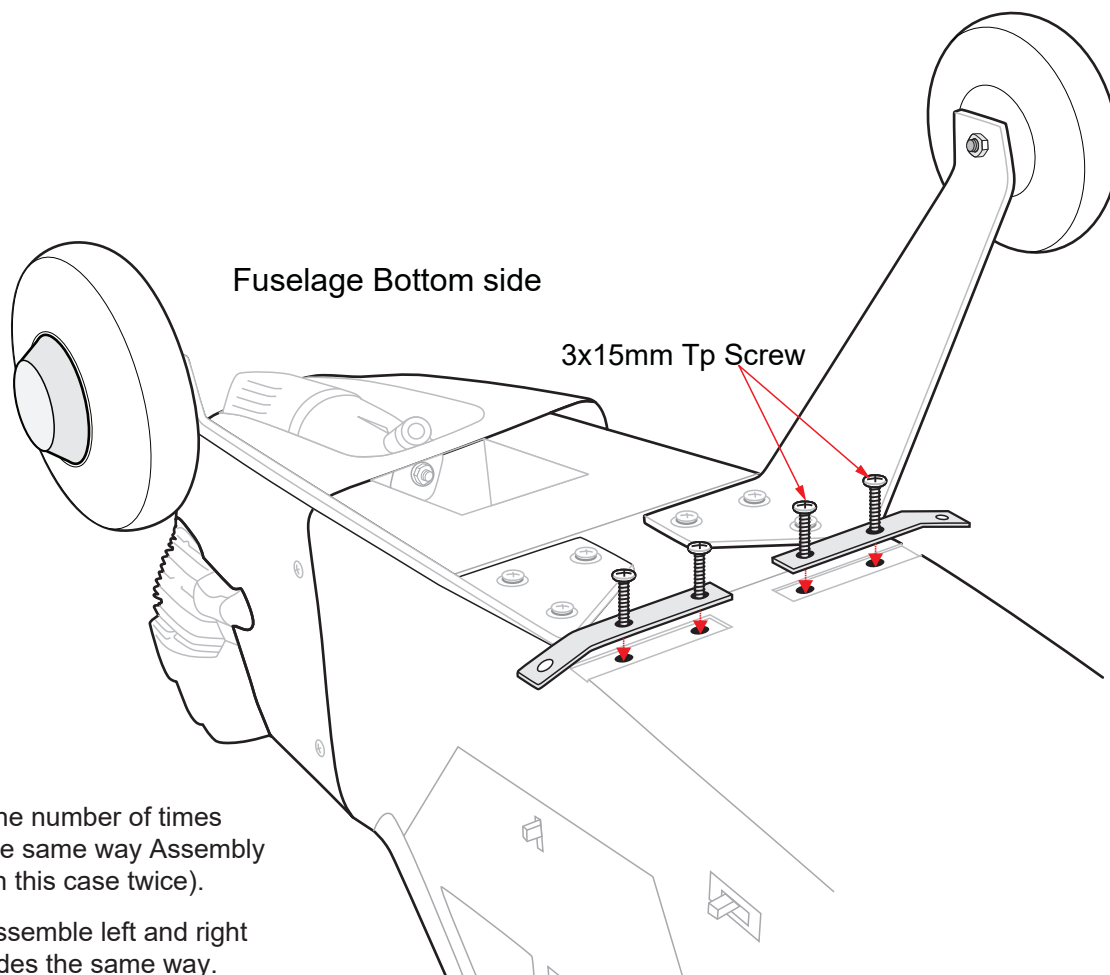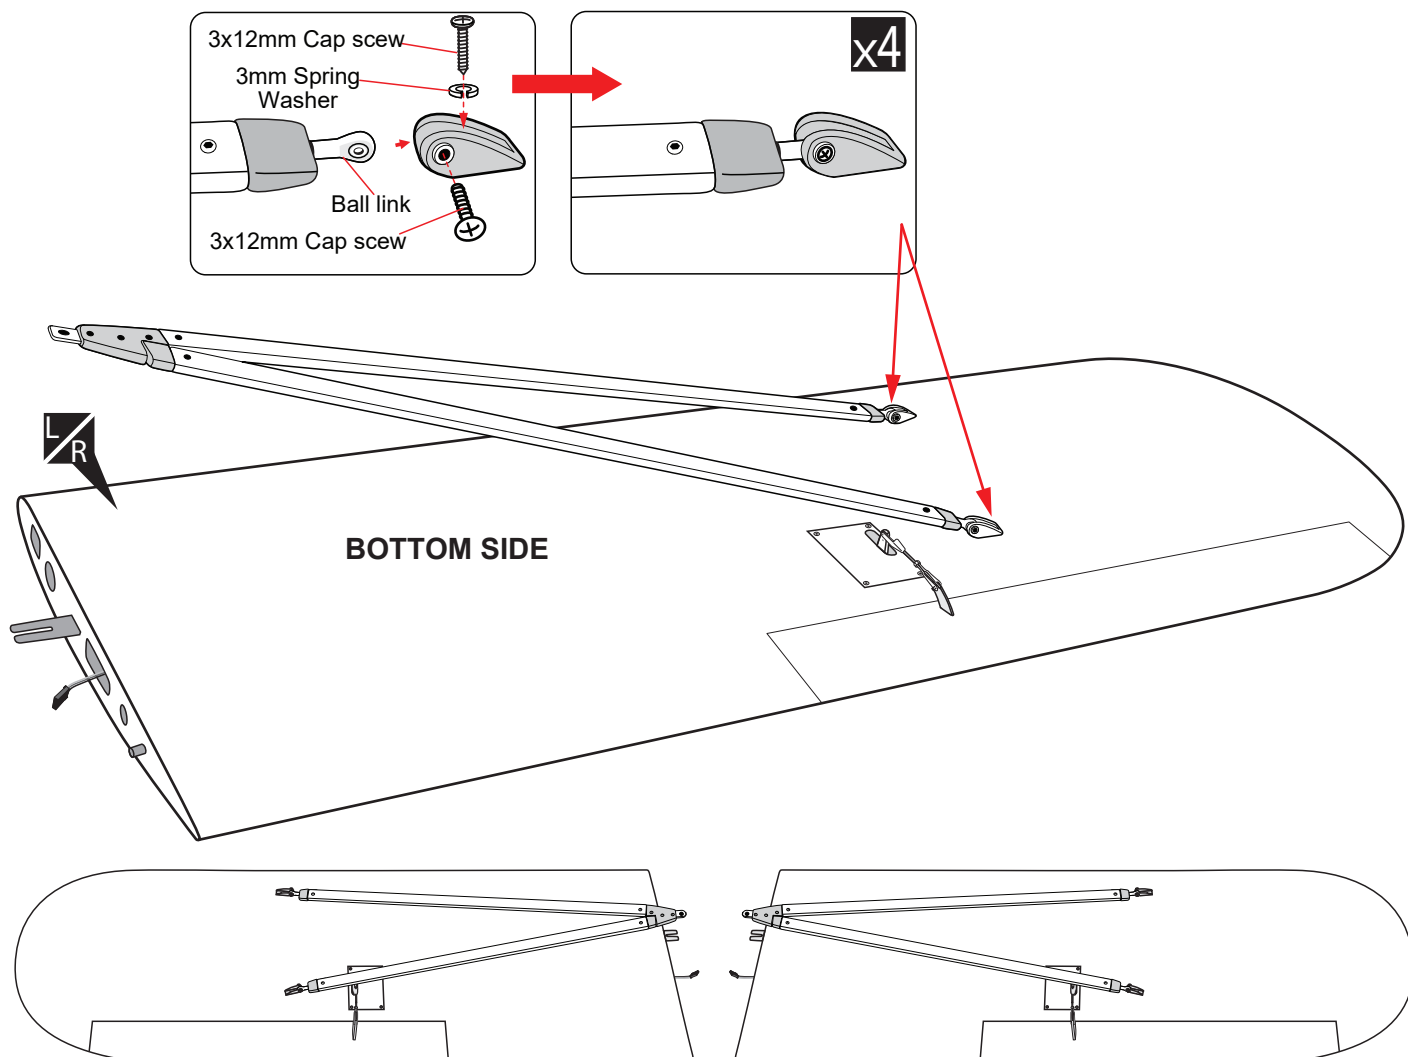


**x4** The number of times the same way Assembly (in this case twice).

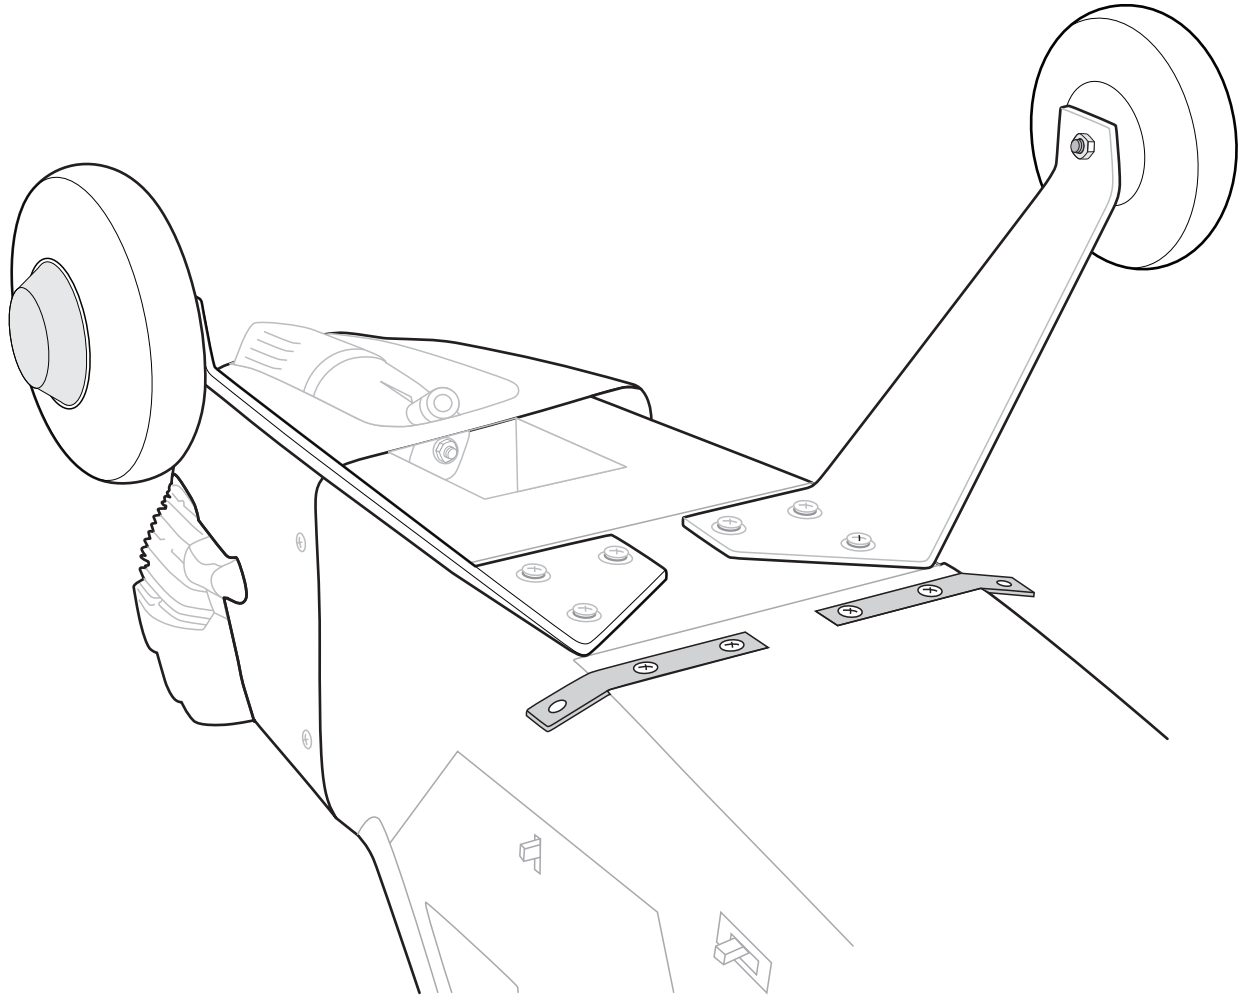

## INSTALLING THE WING TO THE FUSELAGE



Locate the aluminium wing dihedral brace.

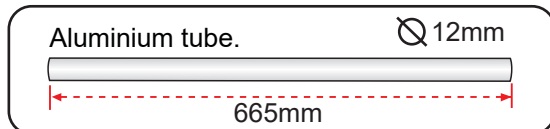




\*\*\* Test fit the aluminium tube dihedral brace into each wing haft. The brace should slide in easily. If not, use 220 grit sand around the edges and ends of the brace until it fits properly.

Insert the wing panel as pictures below

Attach the aluminium tube into the fuselage.

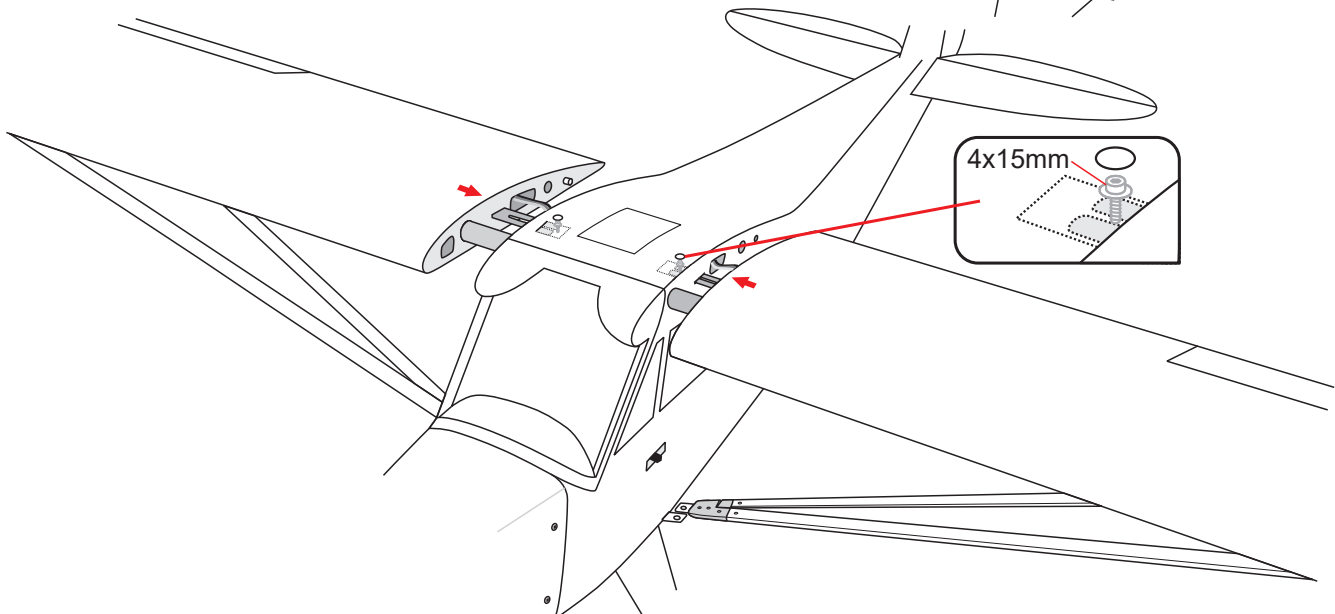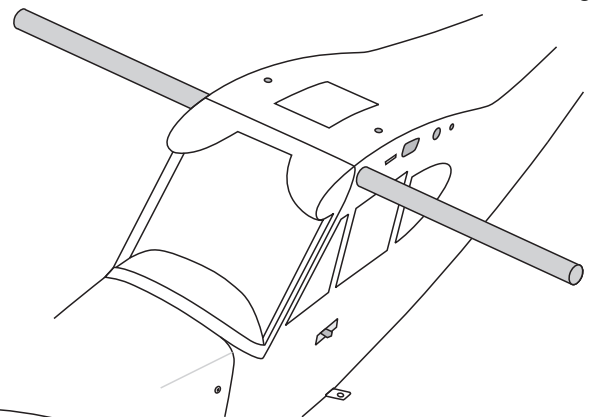

Screw the wing panel in position.

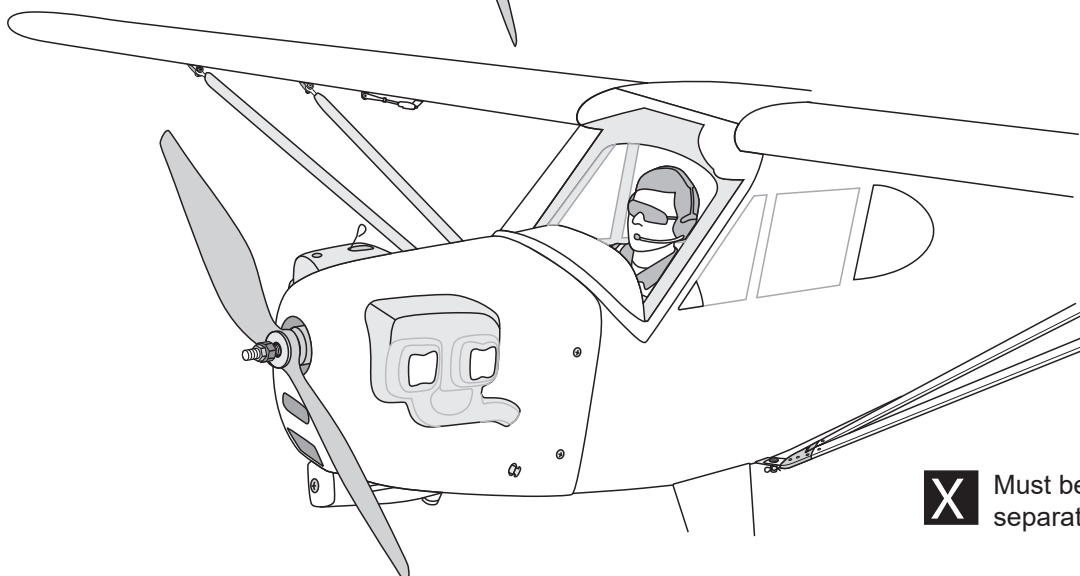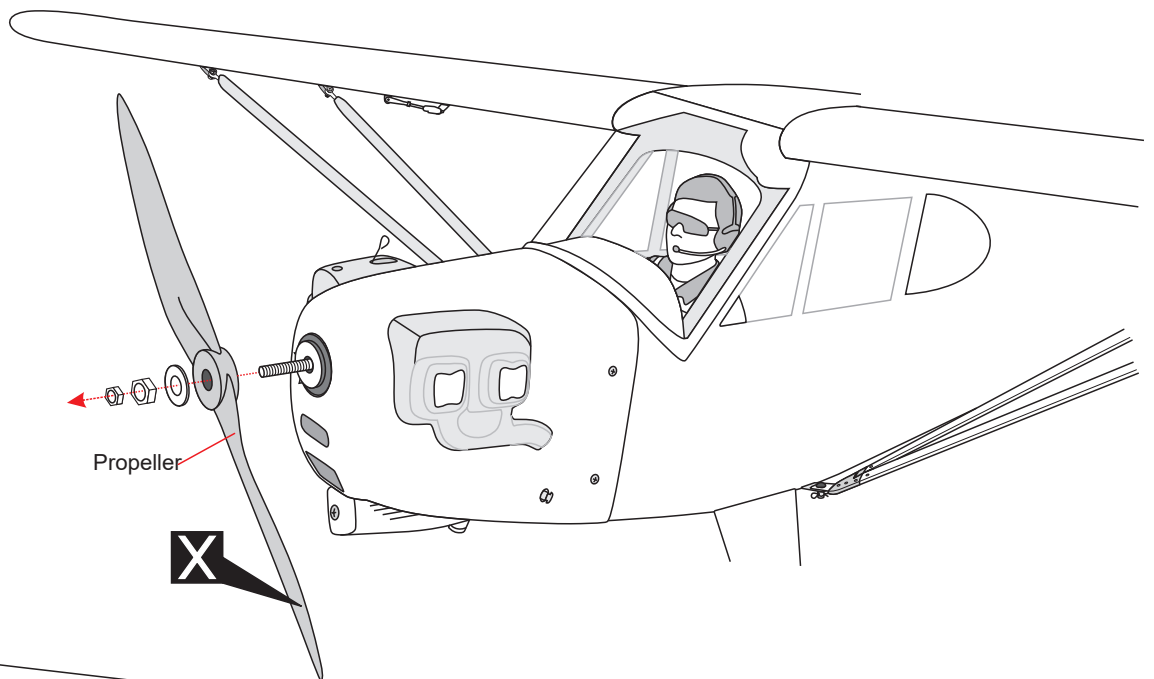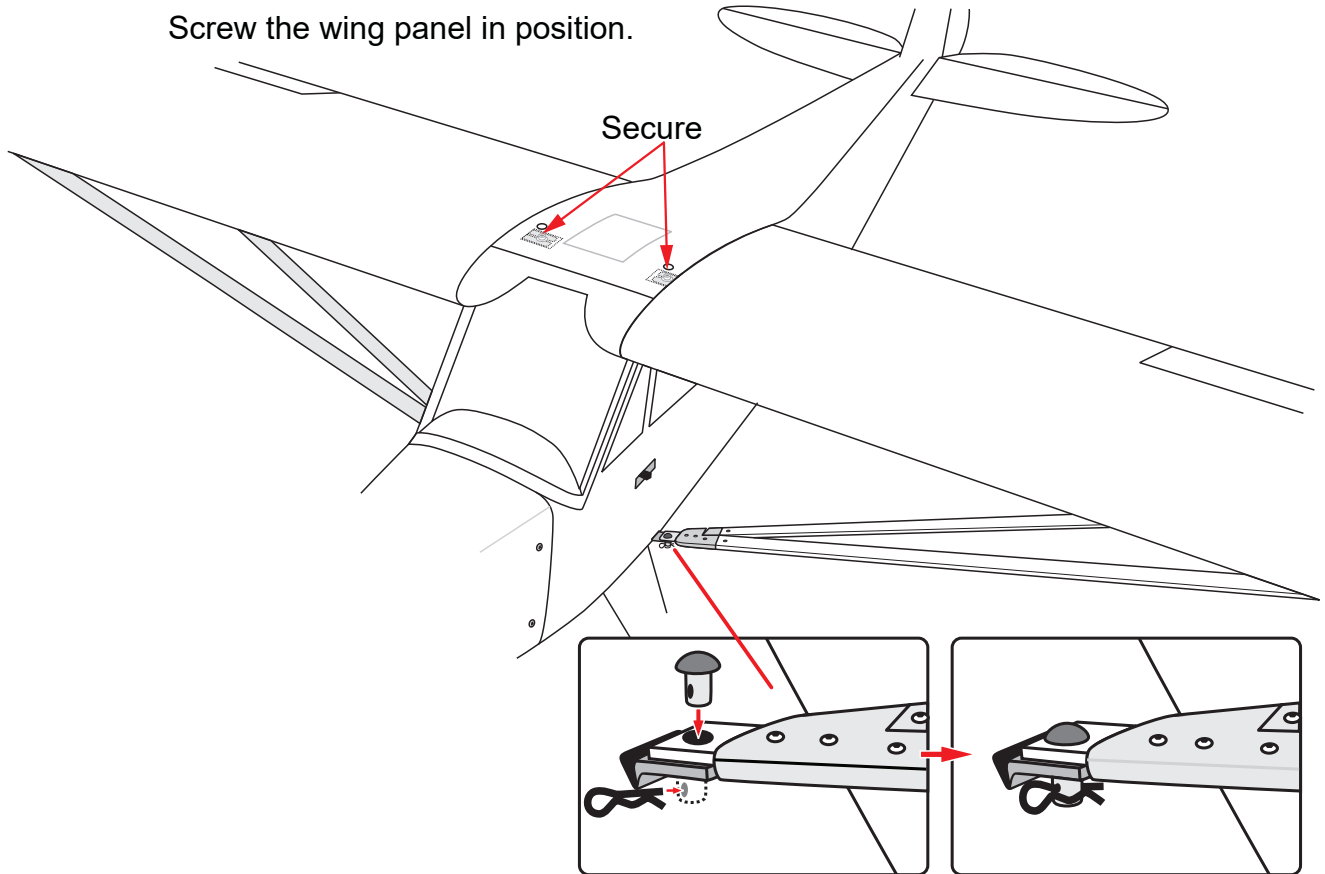

**X** Must be purchased separately!

## BALANCING


1) It is critical that your airplane be balanced correctly. Improper balance will cause your plane to lose control and crash.

THE CENTER OF GRAVITY IS LOCATED 77MM BACK FROM THE LEADING EDGE OF THE WING. AT THE FUSELAGE. BALANCE PLANE UPSIDE DOWN WITH THE FUEL TANK EMPTY.

2) Mount the wing to the fuselage. Using a couple of pieces of masking tape, place them on the top side of the wing 77mm back from the leading edge, at the fuselage sides.

3) Turn the airplane upside down. Place your fingers on the masking tape and carefully lift the plane.

4) If the nose of the plane falls, the plane is nose heavy. To correct this first move the battery pack further back in the fuselage. If this is not possible or does not correct it, stick small amounts of lead weight on the fuselage under the horizontal stabilizer. If the tail of the plane falls, the plane is tail heavy. To correct this, move the battery and receiver forward or if this is not possible, stick weight into the firewall. When balanced correctly, the airplane should sit level or slightly nose down when you lift it up with your fingers.

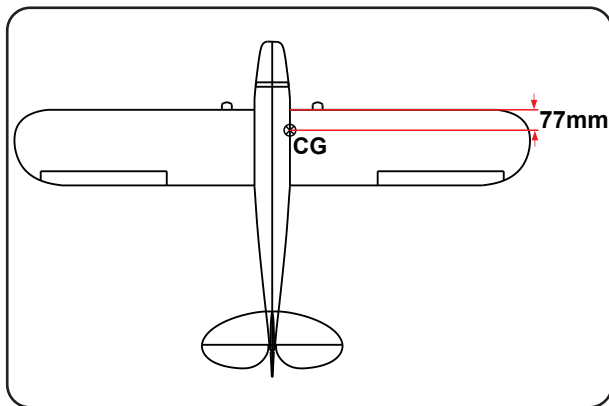

## LATERAL BALANCE



*After you have balanced a plane on the C.G. You should laterally balance it. Doing this will help the airplane track straighter*

1) Turn the airplane upside down. Attach one loop of heavy string to the engine crankshaft and one to the tail wheel wire. With the wings level, carefully lift the airplane by the string. This may require two people to make it easier.

2) If one side of the wing falls, that side is heavier than the opposite. Add small amounts of lead weight to the bottom side of the lighter wing half's wing tip. Follow this procedure until the wing stays level when you lift the airplane.

## CONTROL THROWS

1) We highly recommend setting up a plane using the control throws listed.

2) The control throws should be measured at the widest point of each control surface.


3) Check to be sure the control surfaces move in the correct directions.

### Low rate:

- **Aileron:** 8 mm up 8 mm down
- **Elevator:** 10mm up 10mm down
- **Rudder:** 30mm right 30 mm left

### High rate:

- **Aileron:** 14 mm up 14 mm down
- **Elevator:** 14mm up 14mm down
- **Rudder:** 40mm right 40 mm left

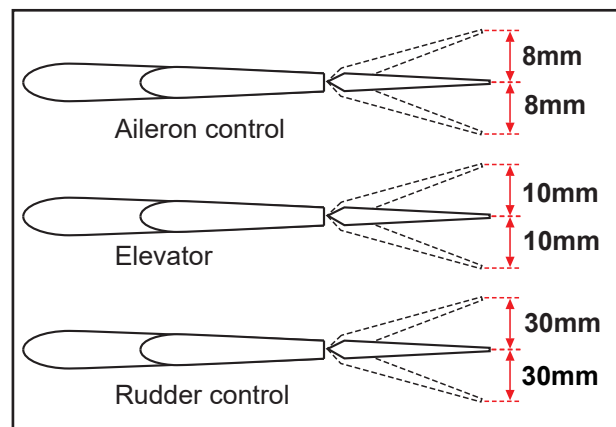

## PRE-FLIGHT CHECK

1) Completely charge your transmitter and receiver batteries before your first day of flying.

2) Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.

3) Double check the balance of the airplane.

4) Check the control surface.


5) Check the receiver antenna. It should be fully extended and not coiled up inside the fuselage.

6) Properly balance the propeller.


## FOR YOUR RADIO INSTALLATION BASIC CONNECTION FOR AIRPLANE AND ADJUSTMENT OF SERVOS

Example of connection

- For more information, refer to radio system instruction manual.
- Follow instruction manual of Engine and Battery.

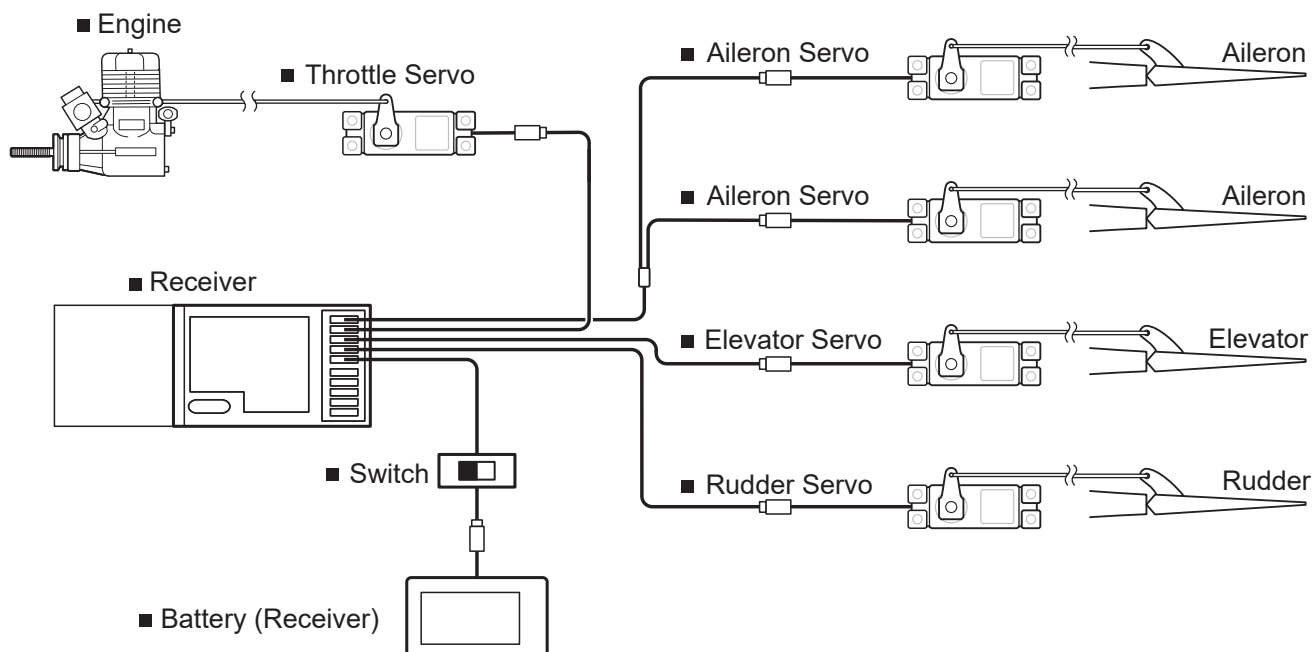


### MAIN GEAR DIMENSIONAL DETAIL

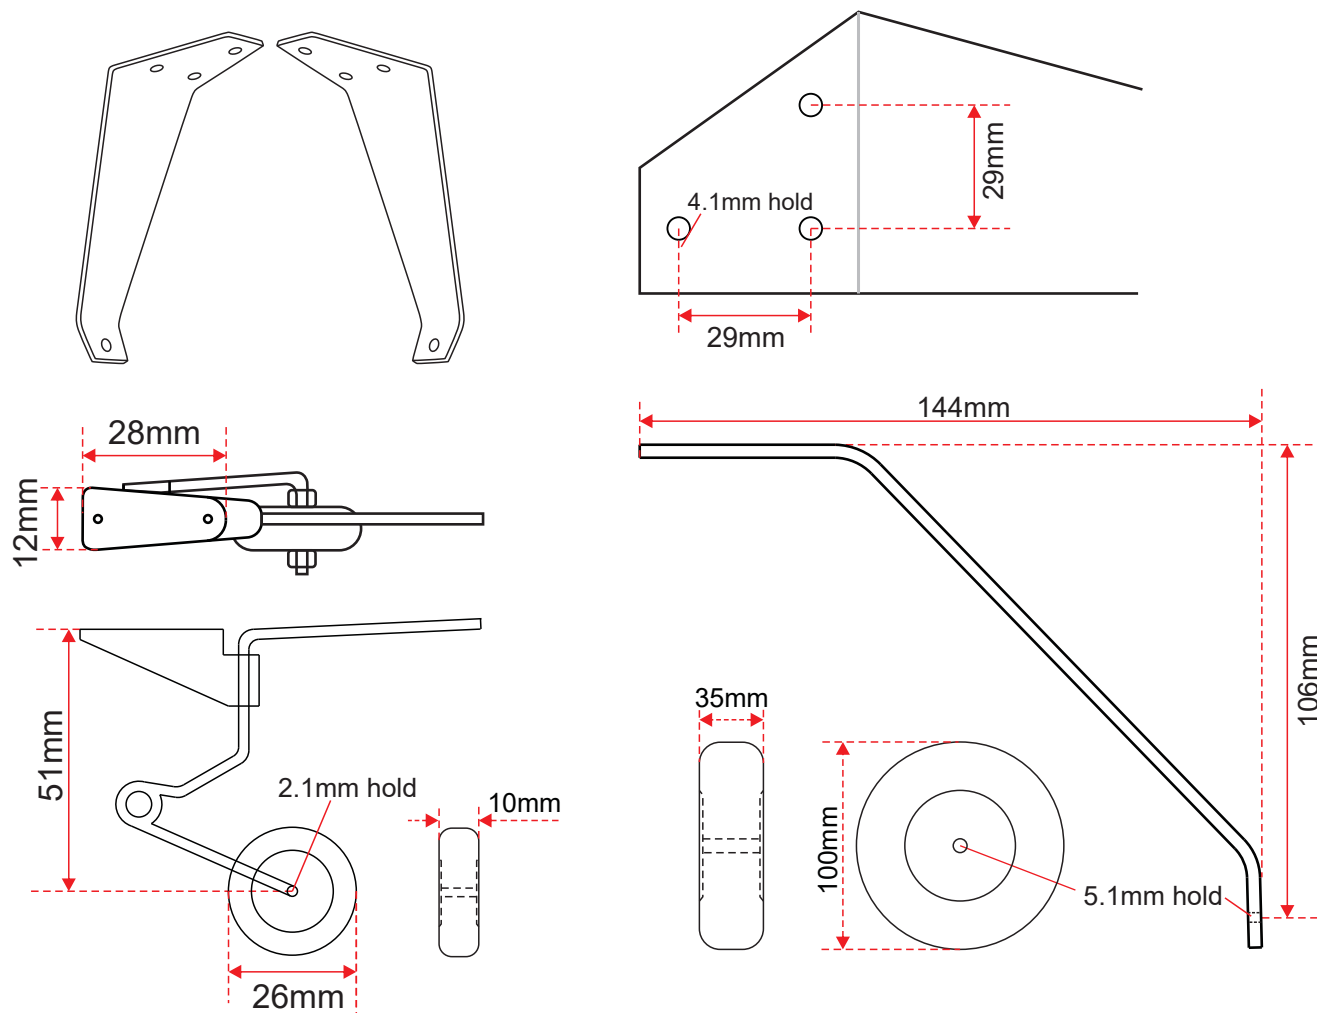


# DECORATION


Top view

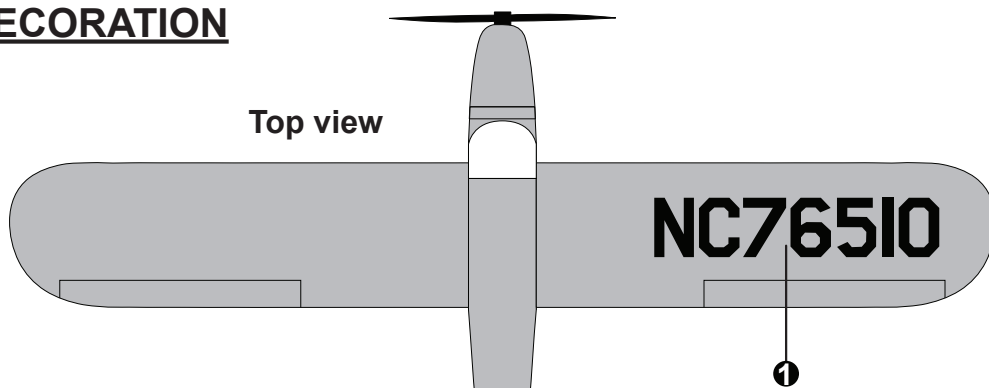


Bottom view

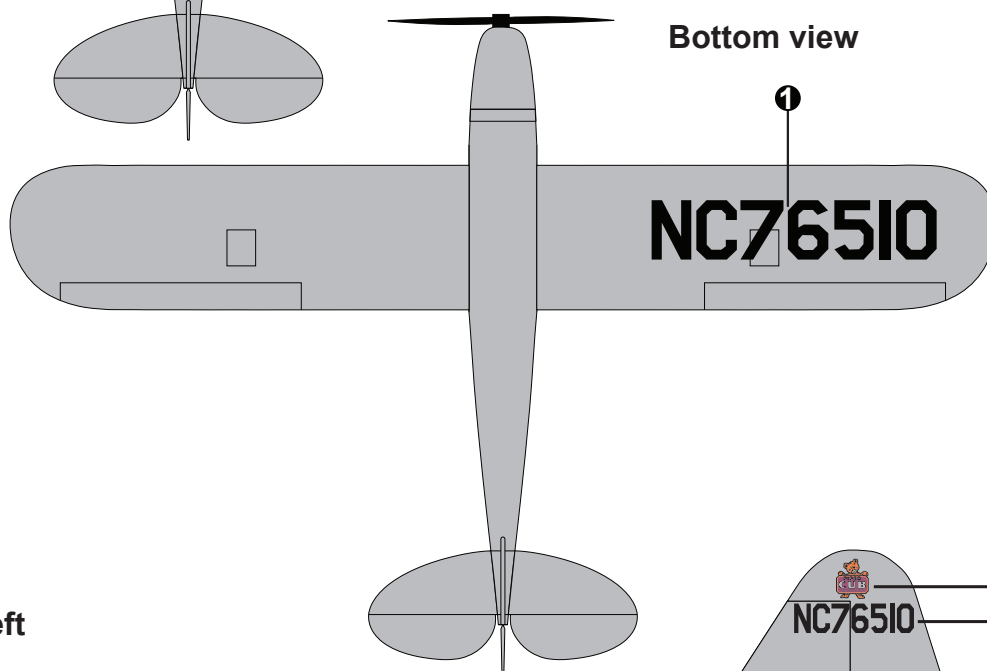

< Side view > Left

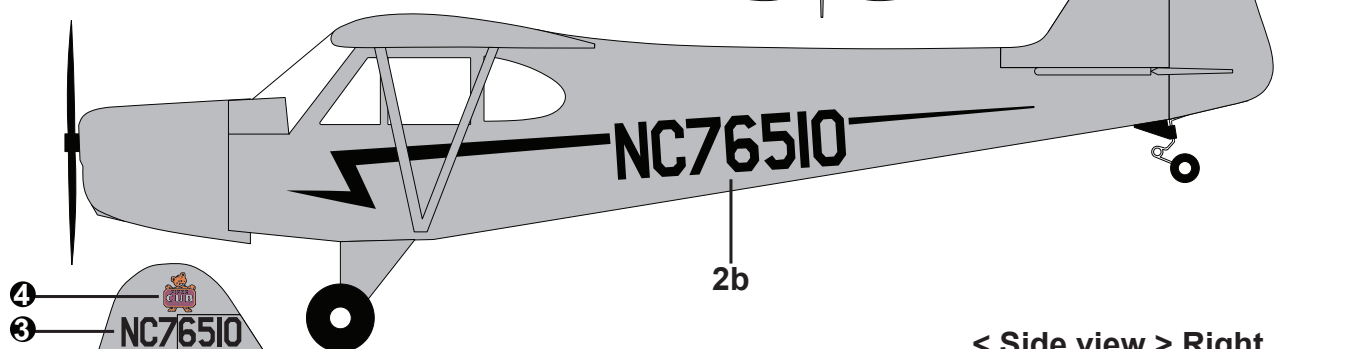

< Side view > Right

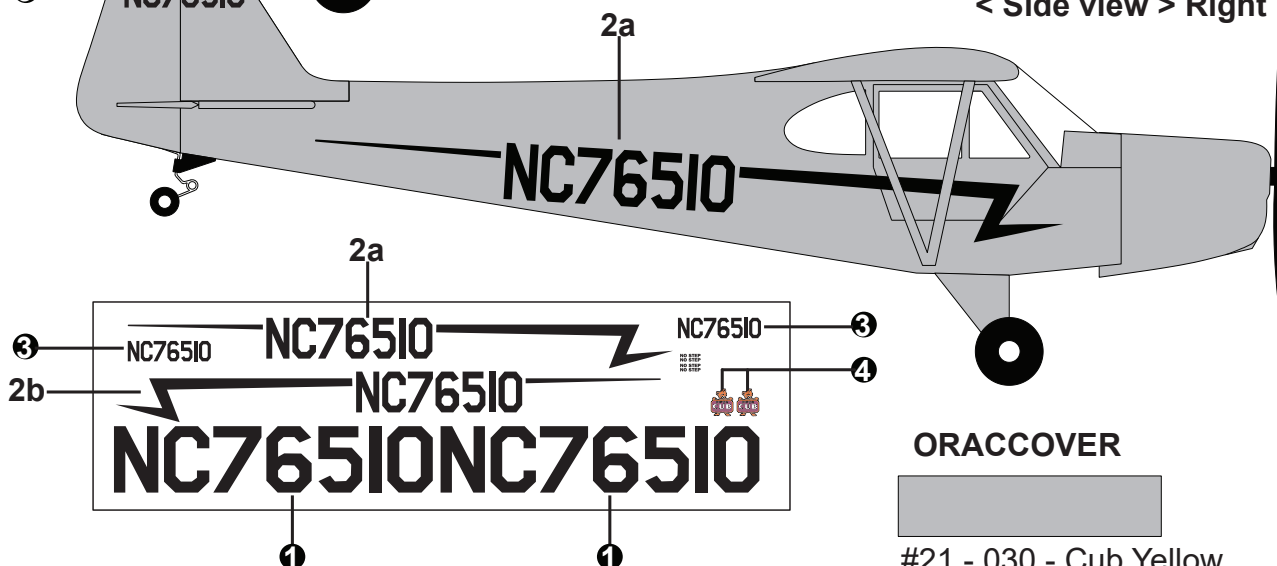


ORACCOVER




#21 - 030 - Cub Yellow




## I/C FLYING WARNINGS

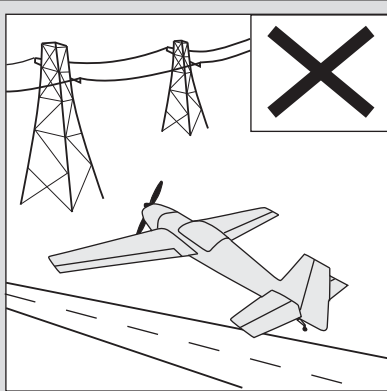


**NEVER** fly near power lines, aerials or other dangerous areas including airports, motorways etc.

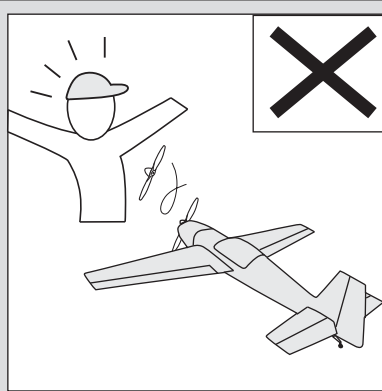


**ALWAYS** adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.

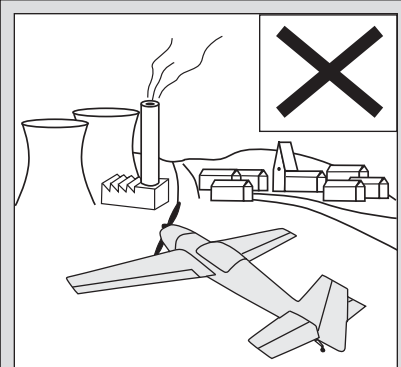


Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc. **NEVER** fly your aircraft close to people or built up areas.

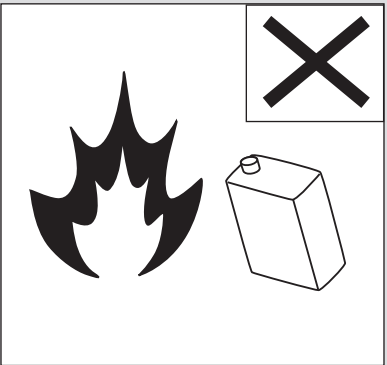


**DO NOT** dispose of empty fuel containers on a fire, this can lead to an explosion.

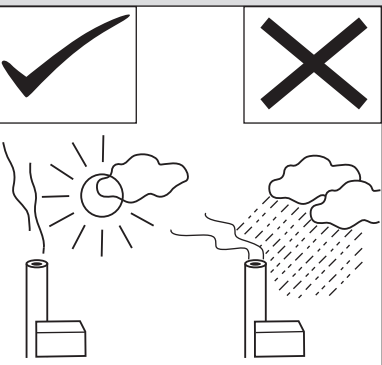


**NEVER** fly in wet conditions or on windy or stormy days.

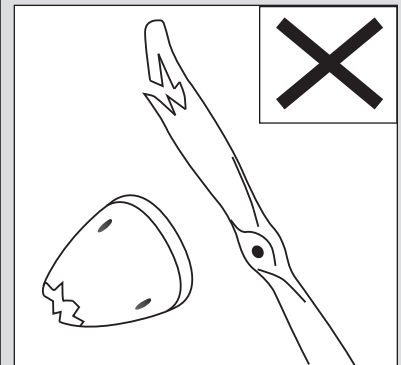

**NEVER** use damaged or deformed propellers or spinners.

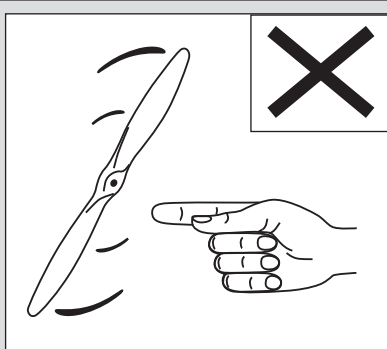


**THE PROPELLER IS DANGEROUS.** Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at **ALL** times.

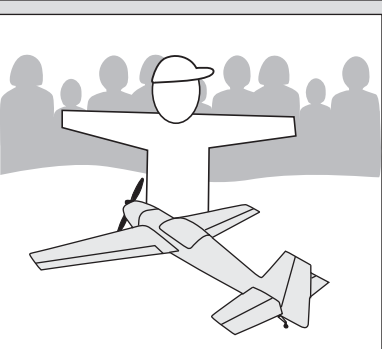


Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.


# I/C FLYING GUIDELINES

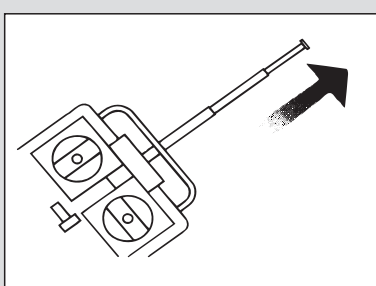


When ready to fly, first extend the transmitter aerial.

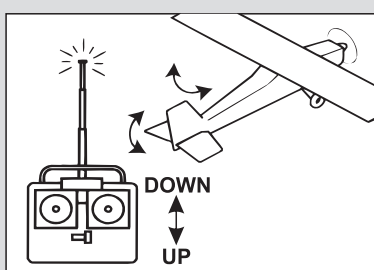


Operate the control sticks on the transmitter and check that the control surfaces move freely and in the CORRECT directions.

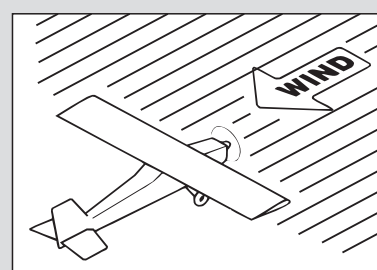


**ALWAYS** land the model **INTO** the wind, this ensures that the model lands at the slowest possible speed.

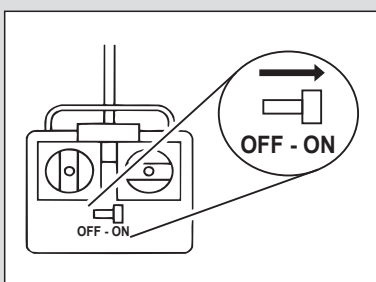


Switch on the transmitter.

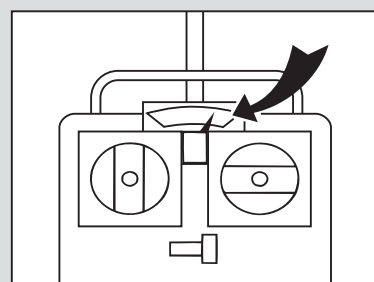


Check that the transmitter batteries have adequate power.

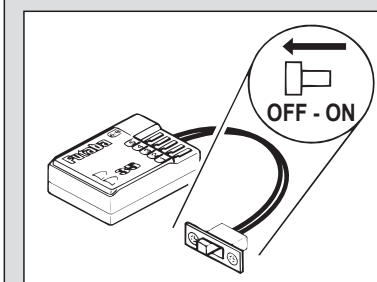


Switch off the receiver.

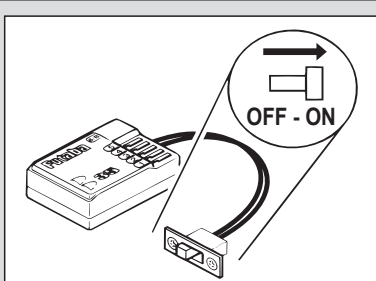


Switch on the receiver.

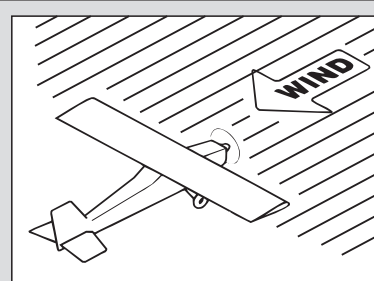


**ALWAYS** take off into the wind.

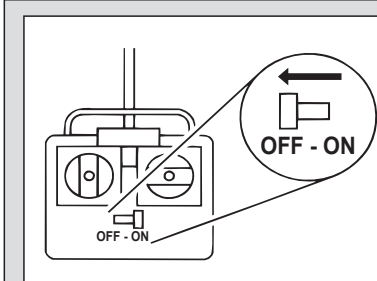


Switch off the transmitter

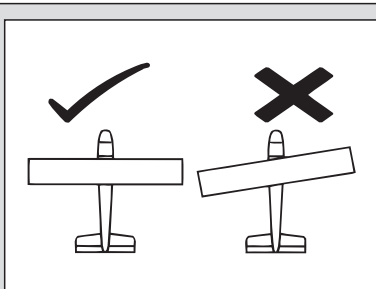

Check that the wings are correctly fitted to the fuselage.

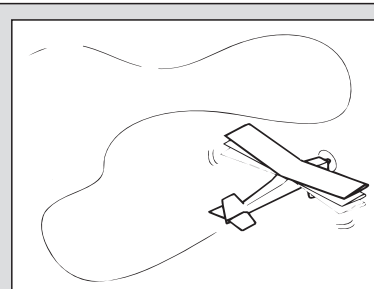

If the model does not respond correctly to the controls, land it as soon as possible and correct the fault

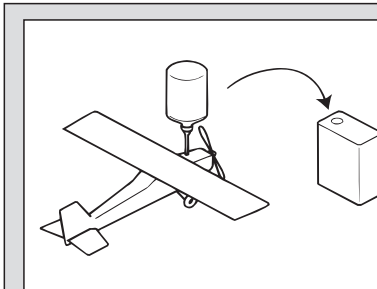

Empty the fuel tank after flying, fuel left in the tank can cause corrosion and lead to engine problems.